FILE NO.

SANYO

SERVICE MANUAL

Video Cassette Recorder

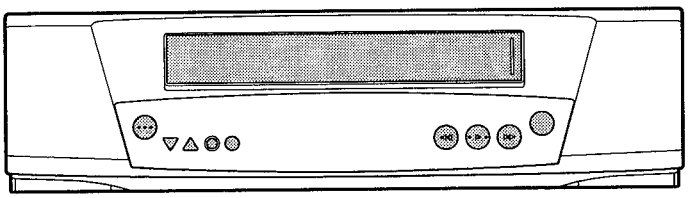

(VHR-279E, VHR-269SP, VHR-279SP,
VHR-249EX, VHR-279EV)

VHS
PAL

CONTENTS

1. DISASSEMBLY 5
2. ELECTRICAL ADJUSTMENT 9
3. TEST POINTS FOR TAPE PATH ADJUSTMENT 11
4. PARTS LIST
   MECHANISM PARTS 12
   CABINET & CHASSIS PARTS 14
   ELECTRICAL PARTS 15
   ACCESSORIES 21
   PACKING MATERIALS 22

CIRCUIT DIAGRAMS (Refer to the separate volume)

VHR-279E
(Product Code : 143 179 02)

VHR-289E
(Product Code : 143 179 03)
(U.K.)

VHR-269SP
(Product Code : 143 179 05)

VHR-279SP
(Product Code : 143 179 04)
(Spain)

VHR-249EX
(Product Code : 143 179 12)
(Spain)
(Portugal)

VHR-279EV
(Product Code : 143 179 22)
(Europe)

Please see other materials with Reference number given in table below.

Materials	Model No.	Reference No.
Mechanism Manual	VC Mechanism	MM531683

PRODUCT SAFETY NOTICE

The components designated by a symbol (⚠) in this schematic diagram designates components whose value are of special significance to product safety. Should any component designated by a symbol need to be replaced, use only the part designated in the parts List. Do not deviate from the resistance, wattage, and voltage ratings shown.

NOTE: 1. Parts order must contain model number, part number, and description.
2. Substitute parts may be supplied as the service parts.
3. N.S.P. : Not available as service parts.

Design and specifications are subject to change without notice.

SELF-DIAGNOSIS DISPLAY

Mechanism Mode Display / Head Output Drop Warning Display

This unit displays the diagnosis contents of abnormalities and the mechanism mode on its display panel in 2-digit numbers.
When the head playback output has dropped, the "L" sign will be blinked.
These display shows the outline of the problems. Use it as a reference when servicing the unit.

1. Self-Diagnosis Contents and Mechanism Mode Display

- When the STOP button on the remote control is pressed for about 10 seconds continuously, the self-diagnosis number will be displayed on the reception channel display of the display panel and number indicating the failed mechanism mode (changed mode when being shifted) on the tape counter "seconds" display for 10 seconds each.
- During self-diagnosis display, displays other than the diagnosis number/mechanism mode number will be turned off and when displays end, the normal display will be returned automatically.
- Refer to "Self-Diagnosis Contents" for the self-diagnosis numbers and the "Mechanism Mode Display Contents" for the mechanism mode numbers.
- When the "0" button on the remote control unit is pressed during display, and clearing the self-diagnosis display and mechanism mode display.

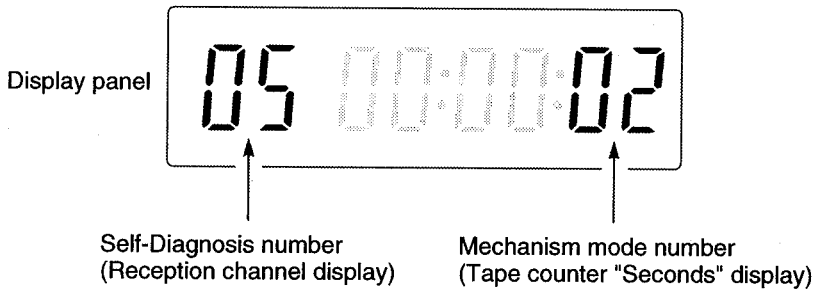

Self-Diagnosis Contents

No.	Problem	Main Possible Cause	Mechanism Operations and State After Occurrence
00	There is no abnormality in the mechanism.		
01	The cylinder motor does not rotate.	• The cylinder motor is faulty. • The control of the cylinder motor is faulty. • The tape winds around the cylinder.	Shifts to the STANDBY mode, and the power goes off.
02	The take-up reel or supply reel does not rotate.	• The take-up reel or supply reel is caught. • The reel belt is faulty. • The reel torque has decreased.	Shifts to the STANDBY mode, and the power goes off.
03	The capstan motor does not rotate.	• The capstan motor is faulty. • The control of the capstan motor is faulty.	Shifts to the STANDBY mode, and the power goes off.
04	The tape cannot be loaded with the cassette inserted. (But unloading can be performed.)	• Error in the operations of the tape loading mechanism. • Foreign particles in the tape loading mechanism. • The tape end sensor is faulty. • The reel brake of the tape cassette has not been released.	Unloads, shifts to the INITIAL mode, and the power goes off.
05	Tape loading and unloading cannot be performed with the cassette inserted.	• The tape guide is caught. • The loading motor is faulty. • The control of the loading motor is faulty.	The power is forcibly turned off with the mechanism at its current position.

No.	Problem	Main Possible Cause	Mechanism Operations and State After Occurrence
06	Front unloading cannot be performed when ejecting the cassette. (Front loading can be performed.)	• The cassette drive mechanism is faulty. • The front door is caught.	Front loads and shifts to the STOP or INITIAL mode. • When the power switch is turned on before eject operations: Shifts to the STOP mode. • When the power switch is turned off before eject operations: Shifts to the INITIAL mode and the power goes off.
07	Front loading and front unloading cannot be performed when ejecting the cassette.	• The tape cassette is caught in the cassette drive mechanism. • The main cam and front rack gear of the front loading mechanism have not engaged properly. • The gears of the front loading drive mechanism have not engaged properly.	The power is forcibly turned off with the mechanism at its current position.
08	The mechanism becomes 1 (REVIEW) while moving from 2 (IDLER), 3 (STILL), 4 (BRAKE), and to 5 (STOP).	• The mechanism mode switch contact is faulty.	The power is forcibly turned off with the mechanism at its current position.
09	The mechanism becomes 7 (INITIAL) while moving from 1 (REVIEW), 2 (IDLER), 3 (STILL), 4 (BRAKE), and to 5 (STOP).	• The mechanism mode switch contact is faulty.	Carries out tape take-up operations, shifts to the STANDBY mode, and the power goes off.
10	The capstan motor does not rotate and cassette tape eject when cassette tape insert.	• The capstan motor is faulty. • The control of the capstan motor is faulty.	Shifts to the EJECT mode. Protect cassette tape.
11	The cylinder motor does not rotate and cassette tape eject when cassette tape insert.	• The cylinder motor is faulty. • The control of the cylinder motor is faulty.	Shifts to the EJECT mode. Protect cassette tape.
12	The supply reel does not rotate and cassette tape eject when tape unloading.	• The supply reel is caught. • The reel belt is faulty. • The reel torque has decreased.	Shifts to the EJECT mode. Protect cassette tape.

Note: For details of mechanism operations corresponding to the mechanism positions of the self-diagnosis numbers 08 and 09 above, refer to the separate volume on the VC mechanism manual. These manual reference numbers are shown in the cover.

Mechanism Mode Display Contents

Mode No.	Mechanism Mode	Mode No.	Mechanism Mode	Mode No.	Mechanism Mode
00	CASSETTE OUT	07	SLOW	14	FAST FORWARD
01	STANDBY	08	PLAY	15	REWIND
02	STOP	09	REC	16	VIDEO INSERT
03	STILL	10	AUDIO DUBBING	17	VIDEO INSERT-PAUSE
04	REC-PAUSE	11	X2 SPEED PLAY	18	AUDIO/VIDEO INSERT
05	AUDIO DUBBING-PAUSE	12	CUE	19	REVERSE X2 SPEED PLAY
06	FRAME ADVANCE	13	REVIEW	99	OTHERS

2. Head Output Drop Warning Display

- When the STOP button on the remote control is pressed for 10 seconds continuously 10 seconds after play starts, "L" will be displayed blinking at the first digit of the minutes position on the tape counter when the head output is lower than the specified value to indicate an abnormality.
- The cause of the abnormality may be due to drop in the playback output caused by drop in the efficiency of the cassette used or head clogging. Refer to "Head Playback Output Voltage Check" as a means to judge the abnormality.

Display panel

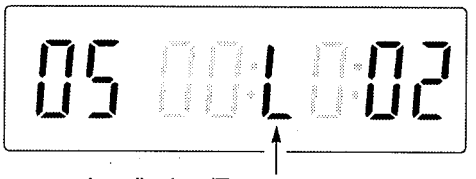

Head output drop warning display (Tape counter "1st digit of Minutes." position)

Head playback output voltage check

Cassette Used	Warning Display	Envelope Detection Output Voltage	Main Cause
Cassette with normal playback output	–	Envelope detection output (IC301 Pin 85 or C3016 HOT side: see Fig. 2-1-1) Switching pulse (TP183: see Fig. 2-1-1) 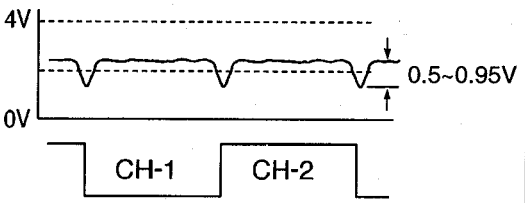	When the output voltage difference of the two channels is 0.5 to 0.95V • The video heads of both are normal
Recorded cassette (with tabs)	"L" blinking	Envelope detection output (IC301 Pin 85 or C3016 HOT side: see Fig. 2-1-1) Switching pulse (TP183: see Fig. 2-1-1) 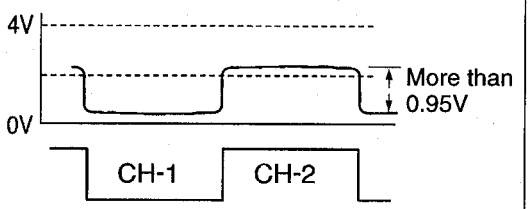	When the output voltage difference of the two channels is more than 0.95V • Tracking adjustment has not been performed accurately • One video head is clogged • One video head has worn out
	"L" blinking	Envelope detection output (IC301 Pin 85 or C3016 HOT side: see Fig. 2-1-1) Switching pulse (TP183: see Fig. 2-1-1) 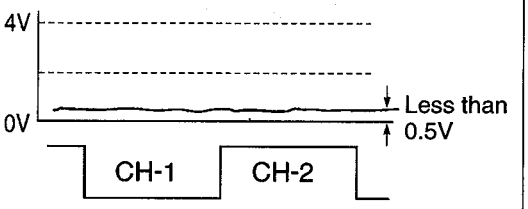	When the average outputvoltage of the two channels is less than 0.5V • Tracking adjustment has not been performed accurately • Both video heads are clogged • Both video heads have worn out
Rental cassette (without tabs)	"L" blinking	Envelope detection output (IC301 Pin 85 or C3016 HOT side: see Fig. 2-1-1) Switching pulse (TP183: see Fig. 2-1-1) 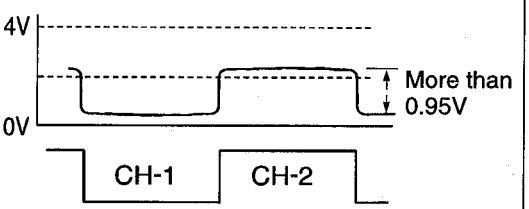	When the output voltage difference of the two channels is more than 0.95V • Tracking adjustment has not been performed accurately • One video head is clogged • One video head has worn out
	• Some rental cassettes may have extremely low video playback outputs even when both video heads are normal. As the average output voltage of the two heads may be less than 0.5V for some, no warning displays will be shown.		

1. DISASSEMBLY

1-1. REMOVAL OF CABINET, MECHANISM UNIT, AND MAIN BOARD

REMOVING THE CABINET PARTS (Fig. 1-1-1)

1. Remove the cabinet by removing the four screws (1).
2. Remove the front panel by removing the locks of the clamps (A) using a screwdriver, etc. and slightly rotating the bottom part in the direction of the arrow.

Notes: • Electrical adjustments for the this model can be performed with only the cabinet removed.

REMOVING THE MECHANISM MAIN UNIT AND THE CP-1 PWB ASSEMBLY (Fig. 1-1-2 and 1-1-3)

After removing the cabinet parts, remove the mechanism unit and the CP-1 PWB assembly connected as follows.

1. Remove the five screws (2) as shown in Fig. 1-1-2.
2. Remove the two screws (3) at the CP-1 board, and then disconnect the bottom cover.
3. Remove the two screws (4) and two screws (5) of the mechanism unit. The two screws (5) of the cassette tray can be removed easily by pushing the lid opener lever in the arrow direction to remove the lock as shown in the enlarge view.
4. Lift up the whole mechanism unit and main board (CP-1 PWB assembly), and as shown in Fig. 1-1-3, so that they can be removed from the chassis.

M-SE2L/E2-1

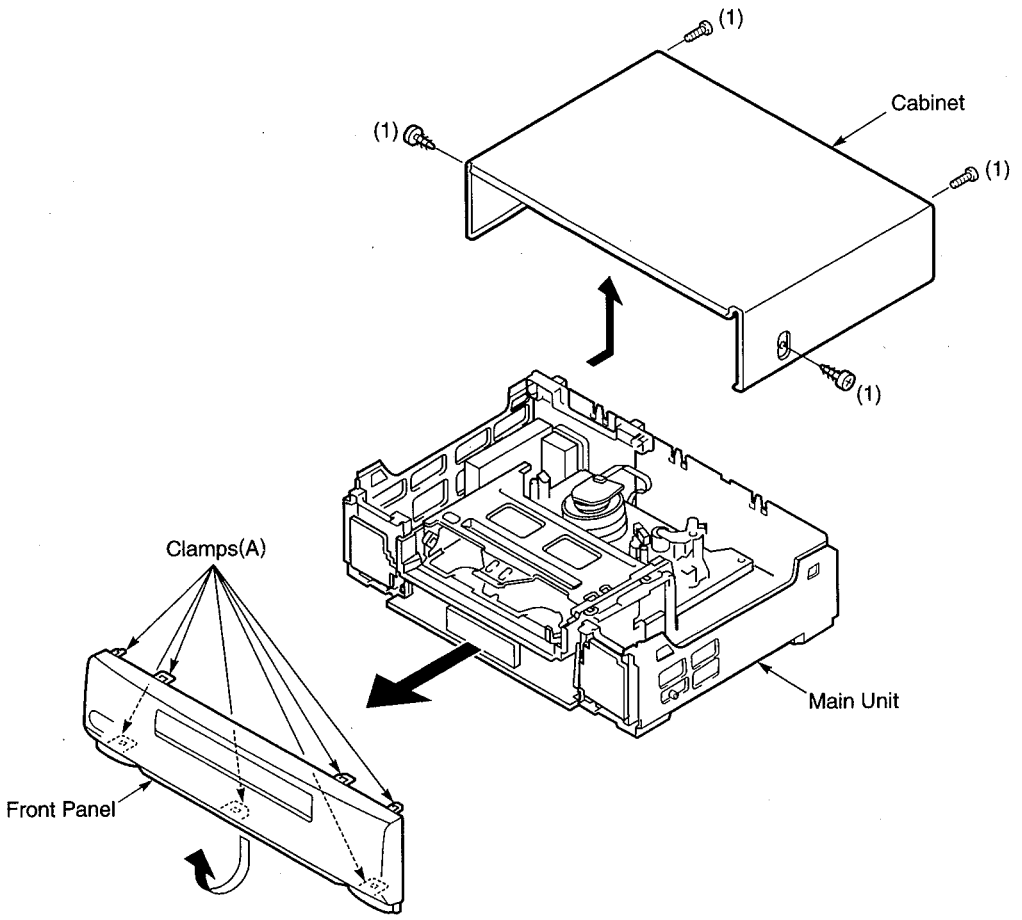

Fig. 1-1-1

M-SE2L/E2-2

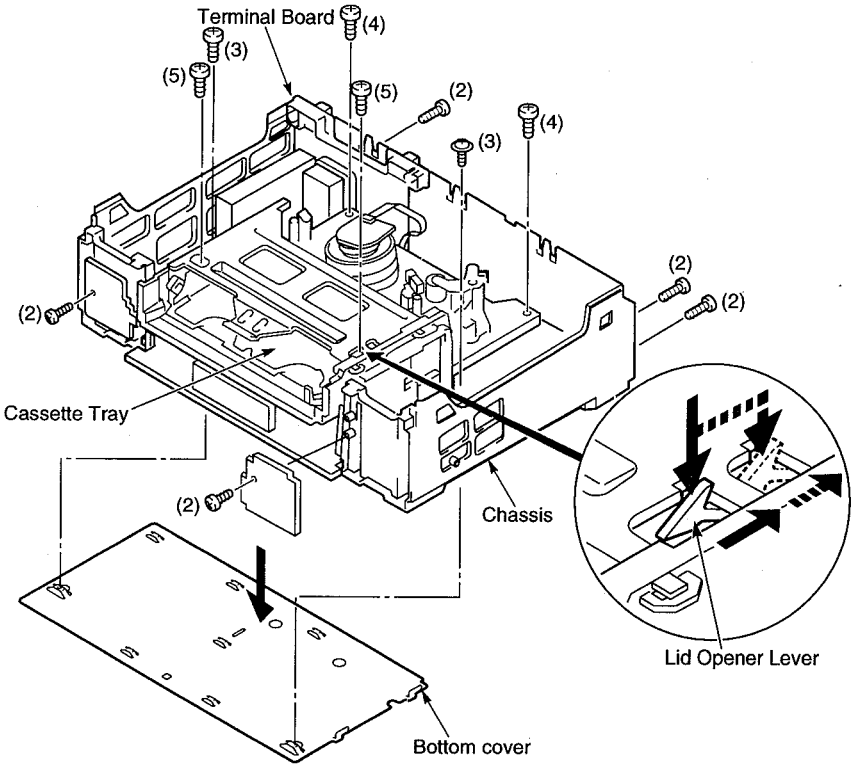

Fig. 1-1-2

M-SE2L/E2-3

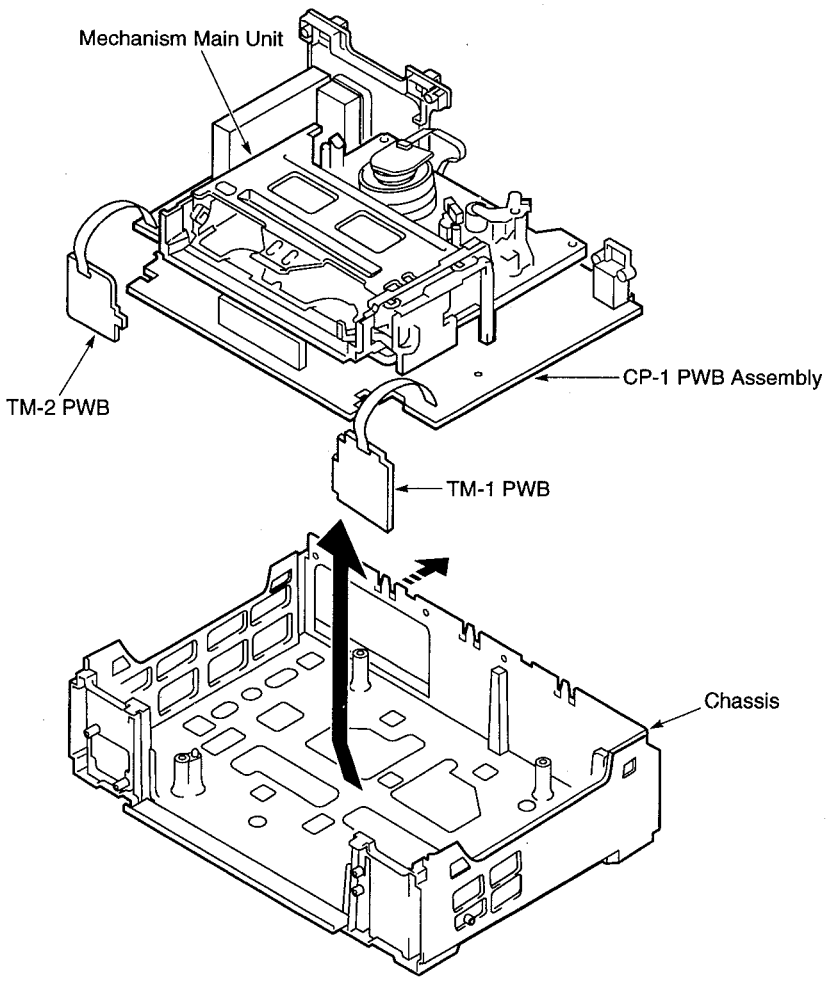

Fig. 1-1-3

1-2. TEMPORARILY SETTING UP AND CONNECTING CP-1 PWB ASSEMBLY

The following is an example of how to place and connect the main board without a jig, when repairing the CP-1 PWB assembly.

1. Place the mechanism unit and main board up side down as a whole on a flat surface with foil side of the main board facing up.
2. Operete the unit using the buttons on CP-1 PWB or the remote control.

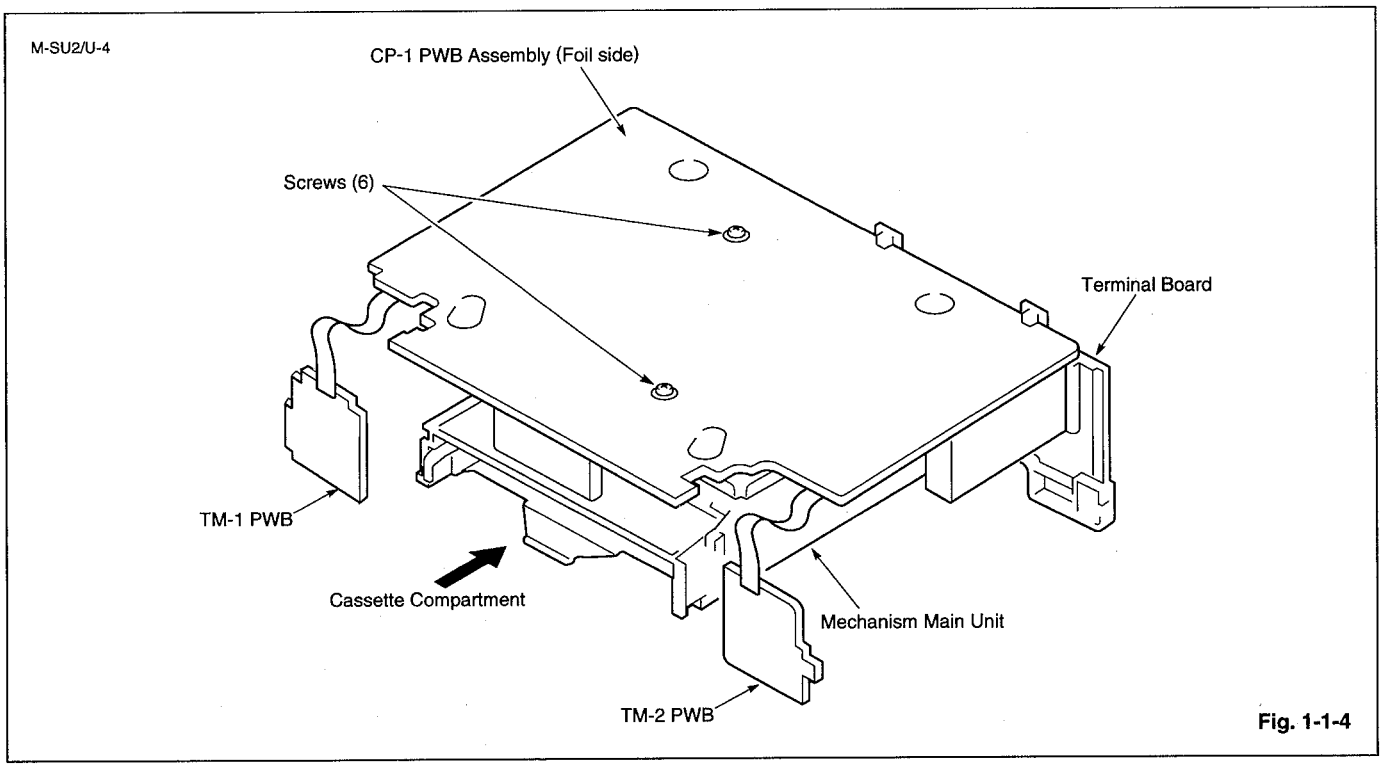

Fig. 1-1-4

1-3. INSTALLATION OF THE FRONT PANEL

When installing the front panel to the chassis after repaires and adjustments.

1. Pressing down the door opener lever of the mechanism main unit.
2. Set the cassette door to half-opened state as shown in Fig. 1-1-5, and install the front panel to the chassis.

Note: Opened cassette door position does not install the front panel to the chassis.

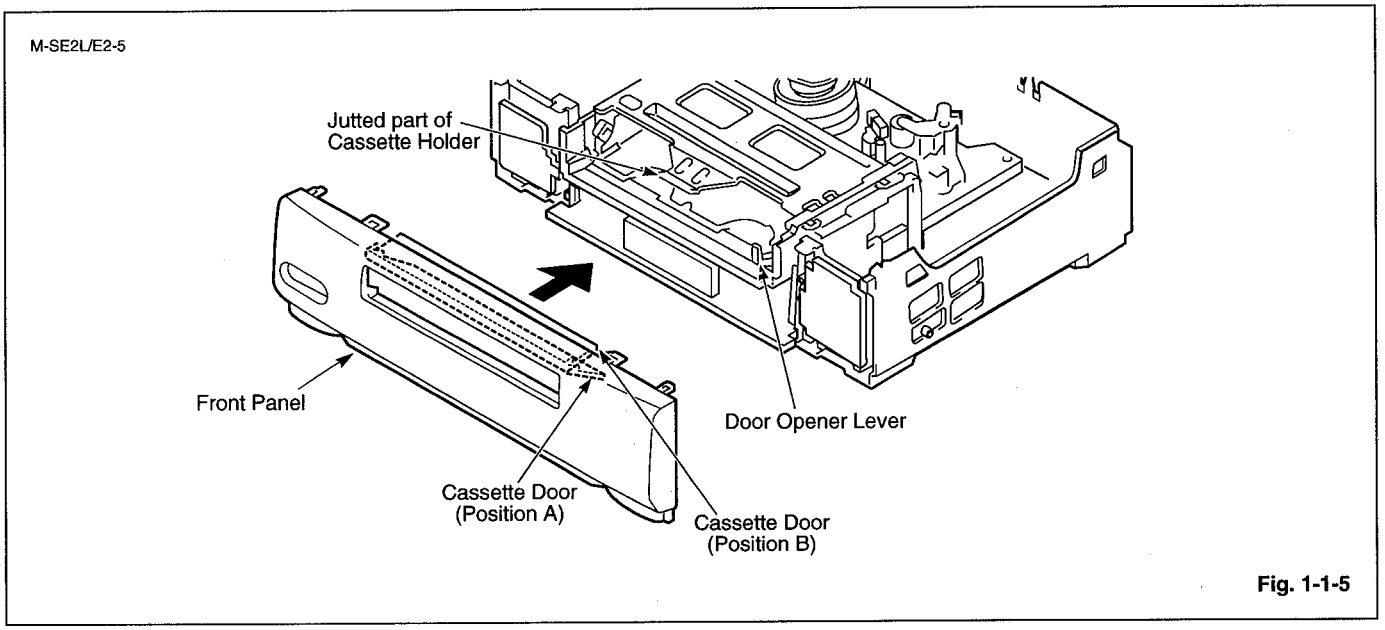

Fig. 1-1-5

Note: Before assembling the mechanism unit and the CP-1 board, check the eject mode positioning marks as shown in Fig. 1-1-6 and Fig. 1-1-7.

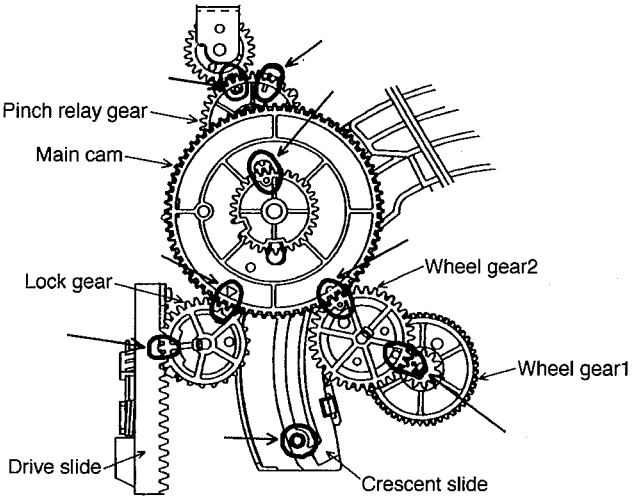

Fig. 1-1-6

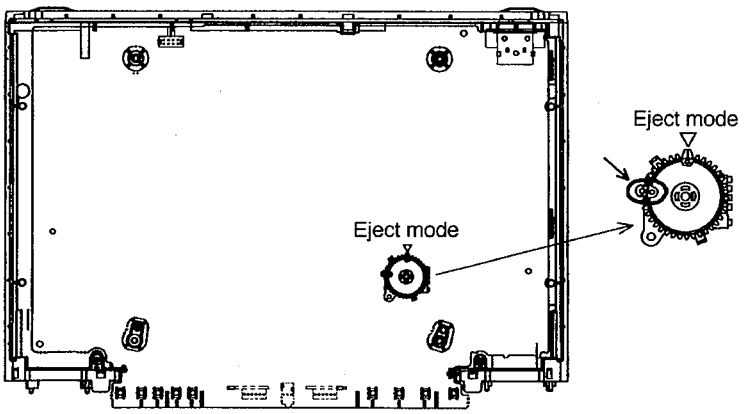

Fig. 1-1-7

1-4. CIRCUIT BOARD LOCATIONS

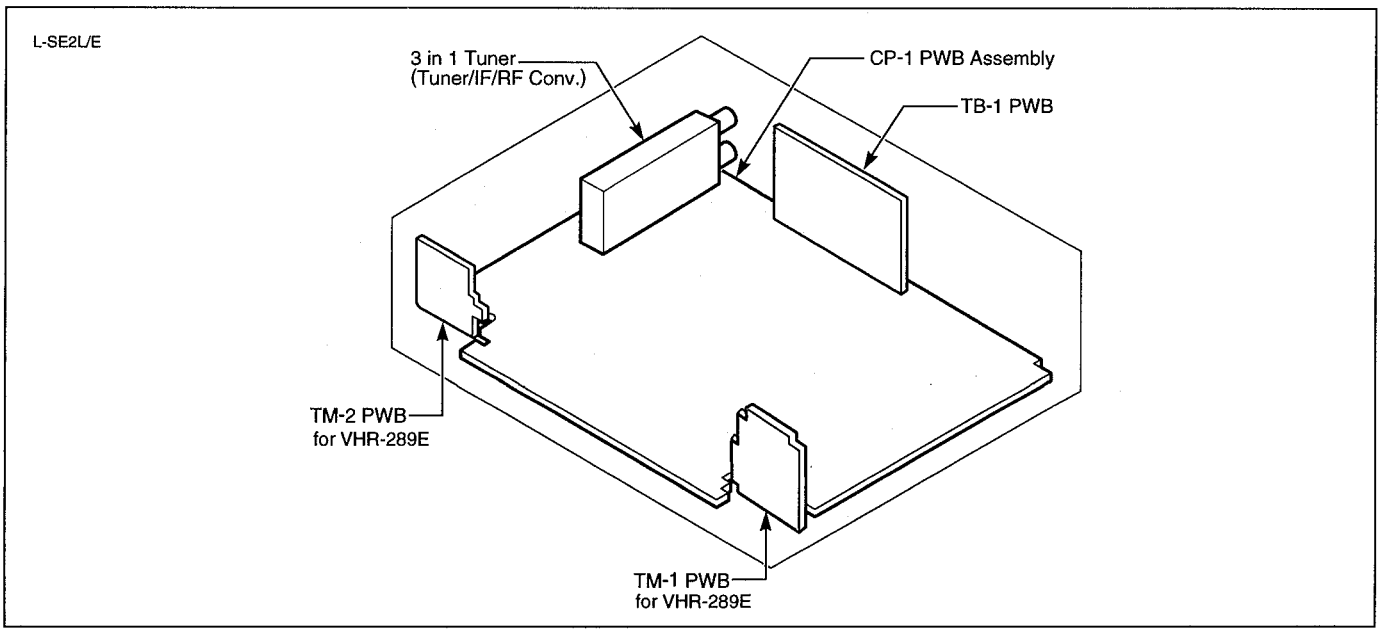

2. ELECTRICAL ADJUSTMENT

VCR PRESETTING

This VCR need three basic presetting by using the menus displayed on-screen. After all connection have been made, then follow steps 1 to 3 to preset the VCR.
The three presetting steps will be displayed in sequence on TV screen. The setting are entered with the remote control.

Turn on the VCR

1. Adjusting the TV receiver to the video channel: The AUTO SETUP screen will appear. When the video channel has been preset, press the OK button on the remote control.
2. Country selection: Using the numeric button, select the country of use.
3. Language selection: When the desired language has been select, press the MENU/TV button directly before prevent auto tuning will start.

When steps 1 to 3 have been finish, ready to operate the all operating mode.

2-1. SERVO CIRCUIT ADJUSTMENT

- These adjustments should be done upon completion of the tape transport adjustments.
- If the tape transport adjustments (except the tilt adjustment) are done after these adjustments, follow the procedures again in section 2-1-3, "Switching position adj."
- When a cassette tape is loaded, auto-tracking will be set immediately after starting the first playback. As this will daviate the tracking center set, be sure to press the channel buttons ▲ and ▼ once directly after starting playback to prevent auto-tracking from being set.

2-1-1. TEST EQUIPMENT AND STANDARDS REQUIRED

Oscilloscope	Vertical sensitivity Bandwidth	: 5 mV/DIV, external trigger : more than 10 MHz
Alignment Tape	VHJ-0009 or VHJ-0023	: SP mode, monoscope, 6 KHz
Blank Tape	VHS-type cassette tape	
Monitor TV		

2-1-2. LOCATION OF ADJUSTMENT POINTS

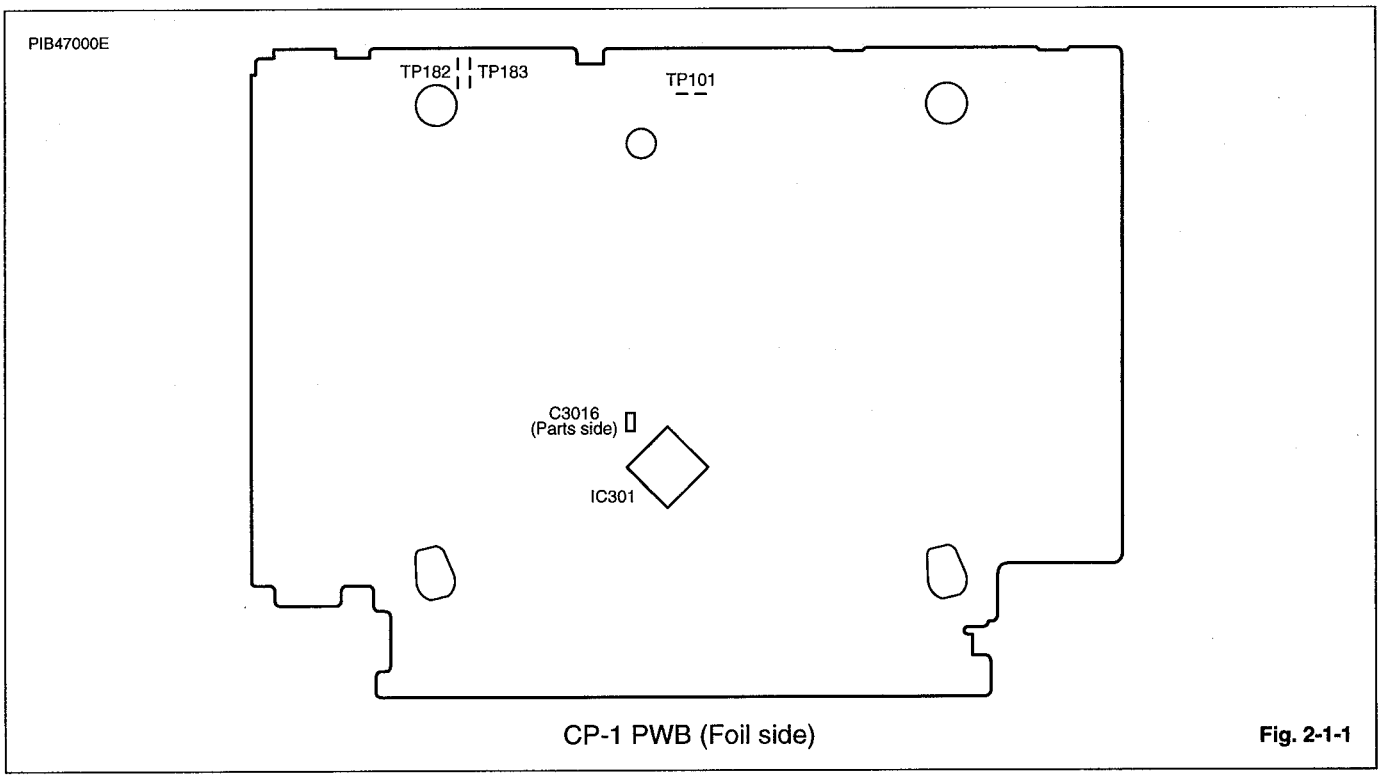

CP-1 PWB (Foil side)

Fig. 2-1-1

Note:

- Set the REC/PLAY SPEED button to indicator panel in the SP mode.
- Self-recording means "Record any broadcasting or video signal and playback the just-recorded portion."

2-1-3. SWITCHING POSITION ADJ.

Measuring Point	Measuring Equipment	Adj. Condition
TP101 (VIDEO OUT) TP183 (RF SW-P)	Oscilloscope	PLAY (SP) mode Alignment tape VHJ-0009 (PM-S6)

Adj. Location	Adj. Value
REC button CHANNEL (▲/▼) button PLAY button	6.5 H ± 0.5 H

1. At playback starts, press the REC button 3 times within 3 seconds after the playback picture comes out. However, these 3-push must be done within 2 seconds, and last push must be kept pressed for 0.5 seconds. (Fig. 2-1-3)
2. "P 0:00" is appeared in FLD, and it becomes the adjustment mode. This indication value changes automatically, and 6.5 H adjustment is done. When this value stops, adjustment value almost becomes 6.5 H.
3. Observe the video output signal by the oscilloscope, triggered by the fall down point of RF SW PULSE (TP183), and confirm that a front edge of V-SYNC is delayed for 6.5 H ± 0.5 H from the fall down point of RF SW PULSE. (Fig. 2-1-4)
4. After the adjustment data is fixed (it should be within 15 seconds from the adjustment mode start), press the PLAY button more than 1 second. Then the indication changes to "P –:–", it writes the data (delay quantity) to the E²PROM. (If it passes through 15 seconds before pushing the PLAY button, the intake of the data isn't done, and it finishes the adjustment mode.)
5. If it is not in 6.5 H ± 0.5 at the time of the confirmation by the above 3., make manual fine adjustment by pressing the CHANNEL button, and do the operation of 4.

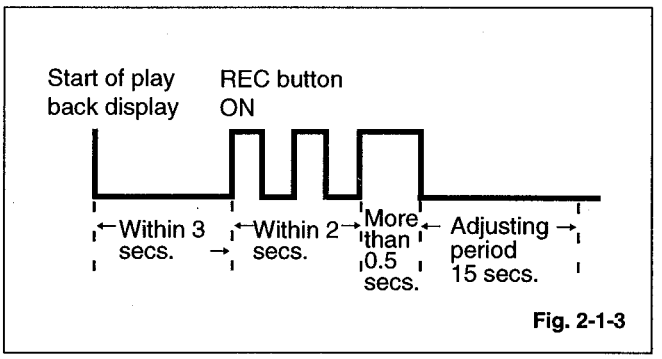

Fig. 2-1-3

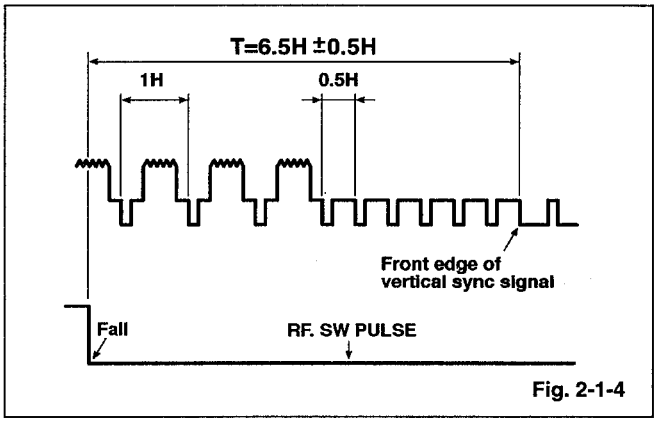

Fig. 2-1-4

2-1-4. SP STILL V-LOCK ADJ.

Measuring Point	Measuring Equipment	Adj. Condition
Picture of monitor	Monoscope pattern	Self-recording (SP mode) STILL mode

Adj. Location	Adj. Value
CHANNEL ▲ or ▼ button	The minimum vertical shake

1. Set the REC/PLAY SPEED button to the SP mode.
2. Play back the own recorded portion of the tape and then set the VCR in the STILL mode.
3. Press the CHANNEL ▲ or ▼ button so that the vertical shake of picture becomes its minimum.

2-2. IF CIRCUIT ADJUSTMENT

- In this model, the circuits of the TUNER, IF, and RF converter have been made into one. Therefore, should one circuit malfunction, the whole unit must be replaced.
- The adjustments for the IF (RF AGC) circuit of the 3 in 1 tuner are described below.

Note: The 3 in tuner dose not need any adjustments, because precise adjustments were down before shipment.

2-2-1. TEST EQUIPMENT AND STANDARD REQUIRED

Monitor TV	

2-2-2. LOCATION OF ADJUSTMENT POINT

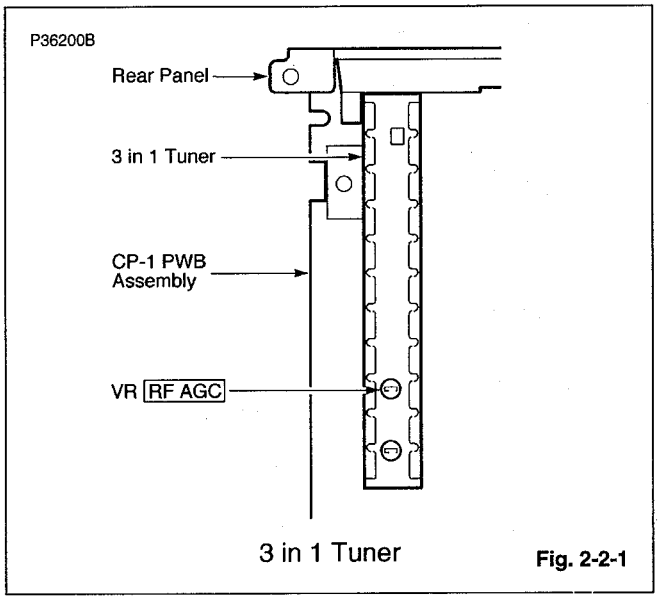

Fig. 2-2-1

2-2-3. RF AGC ADJ.

Measuring Point	Measuring Equipment	Adj. Condition
Picture of monitor TV	Monitor TV	E-E mode
Adj. Location		**Adj. Value**
VR (RF AGC) (on the 3 in 1 tuner)		S/N is best point

1. Connect the monitor TV to the VHF/UHF antenna output terminal.
2. Connect the VHF or UHF antenna to the VHF/UHF antenna input terminal.
3. Receive the middle electrical field (70 dBμ ~ 90 dBμ) of the VHF or UHF channel, and slowly turn the VR (RF AGC) from the point where snow-noise is present to the point where it just disappears from the monitor TV.
4. Confirm by monitor TV that there is no beat and saturation (S/N is best point) when receiving any TV channel.

2-3. CHECKING THE RF CHANNEL

If the TV and VCR are connected by an aerial output cable which has poor shielding characteristics, turn off the RF converter of the VCR and use the VCR with an AV cable. To turn the RF converter off, input "00" when setting the RF (when "RF" is displayed) during VCR pre-setting.

3. TEST POINTS FOR TAPE PATH ADJUSTMENT

Test points TP182 (ENV) and TP183 (SW-P) for tape path adjustment are shown in figure below.
For adjustment, refer to the separate volume "VC Mechanism Manual" (MM531683).

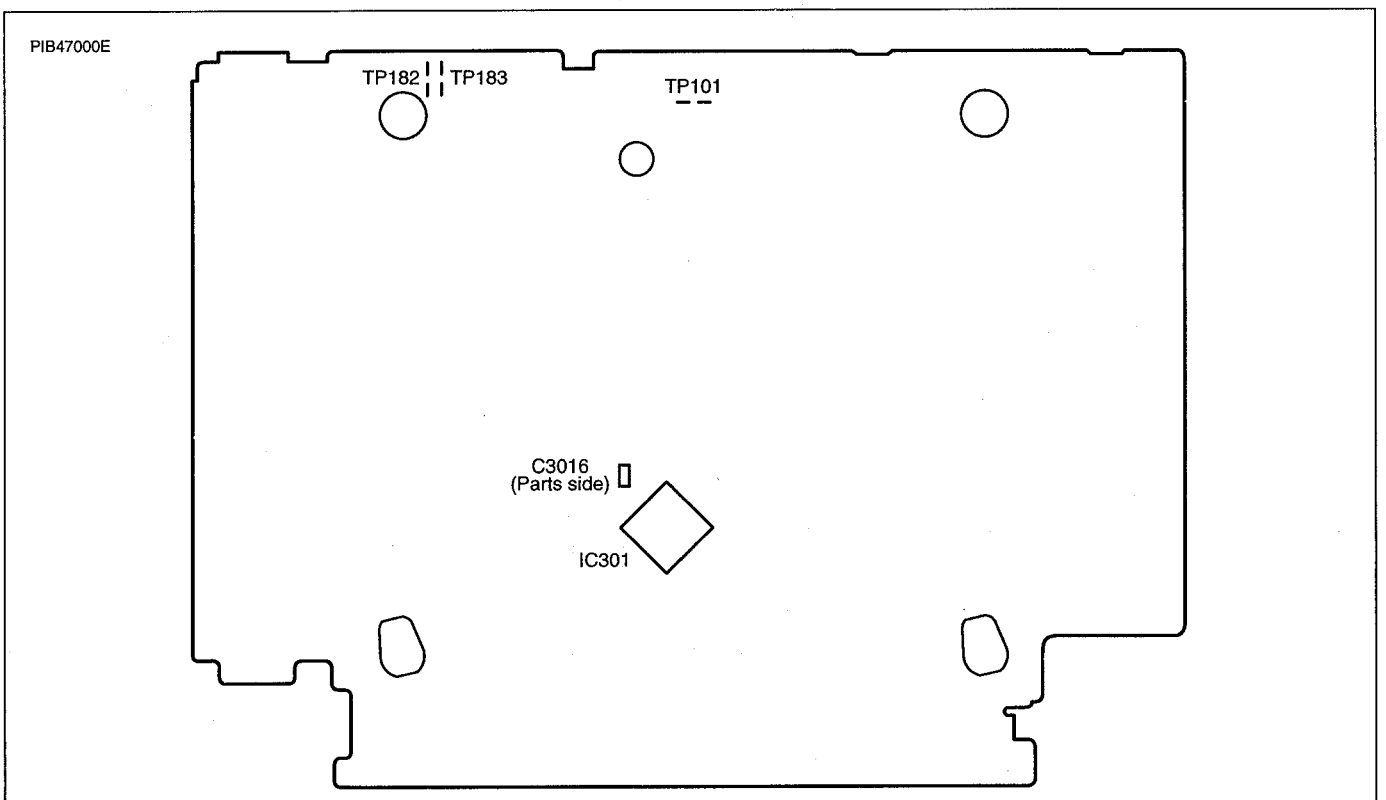

CP-1 PWB Assembly (Foil side)

Fig. 3-1

4. PARTS LIST

MECHANISM PARTS

LOCATION	PARTS NO.	DESCRIPTION
MECHANISM PARTS 1		
11000	613 182 7219	COMPL,CYLINDER,2N2S-V, EXCEPT VHR-279E,VHR-289E
OR	613 182 7202	COMPL,CYLINDER,2N2S-V, EXCEPT VHR-279E,VHR-289E
11000	613 182 7288	COMPL,CYLINDER,2N2P-L,VHR-279E,VHR-289E
OR	613 182 7271	COMPL,CYLINDER,2N2P-L,VHR-279E,VHR-289E
11100	613 182 7813	ASSY,CYLINDER,LWR 2
OR	613 182 7820	ASSY,CYLINDER,LWR 2
11200	613 182 7240	ASSY,CYLINDER,UPR 2N2S-V, EXCEPT VHR-279E,VHR-289E
OR	613 182 7233	ASSY,CYLINDER,UPR 2N2S-V, EXCEPT VHR-279E,VHR-289E
11200	613 182 7318	ASSY,CYLINDER,UPR 2N2P-L, VHR-279E,VHR-289E
OR	613 182 7301	ASSY,CYLINDER,UPR 2N2P-L, VHR-279E,VHR-289E
11300	613 182 6311	MOUNTING,MOTOR,CYLINDER
11400	411 158 0208	SCR SET HEX-SCT 4X6
11500	613 182 6229	EARTH,CHIP,CYLINDER
11600	613 182 6533	SPRING,EARTH,CYLINDER
21000	645 030 3678	MOTOR,ROTOR,CYL DC 2W VC
22000	645 030 3661	MOTOR,STATOR,CYL DC 2W VC
30000	412 036 5001	SPECIAL SCREW 2.3X6
1200	613 184 6630	HOOD,SENSOR VC
6012	613 151 6618	PAD
6073	411 177 3709	SCR S-TPG CUP 2.6X6
0090	613 187 2646	COMPL,CASSETTE MECHA VC
0100	613 182 3778	STAND,L VC
0200	613 182 3785	STAND,R VC
0300	613 152 0660	FRAME UNDER
040A	613 168 0937	TRAY,VC
040B	613 187 2769	GUIDE,CASSETTE L VC
040C	613 182 3723	GUIDE,CASSETTE R VC
040D	613 182 3815	SPRING,PLATE VC
040E	613 182 3730	LEVER,LID OPENER VC
040F	613 182 3822	SPRING,LID OPENER VC
0500	613 182 3747	LEVER,DOOR OPENER VC
0600	613 182 3808	SLIDE,DRIVE VC
0700	613 182 3839	SPRING,START VC
1000	613 183 8277	SPRING,TRAY VC
6070	411 021 7907	SCR S-TPG BIN 4X12
1010C	613 182 4461	GUIDE,S VC
10400	412 052 6204	SPECIAL SCREW-2.6X5.5
20100	613 182 7035	REEL,SPINDLE VC
20110	412 059 1509	SPECIAL WASHER 3.4X0.3
OR	412 058 0503	SPECIAL WASHER 3.4X0.4
OR	412 059 1608	SPECIAL WASHER 3.4X0.5
20120	412 058 4907	SPECIAL SCREW 2.6X8
20130	613 185 8978	MOUNTING,BT BAND VC
20200	613 186 3804	COMPL,MOUNTING,IDLER VC
20600	613 182 3297	GEAR,REEL S VC
20700	613 182 3303	GEAR,REEL T VC
30100	613 182 4676	ASSY,BRAKE S VC
30200	613 182 4683	ASSY,BRAKE T VC
30300	613 182 6588	SPRING,BRAKE MAIN VC
30600	613 182 4690	ASSY,BRAKE,SOFT T VC
30700	613 182 6595	SPRING,BRAKE SOFT T VC
30800	613 151 8490	ASSY,BRAKE CAPSTAN
30900	613 152 0356	SPRING,BRAKE CAPSTAN
40100	613 151 8759	ASSY,LEVER,BT
40200	613 160 5282	ASSY,BRAKE,BAND
40300	613 152 0271	SPRING,BT
5050A	613 182 3228	ASSY,MOUNTING,INCL S VC

Note:
Location No. 8010A and 8010B are used on VHR-279SP,VHR-269SP.

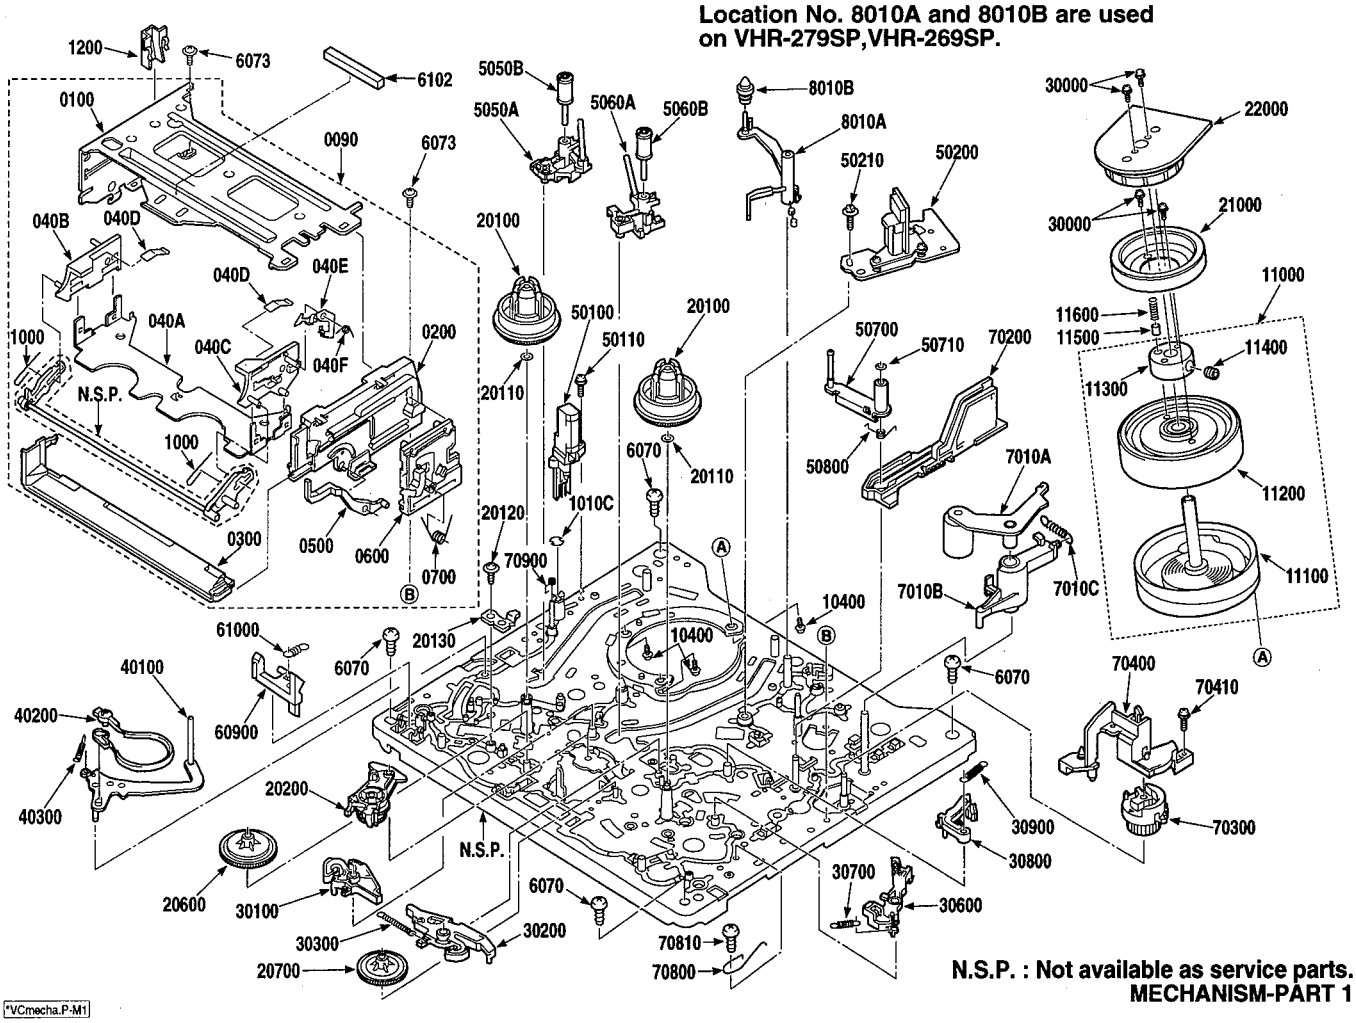

N.S.P. : Not available as service parts.
MECHANISM-PART 1

*VCmecha.P-M1

LOCATION	PARTS NO.	DESCRIPTION
5050B	613 184 4384	ASSY,ROLLER,GUIDE
5060A	613 182 3242	ASSY,MOUNTING,INCL T VC
5060B	613 184 4384	ASSY,ROLLER,GUIDE
50100	645 030 0950	HEAD,ERASE FULL VC
50110	412 049 1700	SPECIAL SCREW-2.6X10
50200	613 184 5916	ASSY,HEAD R/P ACE VC
50210	412 052 3500	SPECIAL SCREW 2.6X12
50700	613 182 5758	ASSY,LEVER LOAD VC
50710	411 109 1902	WASHER Y 3.1X6X0.5
50800	613 182 6540	SPRING,LEVER LOAD VC
60900	613 182 4249	LEVER,EP SW VC
61000	613 182 4256	SPRING,EP SW VC
7010A	613 182 6809	ASSY,LEVER,PINCH VC
7010B	613 182 6328	MOUNTING,LIFT PINCH VC
7010C	613 182 6557	SPRING,PINCH ROLLER VC
70200	613 182 6250	GEAR,RACK PINCH VC
70300	613 182 6243	GEAR,CAM PINCH VC
70400	613 182 6335	MOUNTING,OPENER VC
70410	412 049 1700	SPECIAL SCREW-2.6X10
70800	613 185 7490	SPRING,EARTH VC
70810	412 048 8007	SPECIAL SCREW-2.6X6
70900	613 186 5129	SPRING,GUIDE EARTH VC
8010A	613 171 9606	LEVER,CLEANER,VHR-279SP,VHR-269SP
8010B	613 171 9439	ASSY,MOUNTING CLEANER, VHR-279SP,VHR-269SP

MECHANISM PARTS 2

1010B	613 182 3358	LEVER,CLUTCH VC
1010D	411 120 1400	WASHER Y 2.6X4.7X0.25
2030A	613 182 3310	GEAR,CLUTCH VC
2030B	412 058 7908	SPECIAL WASHER 7.3X16X0.5
20310	411 109 4002	WASHER Y 2.6X4.7X0.5

LOCATION	PARTS NO.	DESCRIPTION
20400	613 182 7042	SPRING,CLUTCH VC
20500	613 182 2986	ASSY,PULLEY,FRICTION VC
20510	412 045 4606	SPECIAL WASHER 2.4X6X0.25
20800	613 182 3259	BELT,REEL VC
30400	613 182 6526	SLIDE,SOFT S VC
30500	613 182 6601	SPRING,BRAKE SOFT S VC
31000	613 182 6298	LEVER,CONTROL BRAKE VC
31100	613 182 5765	COMPL,LEVER,ACT BRAKE VC
31200	613 182 6571	SPRING,CHANGE CLUTCH VC
31300	613 182 6564	SPRING,RETURN BRAKE VC
40400	613 153 7583	ASSY,LEVER SPRING BT
5030A	613 152 2763	GEAR,LOAD S
5030B	613 152 0370	SPRING,LOAD S
5030C	613 160 3691	ASSY,LEVER,LOAD S
5040A	613 152 2770	GEAR,LOAD T
5040B	613 152 0363	SPRING,LOAD T
5040C	613 160 3707	ASSY,LEVER,LOAD T
60100	645 029 7014	ASSY,MOTOR LOADING BB VC
60200	613 151 8599	COMPL,GEAR,WORM
60300	613 151 9138	GEAR,WHEEL 1
60400	613 160 3790	GEAR,WHEEL 2
60500	613 182 3273	CAM,MAIN VC
60510	412 054 6806	SPECIAL WASHER 3.6X0.5
60600	613 182 3419	SLIDE,CRESCENT VC
60700	613 182 4485	MOUNTING CRESCENT VC
60710	412 048 8007	SPECIAL SCREW-2.6X6
60800	613 182 6236	GEAR,LOCK VC
61100	613 151 9107	DAMPER
70500	645 030 3388	MOTOR,CAPSTAN DC 3W VC
70510	412 048 7604	SPECIAL SCREW-2.6X6
70600	613 182 3327	GEAR,RELAY PINCH VC
70700	613 167 5926	MOUNTING CAPSTAN
70710	412 048 8007	SPECIAL SCREW-2.6X6

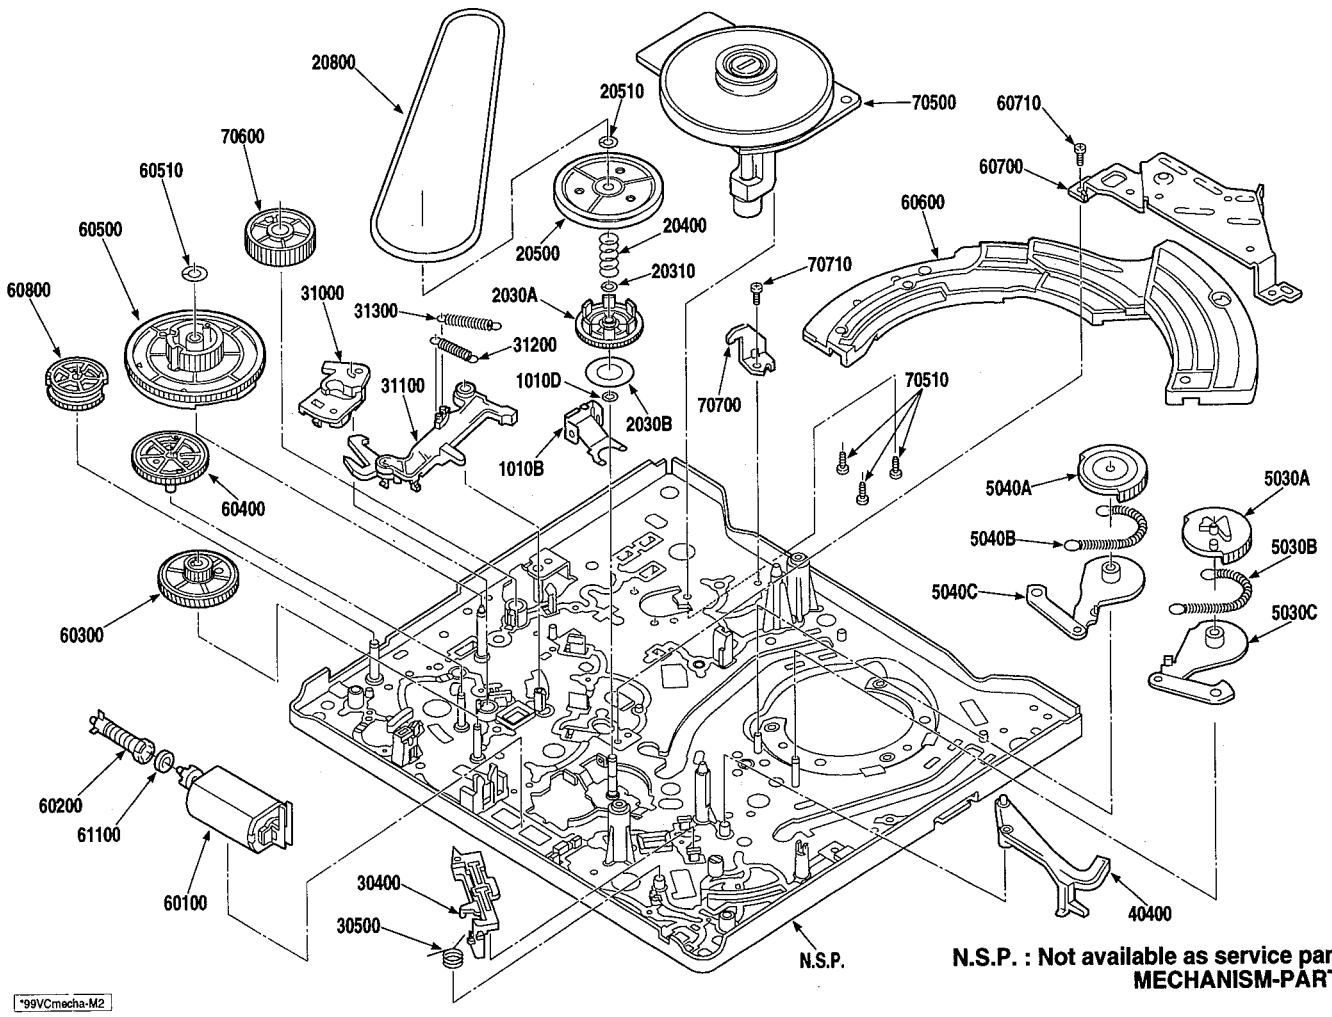

N.S.P. : Not available as service parts.

MECHANISM-PART 2

CABINET & CHASSIS PARTS

LOCATION	PARTS NO.	DESCRIPTION
1	411 137 0007	SCR L-TPG BIN 3X10
2	411 021 7907	SCR S-TPG BIN 4X12
3	411 142 9200	SCR S-TPG PAN+FLG 3X10
4	412 052 5108	SPECIAL SCREW-2.6X12
5	412 028 9406	SPECIAL SCREW
6	613 187 5814	COVER TOP,VHR-289E,VHR-279SP,VHR-269SP
6	613 187 5807	COVER TOP,VHR-279EV ONLY
6	613 187 4732	COVER TOP,VHR-279E,VHR-249EX
7	411 025 5404	SCR S-TPG BIN 3X12
8	613 184 8214	TERMINAL,VHR-289E ONLY
8	613 184 8221	TERMINAL,VHR-279SP,VHR-269SP
8	613 183 5047	TERMINAL,VHR-279E,VHR-249EX,VHR-279EV
9	645 031 0805	TUNER,RF/TU/IF,EXCEPT VHR-279E,VHR-289E
9	645 031 0843	TUNER,RF/TU/IF,VHR-279E,VHR-289E
10	613 184 8047	COMPL PWB,CP-1-A,VHR-279SP ONLY
10	613 184 0973	COMPL PWB,CP-1-A,VHR-279E ONLY
10	613 185 2952	COMPL PWB,CP-1-A,VHR-269SP ONLY
10	613 185 0040	COMPL PWB,CP-1-A,VHR-249EX ONLY
10	613 185 0750	COMPL PWB,CP-1-A,VHR-279EV ONLY
10	613 184 6173	COMPL PWB,CP-1-A,VHR-289E ONLY
11	613 184 4827	COMPL PWB,TM-1,VHR-289E ONLY
12	613 184 4797	COMPL PWB,TM-2,VHR-289E ONLY
13	613 121 1001	STAND,FELT,(FRONT)
14	613 184 0607	DOOR CASSETTE,VHR-279E ONLY
14	613 185 0170	DOOR CASSETTE,VHR-249EX ONLY
14	613 184 7309	DOOR CASSETTE,VHR-279SP ONLY
14	613 184 5015	DOOR CASSETTE,VHR-289E ONLY
14	613 185 5618	DOOR CASSETTE,VHR-269SP ONLY
14	613 185 1733	DOOR CASSETTE,VHR-279EV ONLY
15	613 153 0478	SPRING
16	613 184 7255	ASSY,CABINET FRONT SID,VHR-279SP ONLY
16	613 184 0508	ASSY,CABINET FRONT SID,VHR-279E ONLY
16	613 185 1719	ASSY,CABINET FRONT SID,VHR-279EV ONLY
16	613 185 0156	ASSY,CABINET FRONT SID,VHR-249EX ONLY
16	613 187 4664	ASSY,CABINET FRONT SID,VHR-269SP ONLY
16	613 184 4988	ASSY,CABINET FRONT SID,VHR-289E ONLY
19	613 183 8604	BUTTON,6P,VHR-289E ONLY
20	613 183 8680	DEC,BUTTON,VHR-289E ONLY
21	613 186 3347	BUTTON,VHR-289E ONLY
27	411 025 5404	SCR S-TPG BIN 3X12
28	613 183 7898	COVER BOTTOM
29	613 184 4957	COMPL PWB,TB-1,VHR-289E ONLY
29	613 185 7605	COMPL PWB,TB-1,VHR-249EX ONLY
29	613 184 0867	COMPL PWB,TB-1,VHR-279E,VHR-279EV
29	613 184 6463	COMPL PWB,TB-1,VHR-279SP,VHR-269SP

Note ;
The shape of the ASSY, CABINET FRONT vary according to models.

N.S.P.:Not available as service parts

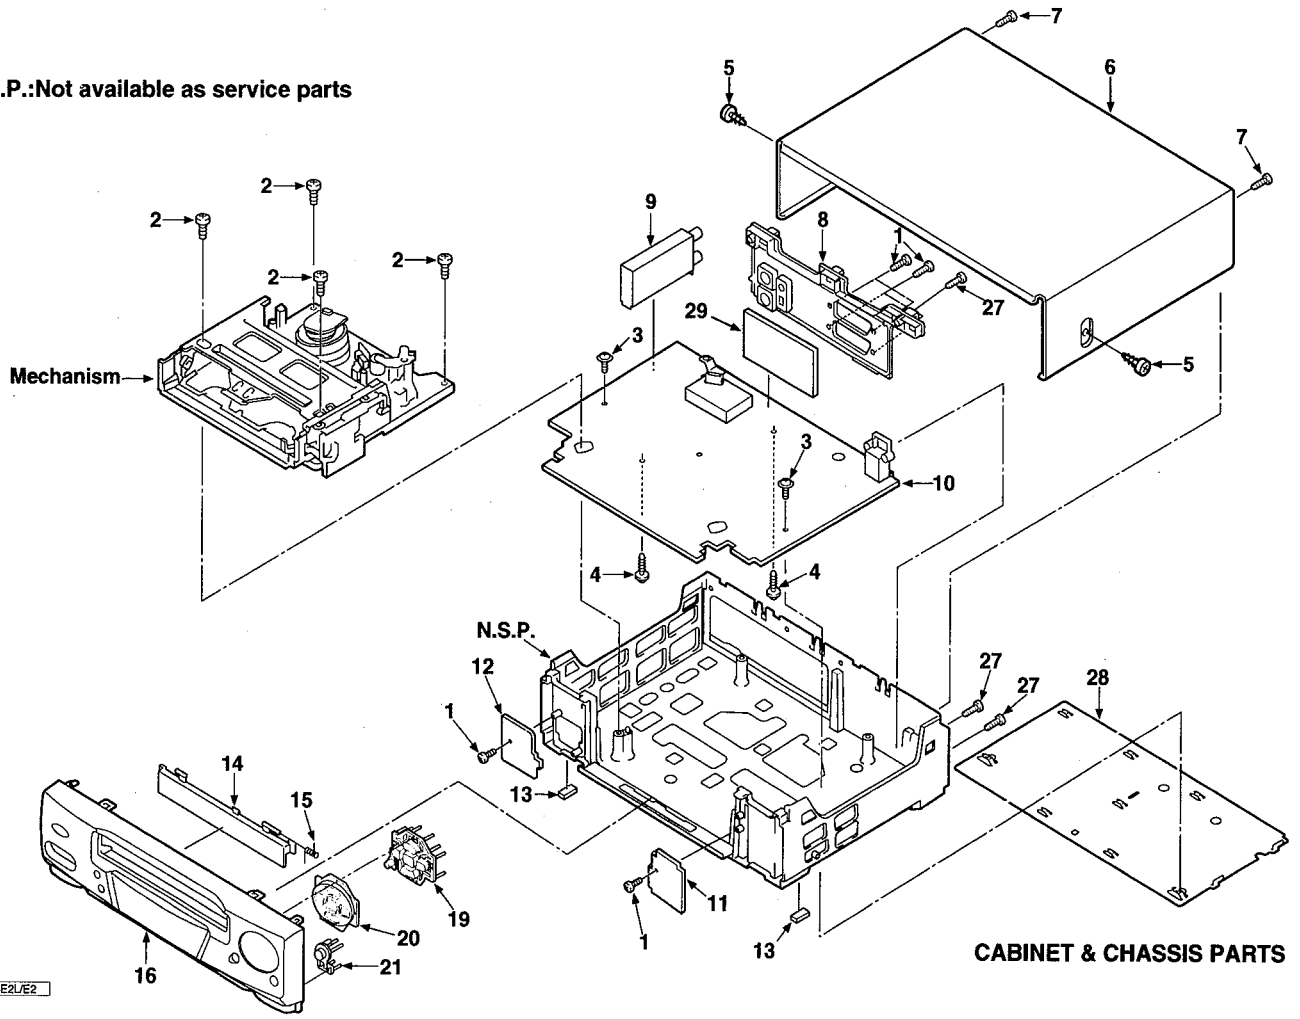

ELECTRICAL PARTS

Note:

1. Materials of Capacitors and Resistors are abbreviated as follows ;

Resistors		Capacitors	
MT-FILM	Metallized Film Resistor	MT-POLYEST	Metallized Polyester Capacitor
MT-GLAZE	Metallized Glaze Resistor	MT-COMPO	Metallized Composite Capacitor
OXIDE-MT	Oxide Metallized Film Resistor	TA-SOLD	Tantalum Solid Capacitor
		AL-SOLID	Aluminum Solid Capacitor
		NP-ELECT	Non-Polarized Electrolytic Capacitor
		OS-SOLID	Aluminum Solid Capacitors with Organic Semiconductive Electrolytic Capacitor
		DL-ELECT	Double Layered Electrolytic Capacitor

2. Tolerance of Capacitor (10pF over) and Resistor are noted with follow symboles.
   F .....1% G .....2% J .....5% K 10%
   M .....20% N .....30% Z .....+80% ~ -20%
3. Capacitors
   U : μF P : pF
4. Inductors
   UH : μH MH : mH
5. N.S.P. : Not available as service parts.

LOCATION	PARTS NO.	DESCRIPTION
COMPL PWB,CP-1-A		
	613 184 8047	VHR-279SP ONLY
	613 184 0973	VHR-279E ONLY
	613 185 2952	VHR-269SP ONLY
	613 185 0040	VHR-249EX ONLY
	613 185 0750	VHR-279EV ONLY
	613 184 6173	VHR-289E ONLY
	(CONNECTORS)	
CN181	645 030 7409	SOCKET,FFC 4P (N.S.P)
CN233	645 029 8011	SOCKET,2P (N.S.P)
CN351	645 009 4095	SOCKET,FFC 5P (N.S.P)
CN352	645 008 1842	PLUG,8P (N.S.P)
CN501	⚠645 028 4885	SOCKET,INLET AC
OR	⚠645 000 5411	SOCKET,INLET AC
CN701	645 005 4150	SOCKET,7P (N.S.P),VHR-289E ONLY
OR	645 009 4118	SOCKET,FFC 7P (N.S.P),VHR-289E ONLY
CN801	645 029 8011	SOCKET,2P (N.S.P)
	(SEMICONDUCTORS)	
Q1001	405 014 4509	TR 2SC2412K-R
OR	405 014 4608	TR 2SC2412K-S
Q1002	405 035 6100	TR 2SC2413K-Q
Q1003	405 014 4509	TR 2SC2412K-R
OR	405 014 4608	TR 2SC2412K-S
Q1004	405 002 0407	TR 2SA1037K-S
OR	405 002 0308	TR 2SA1037K-R
Q1005	405 014 4509	TR 2SC2412K-R
OR	405 014 4608	TR 2SC2412K-S
Q1006	405 014 4608	TR 2SC2412K-S
OR	405 014 4509	TR 2SC2412K-R
Q1007	405 014 4509	TR 2SC2412K-R
OR	405 014 4608	TR 2SC2412K-S
Q1008	405 002 0308	TR 2SA1037K-R, EXCEPT VHR-279SP,VHR-269SP
OR	405 002 0407	TR 2SA1037K-S, EXCEPT VHR-279SP,VHR-269SP
Q1009	405 014 4509	TR 2SC2412K-R, EXCEPT VHR-279SP,VHR-269SP
OR	405 014 4608	TR 2SC2412K-S, EXCEPT VHR-279SP,VHR-269SP
Q1010	405 002 0308	TR 2SA1037K-R, EXCEPT VHR-279SP,VHR-269SP
OR	405 002 0407	TR 2SA1037K-S, EXCEPT VHR-279SP,VHR-269SP
Q1011	405 000 2908	TR DTC114EK,VHR-279E,VHR-289E
Q1012	405 002 0308	TR 2SA1037K-R
OR	405 002 0407	TR 2SA1037K-S
Q1013	405 035 6100	TR 2SC2413K-Q
Q1401	405 002 0407	TR 2SA1037K-S, VHR-279E,VHR-289E,VHR-279EV
OR	405 002 0308	TR 2SA1037K-R, VHR-279E,VHR-289E,VHR-279EV
Q1801	405 000 2908	TR DTC114EK
Q1802	405 014 4509	TR 2SC2412K-R
OR	405 014 4608	TR 2SC2412K-S

LOCATION	PARTS NO.	DESCRIPTION
Q2001	405 003 5807	TR 2SA1318-U
OR	405 003 5708	TR 2SA1318-T
OR	405 003 5609	TR 2SA1318-S
Q2002	405 024 9907	TR 2SD734-F
OR	405 025 0200	TR 2SD734-G
Q2003	405 018 0002	TR 2SC3331-S
OR	405 018 0101	TR 2SC3331-T
OR	405 018 0200	TR 2SC3331-U
Q2004	405 018 0002	TR 2SC3331-S
OR	405 018 0101	TR 2SC3331-T
OR	405 018 0200	TR 2SC3331-U
Q2005	405 003 5807	TR 2SA1318-U
OR	405 003 5708	TR 2SA1318-T
OR	405 003 5609	TR 2SA1318-S
Q2371	405 083 5209	TR DTC343TK,VHR-279E,VHR-289E,VHR-279EV
Q2372	405 000 2007	TR DTA144EK,VHR-279E,VHR-289E,VHR-279EV
Q3007	405 014 4608	TR 2SC2412K-S
OR	405 014 4509	TR 2SC2412K-R
OR	405 015 8407	TR 2SC2812-L5
OR	405 015 8704	TR 2SC2812-L6
Q3008	405 015 8407	TR 2SC2812-L5
OR	405 015 8704	TR 2SC2812-L6
OR	405 014 4608	TR 2SC2412K-S
OR	405 014 4509	TR 2SC2412K-R
Q3009	405 002 0407	TR 2SA1037K-S
OR	405 002 0308	TR 2SA1037K-R
OR	405 002 6706	TR 2SA1179-M6
OR	405 002 6508	TR 2SA1179-M5
Q3010	405 002 6508	TR 2SA1179-M5
OR	405 002 6706	TR 2SA1179-M6
OR	405 002 0308	TR 2SA1037K-R
OR	405 002 0407	TR 2SA1037K-S
Q3061	405 002 6706	TR 2SA1179-M6
OR	405 002 6508	TR 2SA1179-M5
OR	405 002 0308	TR 2SA1037K-R
OR	405 002 0407	TR 2SA1037K-S
Q3062	405 002 0308	TR 2SA1037K-R
OR	405 002 0407	TR 2SA1037K-S
OR	405 002 6706	TR 2SA1179-M6
OR	405 002 6508	TR 2SA1179-M5
Q3065	405 014 4509	TR 2SC2412K-R
OR	405 014 4608	TR 2SC2412K-S
Q3303	405 002 6508	TR 2SA1179-M5,VHR-279SP,VHR-269SP
OR	405 002 6706	TR 2SA1179-M6,VHR-279SP,VHR-269SP
OR	405 002 0308	TR 2SA1037K-R,VHR-279SP,VHR-269SP
OR	405 002 0407	TR 2SA1037K-S,VHR-279SP,VHR-269SP
Q5002	405 089 2202	TR 2SC4483-T
Q5101	405 125 3200	TR 2SC5070
Q5102	405 089 2103	TR 2SC4483-S
OR	405 089 2202	TR 2SC4483-T
OR	405 104 3108	TR 2SD1858-Q
OR	405 029 4501	TR 2SD1858-R
Q5103	405 013 7303	TR 2SC2274K-F
OR	405 013 7204	TR 2SC2274K-E
OR	405 013 7006	TR 2SC2274-F

LOCATION	PARTS NO.	DESCRIPTION
Q5103	405 013 6801	TR 2SC2274-E
Q5104	405 089 2103	TR 2SC4483-S
OR	405 089 2202	TR 2SC4483-T
OR	405 104 3108	TR 2SD1858-Q
OR	405 029 4501	TR 2SD1858-R
Q5110	405 083 6305	TR DTB113ZK
Q5111	405 083 6305	TR DTB113ZK
Q5112	405 000 4100	TR DTC124EK
Q5113	405 000 2908	TR DTC114EK
Q5114	405 125 3200	TR 2SC5070
Q5115	405 029 3504	TR DTC144EK
Q5116	405 000 4100	TR DTC124EK
Q5117	405 083 6305	TR DTB113ZK
Q5120	405 013 7303	TR 2SC2274K-F
OR	405 013 7204	TR 2SC2274K-E
OR	405 013 6801	TR 2SC2274-E
OR	405 013 7006	TR 2SC2274-F
	(INTEGRATED CIRCUITS)	
IC101	409 435 1406	IC LA71590M-MPB
IC141	410 324 1605	IC LC74793JM-MPB, VHR-279E,VHR-289E,VHR-279EV
IC301	410 339 2208	IC MN101D02DBG,EXCEPT VHR-279E,VHR-289E
IC301	410 338 8409	IC MN101D02EBE,VHR-279E,VHR-289E
IC302	409 440 4508	IC LB1643L
IC304	409 348 6901	IC XL24C04P,EXCEPT VHR-269SP,VHR-249EX
OR	410 172 6906	IC X24C04PC7346, EXCEPT VHR-269SP,VHR-249EX
OR	410 177 3702	IC AT24C04-10PC, EXCEPT VHR-269SP,VHR-249EX
OR	410 189 5800	IC 24LC04B/P,EXCEPT VHR-269SP,VHR-249EX
IC304	409 348 6802	IC XL24C02P,VHR-269SP,VHR-249EX
OR	410 189 5701	IC 24LC02B/P,VHR-269SP,VHR-249EX
OR	410 172 6807	IC X24C02PC7189,VHR-269SP,VHR-249EX
OR	410 177 3603	IC AT24C02-10PC,VHR-269SP,VHR-249EX
IC305	409 415 0009	IC BMR03H-04
IC501	409 409 3801	IC MA3810-4105
IC511	409 180 2307	IC UPC1093J
OR	409 067 7203	IC L5431
IC512	409 391 6200	IC PQ09RD11
IC701	409 424 6900	IC MN12510F
	(DIODES)	
D1001	407 012 4406	DIODE 1SS133
D1005	407 012 4406	DIODE 1SS133,EXCEPT VHR-279SP,VHR-269SP
D1006	407 012 4406	DIODE 1SS133,EXCEPT VHR-279SP,VHR-269SP
D1007	407 012 4406	DIODE 1SS133,VHR-289E ONLY
D1008	407 012 4406	DIODE 1SS133,VHR-289E ONLY
D1009	407 012 4406	DIODE 1SS133,EXCEPT VHR-279SP,VHR-269SP
D1010	407 012 4406	DIODE 1SS133,EXCEPT VHR-279SP,VHR-269SP
D1011	407 012 4406	DIODE 1SS133,EXCEPT VHR-279SP,VHR-269SP
D3001	407 012 4406	DIODE 1SS133
OR	407 007 9904	DIODE GMA01
D3002	407 007 9904	DIODE GMA01
OR	407 012 4406	DIODE 1SS133
D3401	407 100 0006	ZENER DIODE MTZJ33C
D3501	407 007 9904	DIODE GMA01
OR	407 012 4406	DIODE 1SS133
D3502	407 012 4406	DIODE 1SS133
OR	407 007 9904	DIODE GMA01
D5001	407 104 5304	DIODE S1WB(A)60
OR	407 197 6509	DIODE DB155G-S
D5002	407 004 9808	DIODE DSK10E
D5011	407 198 2401	DIODE SFT14
OR	407 100 6909	DIODE AG01
OR	407 091 6902	DIODE ERA38-04
D5012	407 091 6902	DIODE ERA38-04
OR	407 198 2401	DIODE SFT14
OR	407 100 6909	DIODE AG01
D5013	⚠ 407 169 5608	PHOTO COUPLE PC123U2
D5014	407 078 2705	DIODE 1SS244
D5015	407 078 2705	DIODE 1SS244
D5016	407 099 5402	ZENER DIODE MTZJ6.2B
D5019	407 078 2705	DIODE 1SS244
D5101	408 038 5309	DIODE ERC81-004J11
D5102	407 205 7009	DIODE D2FS6
OR	407 205 7009	DIODE D2FS6
D5103	407 078 2705	DIODE 1SS244
D5104	407 100 6909	DIODE AG01
OR	407 091 6902	DIODE ERA38-04

LOCATION	PARTS NO.	DESCRIPTION
D5104	407 198 2401	DIODE SFT14
D5105	407 167 8007	DIODE D1FL20U
OR	407 167 8007	DIODE D1FL20U
D5107	407 099 5303	ZENER DIODE MTZJ5.6B
D5108	407 099 5303	ZENER DIODE MTZJ5.6B
D5109	407 099 5303	ZENER DIODE MTZJ5.6B
D5110	407 099 6508	ZENER DIODE MTZJ12A
D5111	407 099 5600	ZENER DIODE MTZJ6.8A
D5112	407 091 6902	DIODE ERA38-04
D5115	407 078 2705	DIODE 1SS244
D5116	407 055 4708	ZENER DIODE RD24MB1
OR	407 055 4807	ZENER DIODE RD24M-B2
OR	407 120 7108	ZENER DIODE RD24MB3
D5118	407 150 7703	DIODE RB441Q
D5119	407 150 7703	DIODE RB441Q
D5120	407 150 7703	DIODE RB441Q
D5125	407 099 5402	ZENER DIODE MTZJ6.2B
D7001	407 012 4406	DIODE 1SS133,EXCEPT VHR-269SP,VHR-249EX
OR	407 007 9904	DIODE GMA01,EXCEPT VHR-269SP,VHR-249EX
D7002	407 012 4406	DIODE 1SS133,VHR-289E,VHR-279EV
OR	407 007 9904	DIODE GMA01,VHR-289E,VHR-279EV
D7003	407 012 4406	DIODE 1SS133,EXCEPT VHR-279E,VHR-289E
OR	407 007 9904	DIODE GMA01,EXCEPT VHR-279E,VHR-289E
D7005	407 012 4406	DIODE 1SS133,VHR-279E,VHR-289E
OR	407 007 9904	DIODE GMA01,VHR-279E,VHR-289E
D7007	407 012 4406	DIODE 1SS133,VHR-279SP,VHR-269SP
OR	407 007 9904	DIODE GMA01,VHR-279SP,VHR-269SP
D7008	407 007 9904	DIODE GMA01
OR	407 012 4406	DIODE 1SS133
D7009	407 007 9904	DIODE GMA01,VHR-279E,VHR-289E
OR	407 012 4406	DIODE 1SS133,VHR-279E,VHR-289E
D7011	407 012 4406	DIODE 1SS133,VHR-279E,VHR-289E
OR	407 007 9904	DIODE GMA01,VHR-279E,VHR-289E
D7014	407 012 4406	DIODE 1SS133, VHR-289E,VHR-279SP,VHR-269SP
OR	407 007 9904	DIODE GMA01, VHR-289E,VHR-279SP,VHR-269SP
D7016	407 007 9904	DIODE GMA01,VHR-279E,VHR-289E,VHR-279EV
OR	407 012 4406	DIODE 1SS133, VHR-279E,VHR-289E,VHR-279EV
D7017	407 007 9904	DIODE GMA01
OR	407 012 4406	DIODE 1SS133
D7018	407 012 4406	DIODE 1SS133
OR	407 007 9904	DIODE GMA01
D7019	407 007 9904	DIODE GMA01
OR	407 012 4406	DIODE 1SS133
D7021	407 007 9904	DIODE GMA01,VHR-289E ONLY
OR	407 012 4406	DIODE 1SS133,VHR-289E ONLY
D7023	407 012 4406	DIODE 1SS133,VHR-279E ONLY
OR	407 007 9904	DIODE GMA01,VHR-279E ONLY
D7029	408 040 6202	LED SEL2401GLF44-D,,EXCEPT VHR-289E
OR	408 040 6103	LED SEL2410GLF44-C,,EXCEPT VHR-289E
OR	408 039 9306	LED SLZ-381B-30H-AB,,EXCEPT VHR-289E
D8001	407 208 6603	PHOTO,DIODE PN205LT.SN
D8002	407 208 6603	PHOTO,DIODE PN205LT.SN
D8003	407 207 0107	LED LN59LT.SL,
	(CRYSTAL DEVICES)	
X1002	645 014 8378	OSC,CRYSTAL 4.433619MHZ
OR	645 002 4436	OSC,CRYSTAL 4.433619MHZ
OR	645 000 6029	OSC,CRYSTAL 4.433619MHZ
OR	645 000 6012	OSC,CRYSTAL 4.433619MHZ
X3001	613 109 0972	OSC,CRYSTAL 32KHZ
X3002	645 008 7899	OSC,CRYSTAL 14.31818MHZ
X7001	645 006 3435	OSC,CERAMIC 4.000MHZ
OR	613 124 2142	RESONATOR,CERAMIC 4MHZ
	(INDUCTORS)	
L1002	645 003 8228	INDUCTOR,68U J
OR	645 002 1510	INDUCTOR,68U J
L1003	645 001 4611	INDUCTOR,120U J
OR	645 003 7948	INDUCTOR,120U J
L1004	645 006 3886	INDUCTOR,1U K
L1005	645 003 6934	INDUCTOR,100U J
OR	645 003 7634	INDUCTOR,100U J
L1006	645 025 0644	INDUCTOR,0.75UH
L2004	645 003 7634	INDUCTOR,100U J
OR	645 003 6934	INDUCTOR,100U J
L3010	645 009 3791	CORE,BEAD
L3061	645 006 3602	INDUCTOR,1.1UH

LOCATION	PARTS NO.	DESCRIPTION
L3062	645 025 0644	INDUCTOR,0.75UH
L3064	645 025 0644	INDUCTOR,0.75UH
L3065	645 025 0644	INDUCTOR,0.75UH
L3301	645 003 6910	INDUCTOR,10U J
OR	645 003 7627	INDUCTOR,10U J
L5001	⚠ 645 013 5620	LINE FILTER
L5101	645 011 6957	INDUCTOR,10U
OR	645 002 4122	INDUCTOR,10U K
L5102	645 002 4122	INDUCTOR,10U K
OR	645 011 6957	INDUCTOR,10U
	(TRANSFORMERS)	
T2001	645 018 3515	TRANS,OSC,70KHZ
T5001	⚠ 645 027 3599	TRANS,POWER,PULSE
	(CAPACITORS)	
C1001	403 192 5905	CERAMIC 0.1U K 25V
C1002	403 130 3109	CERAMIC 0.047U K 50V
C1003	403 109 6308	ELECT 1U M 50V
C1004	403 135 4002	ELECT 47U M 6.3V
C1005	403 068 0409	CERAMIC 0.1U Z 25V
C1006	403 069 5601	CERAMIC 0.01U K 50V
C1007	403 020 0409	CERAMIC 27P J 50V
C1008	403 024 7107	CERAMIC 390P J 50V
C1009	403 147 2904	CERAMIC 4.7P C 50V
C1010	403 191 8709	ELECT 1U M 50V
C1011	403 014 9203	CERAMIC 180P J 50V
C1012	403 022 8205	CERAMIC 33P J 50V
C1013	403 139 1502	ELECT 10U M 16V
C1014	403 139 1700	ELECT 33U M 16V
C1015	403 192 5905	CERAMIC 0.1U K 25V, EXCEPT VHR-279SP,VHR-269SP
C1016	403 139 2608	ELECT 0.47U M 50V
C1017	403 069 5601	CERAMIC 0.01U K 50V
C1018	403 192 5905	CERAMIC 0.1U K 25V,VHR-289E ONLY
C1019	403 192 5905	CERAMIC 0.1U K 25V
C1020	403 192 5905	CERAMIC 0.1U K 25V
C1022	403 139 2707	ELECT 1U M 50V
C1023	403 139 1502	ELECT 10U M 16V
C1024	403 139 2707	ELECT 1U M 50V
C1025	403 069 5601	CERAMIC 0.01U K 50V
C1026	403 069 5601	CERAMIC 0.01U K 50V
C1027	403 069 5601	CERAMIC 0.01U K 50V
C1028	403 069 5601	CERAMIC 0.01U K 50V
C1029	403 068 0409	CERAMIC 0.1U Z 25V
C1030	403 139 1007	ELECT 47U M 6.3V
C1031	403 069 5601	CERAMIC 0.01U K 50V
C1032	403 139 2707	ELECT 1U M 50V
C1033	403 069 5601	CERAMIC 0.01U K 50V
C1034	403 139 2707	ELECT 1U M 50V
C1035	403 072 1607	CERAMIC 0.022U K 50V
C1036	403 139 1007	ELECT 47U M 6.3V
C1037	403 068 0409	CERAMIC 0.1U Z 25V
C1038	403 139 2707	ELECT 1U M 50V
C1039	403 072 1607	CERAMIC 0.022U K 50V
C1041	403 130 3109	CERAMIC 0.047U K 50V
C1042	403 072 1607	CERAMIC 0.022U K 50V
C1047	403 014 3409	CERAMIC 18P J 50V
C1048	403 013 3004	CERAMIC 150P J 50V
C1049	403 121 9509	CERAMIC 0.1U Z 50V
C1050	403 026 2803	CERAMIC 47P J 50V
C1051	403 026 2803	CERAMIC 47P J 50V, EXCEPT VHR-279SP,VHR-269SP
C1052	403 026 2803	CERAMIC 47P J 50V,VHR-289E ONLY
C1053	403 135 4101	ELECT 470U M 6.3V, EXCEPT VHR-279SP,VHR-269SP
C1055	403 069 5601	CERAMIC 0.01U K 50V
C1059	403 130 3109	CERAMIC 0.047U K 50V,VHR-279E,VHR-289E
C1060	403 068 0409	CERAMIC 0.1U Z 25V
C1062	403 068 0409	CERAMIC 0.1U Z 25V
C1403	403 191 8709	ELECT 1U M 50V, VHR-279E,VHR-289E,VHR-279EV
C1404	403 069 9500	CERAMIC 0.01U Z 50V, VHR-279E,VHR-289E,VHR-279EV
C1405	403 163 7907	ELECT 47U M 6.3V, VHR-279E,VHR-289E,VHR-279EV
C1412	403 191 8709	ELECT 1U M 50V, VHR-279E,VHR-289E,VHR-279EV
C1414	403 069 5601	CERAMIC 0.01U K 50V, VHR-279E,VHR-289E,VHR-279EV
C1415	403 167 7002	ELECT 4.7U M 50V, VHR-279E,VHR-289E,VHR-279EV
C1416	403 215 2508	CERAMIC 0.056U K 50V, VHR-279E,VHR-289E,VHR-279EV
C1801	403 026 2803	CERAMIC 47P J 50V
C1802	403 163 7907	ELECT 47U M 6.3V
C1803	403 068 0409	CERAMIC 0.1U Z 25V
C1804	403 191 8709	ELECT 1U M 50V
C1805	403 069 5601	CERAMIC 0.01U K 50V
C1806	403 069 5601	CERAMIC 0.01U K 50V
C1810	403 022 8205	CERAMIC 33P J 50V
C1811	403 022 8205	CERAMIC 33P J 50V
C2001	403 068 0409	CERAMIC 0.1U Z 25V
C2002	403 135 4002	ELECT 47U M 6.3V
C2003	403 068 0409	CERAMIC 0.1U Z 25V
C2004	403 135 3708	ELECT 33U M 6.3V
C2005	403 068 0409	CERAMIC 0.1U Z 25V,VHR-289E ONLY
C2006	403 135 3708	ELECT 33U M 6.3V
C2007	403 068 0409	CERAMIC 0.1U Z 25V, EXCEPT VHR-279SP,VHR-269SP
C2008	403 074 7607	CERAMIC 5600P K 50V
C2009	403 121 3507	ELECT 4.7U M 50V
C2010	403 068 0409	CERAMIC 0.1U Z 25V
C2011	403 135 4002	ELECT 47U M 6.3V
C2012	403 081 3302	POLYPRO 0.022U J 100V
C2013	403 069 5601	CERAMIC 0.01U K 50V
C2014	403 073 1200	CERAMIC 0.033U K 50V
C2015	403 163 7907	ELECT 47U M 6.3V
C2016	403 109 6308	ELECT 1U M 50V
C2017	403 070 8806	CERAMIC 1500P K 50V
C2019	403 069 1702	CERAMIC 1000P K 50V
C2020	403 069 5601	CERAMIC 0.01U K 50V
C2021	403 150 6500	ELECT 22U M 16V
C2022	403 167 7002	ELECT 4.7U M 50V
C2023	403 069 1702	CERAMIC 1000P K 50V
C2328	403 069 5601	CERAMIC 0.01U K 50V
C2372	403 074 7607	CERAMIC 5600P K 50V
C3001	403 008 7505	CERAMIC 10P D 50V
C3002	403 008 7505	CERAMIC 10P D 50V
C3003	403 018 0503	CERAMIC 22P J 50V
C3004	403 014 3409	CERAMIC 18P J 50V
C3005	403 069 5601	CERAMIC 0.01U K 50V
C3006	403 069 5601	CERAMIC 0.01U K 50V
C3008	403 189 2405	ELECT 10U M 16V
C3011	403 069 5601	CERAMIC 0.01U K 50V
C3013	403 069 5601	CERAMIC 0.01U K 50V
C3014	403 069 5601	CERAMIC 0.01U K 50V
C3015	403 135 3807	ELECT 330U M 6.3V
C3016	403 069 5601	CERAMIC 0.01U K 50V
C3017	403 135 3609	ELECT 220U M 6.3V,VHR-269SP,VHR-249EX
C3017	403 333 1001	DL-ELECT 0.1F Z 5.5V, EXCEPT VHR-269SP,VHR-249EX
C3018	403 163 8409	ELECT 47U M 16V
C3020	403 001 1906	CERAMIC 0.01U M 16V
C3025	403 028 4102	CERAMIC 56P J 50V
C3026	403 028 4102	CERAMIC 56P J 50V
C3027	403 068 0409	CERAMIC 0.1U Z 25V
C3037	403 069 5601	CERAMIC 0.01U K 50V
C3040	403 191 8808	ELECT 2.2U M 50V
C3041	403 068 0409	CERAMIC 0.1U Z 25V
C3042	403 107 9905	ELECT 10U M 16V
C3043	403 010 1102	CERAMIC 1000P J 50V
C3044	403 139 1502	ELECT 10U M 16V
C3045	403 010 1102	CERAMIC 1000P J 50V
C3059	403 069 5601	CERAMIC 0.01U K 50V
C3061	403 068 0409	CERAMIC 0.1U Z 25V
C3064	403 086 2805	NP-ELECT 1U M 50V
C3065	403 139 1502	ELECT 10U M 16V
C3066	403 193 7809	ELECT 100U M 16V
C3067	403 068 0409	CERAMIC 0.1U Z 25V
C3068	403 010 1102	CERAMIC 1000P J 50V
C3085	403 068 8801	CERAMIC 100P J 50V
C3301	403 107 9905	ELECT 10U M 16V
C3302	403 107 9905	ELECT 10U M 16V
C3313	403 068 3608	CERAMIC 0.033U Z 25V
C3314	403 107 9905	ELECT 10U M 16V
C3317	403 009 5708	CERAMIC 100P J 50V
C3318	403 011 4904	CERAMIC 120P J 50V

LOCATION	PARTS NO.	DESCRIPTION
C3320	403 030 6903	CERAMIC 68P J 50V
C3321	403 009 5708	CERAMIC 100P J 50V
C3335	403 008 7505	CERAMIC 10P D 50V
C3404	403 193 8905	ELECT 22U M 50V
C3502	403 069 5601	CERAMIC 0.01U K 50V
C3503	403 018 7403	CERAMIC 220P J 50V
C3504	403 069 5601	CERAMIC 0.01U K 50V
C3505	403 139 2707	ELECT 1U M 50V
C3506	403 139 1205	ELECT 22U M 10V
C3507	403 193 7601	ELECT 220U M 6.3V
C3508	403 162 1807	ELECT 22U M 10V
C3510	403 069 5601	CERAMIC 0.01U K 50V
C3513	403 215 1808	CERAMIC 2200P J 50V
C3514	403 073 4201	CERAMIC 3900P K 50V
C3516	403 068 0409	CERAMIC 0.1U Z 25V
C3517	403 193 7601	ELECT 220U M 6.3V
C3519	403 068 0409	CERAMIC 0.1U Z 25V
C3520	403 068 6203	CERAMIC 0.068U Z 25V
C3521	403 174 5909	CERAMIC 0.022U Z 25V
C3522	403 069 5601	CERAMIC 0.01U K 50V
C3524	403 010 1102	CERAMIC 1000P J 50V, VHR-279E,VHR-289E,VHR-279EV
C3525	403 009 5708	CERAMIC 100P J 50V, VHR-279E,VHR-289E,VHR-279EV
C3526	403 071 8102	CERAMIC 2200P K 50V, VHR-279E,VHR-289E,VHR-279EV
C3527	403 069 5601	CERAMIC 0.01U K 50V, VHR-279E,VHR-289E,VHR-279EV
C3528	403 163 8409	ELECT 47U M 16V
C3530	403 068 0409	CERAMIC 0.1U Z 25V
C3531	403 068 0409	CERAMIC 0.1U Z 25V
C5001	⚠ 404 070 4201	MT-POLYEST 0.068U M 250V
C5002	⚠ 404 070 4201	MT-POLYEST 0.068U M 250V
C5005	⚠ 404 074 1602	CERAMIC 1000P M 250V
C5007	⚠ 404 074 1602	CERAMIC 1000P M 250V
C5010	403 249 0204	ELECT 47U M 400V
C5012	403 247 3702	CERAMIC 3300P K 1K
C5013	403 222 1303	CERAMIC 1000P K 1KV
C5014	403 192 5905	CERAMIC 0.1U K 25V
C5015	403 069 5601	CERAMIC 0.01U K 50V
C5016	403 192 5905	CERAMIC 0.1U K 25V
C5101	403 314 0207	ELECT 1000U M 16V
C5102	403 147 9200	ELECT 1000U M 6.3V
C5103	403 314 0108	ELECT 470U M 16V
C5104	403 125 5507	ELECT 1000U M 16V
C5105	403 304 9302	ELECT 47U M 50V
C5106	403 301 1309	ELECT 47U M 35V
C5107	403 301 1507	ELECT 220U M 6.3V
C5111	403 107 9905	ELECT 10U M 16V
C5112	403 189 2405	ELECT 10U M 16V
C5113	403 189 2405	ELECT 10U M 16V
C5114	403 107 9905	ELECT 10U M 16V
C5115	403 135 7805	ELECT 3.3U M 50V
C5116	403 107 9905	ELECT 10U M 16V
C5117	403 135 7805	ELECT 3.3U M 50V
C5119	403 189 2405	ELECT 10U M 16V
C5122	403 192 5905	CERAMIC 0.1U K 25V
C5125	403 192 5905	CERAMIC 0.1U K 25V
C5127	403 192 5905	CERAMIC 0.1U K 25V
C5128	403 192 5905	CERAMIC 0.1U K 25V
C5129	403 192 5905	CERAMIC 0.1U K 25V
C5135	403 068 0409	CERAMIC 0.1U Z 25V
C7001	403 028 9909	CERAMIC 560P J 50V
C7002	403 028 9909	CERAMIC 560P J 50V
C7003	403 028 9909	CERAMIC 560P J 50V
C7004	403 028 9909	CERAMIC 560P J 50V
C7005	403 167 7002	ELECT 4.7U M 50V
C7006	403 068 0409	CERAMIC 0.1U Z 25V
C8001	403 068 0409	CERAMIC 0.1U Z 25V
	(RESISTORS)	
R1001	401 038 3702	MT-GLAZE 33K JA 1/10W
R1002	401 037 9309	MT-GLAZE 18K JA 1/10W
R1003	401 037 5608	MT-GLAZE 10K JA 1/10W
R1006	401 037 5400	MT-GLAZE 1K JA 1/10W
R1007	401 038 3504	MT-GLAZE 330 JA 1/10W
R1008	401 038 3504	MT-GLAZE 330 JA 1/10W
R1009	401 038 9001	MT-GLAZE 680 JA 1/10W
R1010	401 038 2101	MT-GLAZE 2.7K JA 1/10W

LOCATION	PARTS NO.	DESCRIPTION
R1011	401 038 6406	MT-GLAZE 4.7K JA 1/10W
R1012	401 037 9200	MT-GLAZE 1.8K JA 1/10W
R1013	401 038 5003	MT-GLAZE 390 JA 1/10W
R1014	401 037 5400	MT-GLAZE 1K JA 1/10W
R1015	401 037 5707	MT-GLAZE 100K JA 1/10W
R1017	401 038 5102	MT-GLAZE 3.9K JA 1/10W
R1018	401 037 5400	MT-GLAZE 1K JA 1/10W
R1019	401 037 6704	MT-GLAZE 1.2K JA 1/10W
R1020	401 037 5400	MT-GLAZE 1K JA 1/10W
R1021	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R1022	401 039 0403	MT-GLAZE 8.2K JA 1/10W
R1025	401 037 5400	MT-GLAZE 1K JA 1/10W
R1026	401 038 5102	MT-GLAZE 3.9K JA 1/10W
R1030	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R1031	401 037 5608	MT-GLAZE 10K JA 1/10W
R1032	401 037 5806	MT-GLAZE 1M JA 1/10W
R1034	401 037 5202	MT-GLAZE 100 JA 1/10W
R1035	401 037 8005	MT-GLAZE 15K JA 1/10W
R1039	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R1040	401 037 5202	MT-GLAZE 100 JA 1/10W
R1041	401 038 2101	MT-GLAZE 2.7K JA 1/10W
R1042	401 037 8005	MT-GLAZE 15K JA 1/10W
R1044	401 037 6704	MT-GLAZE 1.2K JA 1/10W
R1045	401 037 6704	MT-GLAZE 1.2K JA 1/10W
R1046	401 037 5400	MT-GLAZE 1K JA 1/10W
R1047	401 038 5003	MT-GLAZE 390 JA 1/10W, EXCEPT VHR-279SP,VHR-269SP
R1048	401 018 2701	CARBON 330 JA 1/4W, EXCEPT VHR-279SP,VHR-269SP
R1049	401 018 2701	CARBON 330 JA 1/4W, EXCEPT VHR-279SP,VHR-269SP
R1050	401 038 7700	MT-GLAZE 5.6K JA 1/10W, EXCEPT VHR-279SP,VHR-269SP
R1051	401 038 7700	MT-GLAZE 5.6K JA 1/10W, EXCEPT VHR-279SP,VHR-269SP
R1052	401 012 4404	CARBON 100 JA 1/4W, EXCEPT VHR-279SP,VHR-269SP
R1053	401 037 5608	MT-GLAZE 10K JA 1/10W, EXCEPT VHR-279SP,VHR-269SP
R1054	401 037 5608	MT-GLAZE 10K JA 1/10W, EXCEPT VHR-279SP,VHR-269SP
R1055	401 038 6406	MT-GLAZE 4.7K JA 1/10W, EXCEPT VHR-279SP,VHR-269SP
R1056	401 019 0904	CARBON 390 JA 1/4W, EXCEPT VHR-279SP,VHR-269SP
R1057	401 037 5004	MT-GLAZE 0.000 ZA 1/10W, VHR-279SP,VHR-269SP
R1057	401 038 9506	MT-GLAZE 75 JA 1/10W, EXCEPT VHR-279SP,VHR-269SP
R1059	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R1061	401 038 0800	MT-GLAZE 22K JA 1/10W
R1062	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R1063	401 037 9200	MT-GLAZE 1.8K JA 1/10W
R1064	401 038 0800	MT-GLAZE 22K JA 1/10W
R1065	401 037 9309	MT-GLAZE 18K JA 1/10W
R1067	401 037 5400	MT-GLAZE 1K JA 1/10W, VHR-279SP,VHR-269SP
R1068	401 037 5400	MT-GLAZE 1K JA 1/10W, VHR-279SP,VHR-269SP
R1072	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R1073	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R1411	401 038 3603	MT-GLAZE 3.3K JA 1/10W, VHR-279E,VHR-289E,VHR-279EV
R1413	401 037 5608	MT-GLAZE 10K JA 1/10W, VHR-279E,VHR-289EVHR-279EV
R1414	401 038 2101	MT-GLAZE 2.7K JA 1/10W, VHR-279E,VHR-289E,VHR-279EV
R1415	401 037 5608	MT-GLAZE 10K JA 1/10W, VHR-279E,VHR-289E,VHR-279EV
R1416	401 038 7700	MT-GLAZE 5.6K JA 1/10W, VHR-279E,VHR-289E,VHR-279EV
R1417	401 037 5608	MT-GLAZE 10K JA 1/10W, VHR-279E,VHR-289E,VHR-279EV
R1807	401 037 5608	MT-GLAZE 10K JA 1/10W
R1809	401 038 3702	MT-GLAZE 33K JA 1/10W, EXCEPT VHR-279E,VHR-289E
R1810	401 038 3603	MT-GLAZE 3.3K JA 1/10W
R1811	401 038 2002	MT-GLAZE 270 JA 1/10W

LOCATION	PARTS NO.	DESCRIPTION
R1813	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R1814	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R2001	401 038 3702	MT-GLAZE 33K JA 1/10W, EXCEPT VHR-279SP,VHR-269SP
R2002	401 039 0403	MT-GLAZE 8.2K JA 1/10W, EXCEPT VHR-279SP,VHR-269SP
R2003	401 038 3702	MT-GLAZE 33K JA 1/10W,VHR-289E ONLY
R2004	401 037 5608	MT-GLAZE 10K JA 1/10W,VHR-289E ONLY
R2005	401 036 3702	MT-GLAZE 33K JA 1/10W
R2006	401 037 5608	MT-GLAZE 10K JA 1/10W
R2007	401 038 3900	MT-GLAZE 3.3M JA 1/10W
R2008	401 037 5608	MT-GLAZE 10K JA 1/10W
R2009	401 039 0403	MT-GLAZE 8.2K JA 1/10W
R2011	401 038 3603	MT-GLAZE 3.3K JA 1/10W
R2012	401 038 0800	MT-GLAZE 22K JA 1/10W
R2013	401 038 6406	MT-GLAZE 4.7K JA 1/10W
R2014	401 038 7601	MT-GLAZE 560 JA 1/10W
R2015	401 038 6208	MT-GLAZE 47 JA 1/10W
R2016	401 038 2101	MT-GLAZE 2.7K JA 1/10W
R2017	401 011 8809	CARBON 1 JA 1/4W
R2018	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R2019	401 038 0701	MT-GLAZE 2.2K JA 1/10W
R2020	401 037 5400	MT-GLAZE 1K JA 1/10W
R2021	401 037 5608	MT-GLAZE 10K JA 1/10W
R2022	401 038 0800	MT-GLAZE 22K JA 1/10W
R2023	401 037 6803	MT-GLAZE 12K JA 1/10W
R2024	401 038 6406	MT-GLAZE 4.7K JA 1/10W
R2025	401 037 6803	MT-GLAZE 12K JA 1/10W
R2026	401 038 3801	MT-GLAZE 330K JA 1/10W
R2027	401 037 7206	MT-GLAZE 130 JA 1/10W
R2028	401 037 7305	MT-GLAZE 1.3K JA 1/10W
R2029	401 038 2200	MT-GLAZE 27K JA 1/10W
R2331	401 037 6704	MT-GLAZE 1.2K JA 1/10W
R2332	401 038 2101	MT-GLAZE 2.7K JA 1/10W
R2380	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R2381	401 037 5400	MT-GLAZE 1K JA 1/10W
R3001	⚠ 402 067 7402	FUSIBLE RES 3.3 JA 1/2W
R3002	401 038 0800	MT-GLAZE 22K JA 1/10W
R3003	401 038 0800	MT-GLAZE 22K JA 1/10W
R3004	401 037 7909	MT-GLAZE 1.5K JA 1/10W
R3005	401 037 9200	MT-GLAZE 1.8K JA 1/10W
R3006	401 038 3009	MT-GLAZE 3K JA 1/10W
R3008	401 038 6406	MT-GLAZE 4.7K JA 1/10W
R3009	401 038 6406	MT-GLAZE 4.7K JA 1/10W
R3010	401 038 3801	MT-GLAZE 330K JA 1/10W
R3011	401 038 6406	MT-GLAZE 4.7K JA 1/10W
R3012	401 038 0602	MT-GLAZE 220 JA 1/10W
R3013	401 038 6406	MT-GLAZE 4.7K JA 1/10W
R3014	401 037 8005	MT-GLAZE 15K JA 1/10W
R3015	401 037 8005	MT-GLAZE 15K JA 1/10W
R3016	401 037 7909	MT-GLAZE 1.5K JA 1/10W
R3017	401 038 6406	MT-GLAZE 4.7K JA 1/10W
R3018	401 037 5608	MT-GLAZE 10K JA 1/10W
R3019	401 037 5707	MT-GLAZE 100K JA 1/10W
R3021	401 038 6406	MT-GLAZE 4.7K JA 1/10W
R3022	401 037 9200	MT-GLAZE 1.8K JA 1/10W
R3023	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R3024	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R3029	401 037 5400	MT-GLAZE 1K JA 1/10W
R3032	401 038 5300	MT-GLAZE 39K JA 1/10W
R3035	401 038 0800	MT-GLAZE 22K JA 1/10W
R3036	401 038 0800	MT-GLAZE 22K JA 1/10W
R3038	401 038 6406	MT-GLAZE 4.7K JA 1/10W
R3039	401 037 5400	MT-GLAZE 1K JA 1/10W
R3040	401 037 5400	MT-GLAZE 1K JA 1/10W
R3064	401 038 0800	MT-GLAZE 22K JA 1/10W
R3065	401 037 8203	MT-GLAZE 1.5M JA 1/10W
R3066	401 038 3702	MT-GLAZE 33K JA 1/10W
R3067	401 038 6505	MT-GLAZE 47K JA 1/10W
R3068	401 038 0800	MT-GLAZE 22K JA 1/10W
R3069	401 037 8203	MT-GLAZE 1.5M JA 1/10W
R3070	401 038 3702	MT-GLAZE 33K JA 1/10W
R3071	401 038 6505	MT-GLAZE 47K JA 1/10W
R3072	401 037 7800	MT-GLAZE 150 JA 1/10W
R3073	401 037 8104	MT-GLAZE 150K JA 1/10W
R3074	401 037 9200	MT-GLAZE 1.8K JA 1/10W
R3075	401 038 3504	MT-GLAZE 330 JA 1/10W
R3076	401 037 5400	MT-GLAZE 1K JA 1/10W
R3077	401 037 9200	MT-GLAZE 1.8K JA 1/10W
R3078	401 012 4404	CARBON 100 JA 1/4W
R3094	401 037 9309	MT-GLAZE 18K JA 1/10W
R3301	401 038 5003	MT-GLAZE 390 JA 1/10W
R3302	401 037 7909	MT-GLAZE 1.5K JA 1/10W
R3309	⚠ 402 078 2908	FUSIBLE RES 680 GA 1/4W
R3310	401 038 3504	MT-GLAZE 330 JA 1/10W, VHR-279SP,VHR-269SP
R3311	401 038 5003	MT-GLAZE 390 JA 1/10W, VHR-279SP,VHR-269SP
R3312	401 038 3603	MT-GLAZE 3.3K JA 1/10W
R3313	401 038 6406	MT-GLAZE 4.7K JA 1/10W
R3314	401 037 5400	MT-GLAZE 1K JA 1/10W, VHR-279SP,VHR-269SP
R3501	401 038 0701	MT-GLAZE 2.2K JA 1/10W
R3502	401 038 0909	MT-GLAZE 220K JA 1/10W
R3503	401 037 5400	MT-GLAZE 1K JA 1/10W
R3509	401 037 5608	MT-GLAZE 10K JA 1/10W
R3510	401 038 9001	MT-GLAZE 680 JA 1/10W
R3511	401 038 9001	MT-GLAZE 680 JA 1/10W
R3514	401 038 3702	MT-GLAZE 33K JA 1/10W
R3515	401 037 5608	MT-GLAZE 10K JA 1/10W
R3516	401 038 3702	MT-GLAZE 33K JA 1/10W
R3517	401 037 5608	MT-GLAZE 10K JA 1/10W
R3519	401 037 5400	MT-GLAZE 1K JA 1/10W
R3520	401 037 5707	MT-GLAZE 100K JA 1/10W
R3521	401 037 5400	MT-GLAZE 1K JA 1/10W
R3522	401 038 0602	MT-GLAZE 220 JA 1/10W, VHR-279E,VHR-289E,VHR-279EV
R3523	401 037 5202	MT-GLAZE 100 JA 1/10W, VHR-279E,VHR-289E,VHR-279EV
R3524	401 037 5400	MT-GLAZE 1K JA 1/10W
R3525	401 038 5904	MT-GLAZE 4.3K JA 1/10W
R3526	401 037 5400	MT-GLAZE 1K JA 1/10W
R3527	401 038 5904	MT-GLAZE 4.3K JA 1/10W
R3528	401 037 5400	MT-GLAZE 1K JA 1/10W
R3529	401 038 5904	MT-GLAZE 4.3K JA 1/10W
R3531	401 037 5608	MT-GLAZE 10K JA 1/10W
R3532	401 038 0800	MT-GLAZE 22K JA 1/10W
R3533	401 038 9209	MT-GLAZE 6.8K JA 1/10W
R3535	401 037 5608	MT-GLAZE 10K JA 1/10W
R3536	401 037 5608	MT-GLAZE 10K JA 1/10W
R3537	401 037 5608	MT-GLAZE 10K JA 1/10W
R3538	401 037 5608	MT-GLAZE 10K JA 1/10W
R3539	401 012 5609	CARBON 1K JA 1/4W
R5001	402 013 9108	SOLID 2.7M KB 1/2W
R5002	401 021 4907	CARBON 560K JA 1/4W
R5003	401 021 4907	CARBON 560K JA 1/4W
R5010	401 060 9901	OXIDE-MT 3.3 JA 1W
R5011	401 015 0403	CARBON 18 JA 1/4W
R5012	401 064 7309	OXIDE-MT 100 JA 2W
R5013	401 037 5400	MT-GLAZE 1K JA 1/10W
R5014	401 038 5003	MT-GLAZE 390 JA 1/10W
R5015	401 037 6704	MT-GLAZE 1.2K JA 1/10W
R5016	401 038 9001	MT-GLAZE 680 JA 1/10W
R5017	401 038 2101	MT-GLAZE 2.7K JA 1/10W
R5101	401 019 0904	CARBON 390 JA 1/4W
R5102	401 037 7800	MT-GLAZE 150 JA 1/10W
R5103	401 038 7601	MT-GLAZE 560 JA 1/10W
R5104	401 012 6903	CARBON 10K JA 1/4W
R5105	401 016 2505	CARBON 220 JA 1/4W
R5106	401 020 0702	CARBON 470 JA 1/4W
R5108	401 037 9200	MT-GLAZE 1.8K JA 1/10W
R5109	401 038 3603	MT-GLAZE 3.3K JA 1/10W
R5110	⚠ 402 071 3100	FUSIBLE RES 27 JA 1/4W
R5111	401 038 7601	MT-GLAZE 560 JA 1/10W
R5113	401 037 5608	MT-GLAZE 10K JA 1/10W
R5116	401 038 2101	MT-GLAZE 2.7K JA 1/10W
R5119	401 038 6505	MT-GLAZE 47K JA 1/10W
R5120	⚠ 402 004 0107	FUSIBLE RES 10 JA 1/4W
R5121	401 017 7509	CARBON 3.9 JA 1/4W
R5122	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
R5123	401 039 0304	MT-GLAZE 820 JA 1/10W
R5126	401 037 5400	MT-GLAZE 1K JA 1/10W
R5127	401 037 5400	MT-GLAZE 1K JA 1/10W
R5135	401 037 6605	MT-GLAZE 120 JA 1/10W
R7001	401 037 5608	MT-GLAZE 10K JA 1/10W
R7002	401 037 5608	MT-GLAZE 10K JA 1/10W

LOCATION	PARTS NO.	DESCRIPTION
R7003	401 037 5608	MT-GLAZE 10K JA 1/10W
R7004	401 037 5608	MT-GLAZE 10K JA 1/10W
R7005	401 038 7601	MT-GLAZE 560 JA 1/10W
R7006	401 038 7601	MT-GLAZE 560 JA 1/10W
R7007	401 038 7601	MT-GLAZE 560 JA 1/10W
R7008	401 038 7601	MT-GLAZE 560 JA 1/10W
R7009	401 038 9308	MT-GLAZE 68K JA 1/10W
R7010	401 038 9308	MT-GLAZE 68K JA 1/10W
R7011	401 038 9308	MT-GLAZE 68K JA 1/10W
R7012	401 038 9308	MT-GLAZE 68K JA 1/10W
R7013	401 038 9308	MT-GLAZE 68K JA 1/10W
R7018	401 016 2505	CARBON 220 JA 1/4W,EXCEPT VHR-289E
R8003	401 017 0708	CARBON 270 JA 1/4W
R8004	401 014 2804	CARBON 150 JA 1/4W
R8005	401 017 0708	CARBON 270 JA 1/4W
	(JUMPERS)	
	401 037 5004	MT-GLAZE 0.000 ZA 1/10W
	(SWITCHES)	
S7001	645 001 9777	SWITCH,PUSH 1P-1T, REC,EXCEPT VHR-289E
OR	645 006 2797	SWITCH,PUSH 1P-1T, REC,EXCEPT VHR-289E
OR	645 008 8049	SWITCH,PUSH 1P-1T, REC,EXCEPT VHR-289E
S7002	645 006 2797	SWITCH,PUSH 1P-1T, CH UP
OR	645 008 8049	SWITCH,PUSH 1P-1T, CH UP
OR	645 001 9777	SWITCH,PUSH 1P-1T, CH UP
S7003	645 008 8049	SWITCH,PUSH 1P-1T, FF,EXCEPT VHR-289E
OR	645 006 2797	SWITCH,PUSH 1P-1T, FF,EXCEPT VHR-289E
OR	645 001 9777	SWITCH,PUSH 1P-1T, FF,EXCEPT VHR-289E
S7004	645 006 2797	SWITCH,PUSH 1P-1T, CH DOWN, EXCEPT VHR-289E
OR	645 008 8049	SWITCH,PUSH 1P-1T, CH DOWN, EXCEPT VHR-289E
OR	645 001 9777	SWITCH,PUSH 1P-1T, CH DOWN, EXCEPT VHR-289E
S7004	645 008 8063	SWITCH,PUSH 1P-1T, CH DOWN, VHR-289E ONLY
S7005	645 001 9777	SWITCH,PUSH 1P-1T, REW,EXCEPT VHR-289E
OR	645 006 2797	SWITCH,PUSH 1P-1T, REW,EXCEPT VHR-289E
OR	645 008 8049	SWITCH,PUSH 1P-1T, REW,EXCEPT VHR-289E
S7006	645 001 9777	SWITCH,PUSH 1P-1T, POWER, EXCEPT VHR-289E
OR	645 006 2797	SWITCH,PUSH 1P-1T, POWER, EXCEPT VHR-289E
OR	645 008 8049	SWITCH,PUSH 1P-1T, POWER, EXCEPT VHR-289E
S7007	645 008 8049	SWITCH,PUSH 1P-1T, PAUSE, EXCEPT VHR-289E
OR	645 006 2797	SWITCH,PUSH 1P-1T, PAUSE, EXCEPT VHR-289E
OR	645 001 9777	SWITCH,PUSH 1P-1T, PAUSE, EXCEPT VHR-289E
S7008	645 008 8049	SWITCH,PUSH 1P-1T, PLAY,EXCEPT VHR-289E
OR	645 006 2797	SWITCH,PUSH 1P-1T, PLAY,EXCEPT VHR-289E
OR	645 001 9777	SWITCH,PUSH 1P-1T, PLAY,EXCEPT VHR-289E
S7010	645 001 9777	SWITCH,PUSH 1P-1T, STOP/EJECT, EXCEPT VHR-289E
OR	645 008 8049	SWITCH,PUSH 1P-1T, STOP/EJECT, EXCEPT VHR-289E
OR	645 006 2797	SWITCH,PUSH 1P-1T, STOP/EJECT, EXCEPT VHR-289E
S8001	645 029 7076	SWITCH,MODE 1P-1T VC, SWITCH MODE
S8002	645 029 7069	SWITCH,DETECTOR 1P-1T VC, SWITCH EP
	(REMOTE RECEIVERS)	
RR701	645 027 5654	UNIT,IR RECEIVER PACK
	(DISPLAYS)	
A7001	645 031 0096	FLUORESCENT TUBE
OR	645 031 0089	FLUORESCENT TUBE
	(FUSES)	
F5001	⚠ 423 025 9900	FUSE 250V 2.5A
OR	⚠ 423 022 6506	FUSE 250V 2.5A
OR	⚠ 423 021 8402	FUSE 250V 2.5A
	(PROTECTORS)	
PR511	⚠ 645 005 9834	PROTECTOR,IC 1.0A 50V
PR512	⚠ 645 014 2550	PROTECTOR,2A 125V
PR513	⚠ 645 014 2529	PROTECTOR,1.25A 125V
	(PHOTO COUPLES)	
PC801	407 206 6704	PHOTO COUPLE SG-269
PC802	407 206 6704	PHOTO COUPLE SG-269

LOCATION	PARTS NO.	DESCRIPTION
	(MISCELLANEOUS)	
	613 053 8048	FIXER
	645 008 7677	HOLDER,FUSE,F5001
OR	645 008 7660	HOLDER,FUSE,F5001
OR	645 016 0479	HOLDER,FUSE,F5001
	613 183 5337	HOLDER FL, FL
OR	613 164 2447	HOLDER FL, FL
	613 183 7553	HOLDER LED, PSLED,EXCEPT VHR-289E
	613 182 3334	HOLDER,LED VC
	613 182 3341	HOLDER,END SENSOR VC

COMPL PWB,TM-1

	613 184 4827	VHR-289E ONLY
	(CONNECTORS)	
CN711	645 009 4118	SOCKET,FFC 7P (N.S.P),VHR-289E ONLY
OR	645 011 3857	SOCKET,FFC 7P (N.S.P),VHR-289E ONLY
	(SWITCHES)	
S7101	613 093 8596	SW,PUSH, REC,VHR-289E ONLY
OR	645 005 1302	SWITCH,PUSH 1P-1T, REC,VHR-289E ONLY
S7102	645 005 1302	SWITCH,PUSH 1P-1T, FF,VHR-289E ONLY
OR	613 093 8596	SW,PUSH, FF,VHR-289E ONLY
S7103	613 093 8596	SW,PUSH, REW,VHR-289E ONLY
OR	645 005 1302	SWITCH,PUSH 1P-1T, REW,VHR-289E ONLY
S7104	613 093 8596	SW,PUSH, PAUSE,VHR-289E ONLY
OR	645 005 1302	SWITCH,PUSH 1P-1T, PAUSE,VHR-289E ONLY
S7105	613 093 8596	SW,PUSH, PLAY,VHR-289E ONLY
OR	645 005 1302	SWITCH,PUSH 1P-1T, PLAY,VHR-289E ONLY
S7106	645 005 1302	SWITCH,PUSH 1P-1T, STOP/EJECT, VHR-289E ONLY
OR	613 093 8596	SW,PUSH, STOP/EJECT,VHR-289E ONLY
S7107	645 008 8049	SWITCH,PUSH 1P-1T, REC LIST DELUX, VHR-289E ONLY
OR	645 006 2797	SWITCH,PUSH 1P-1T, REC,VHR-289E ONLY
OR	645 001 9777	SWITCH,PUSH 1P-1T, REC LIST DELUX, VHR-289E ONLY

COMPL PWB,TM-2

	613 184 4797	VHR-289E ONLY
	(CONNECTORS)	
CN722	645 003 1755	SOCKET,RIBBON 4P (N.S.P),VHR-289E ONLY
	(DIODES)	
D7201	408 040 4000	LED SEL2415EMTP6-C, POWER LED, VHR-289E ONLY
OR	408 040 4109	LED SEL2415EMTP6-D, POWER LED, VHR-289E ONLY
OR	408 039 4509	LED SLZ-381B-09H-AB-T1, POWER LED, VHR-289E ONLY
	(RESISTORS)	
R7204	401 014 2804	CARBON 150 JA 1/4W,VHR-289E ONLY
	(SWITCHES)	
S7201	613 093 8596	SW,PUSH, POWER,VHR-289E ONLY
OR	613 079 4178	SW,PUSH, POWER,VHR-289E ONLY
OR	613 006 3700	PUSH SWITCH, POWER,VHR-289E ONLY
OR	645 005 1302	SWITCH,PUSH 1P-1T, POWER,VHR-289E ONLY

COMPL PWB,TB-1

	613 184 4957	VHR-289E ONLY
	613 185 7605	VHR-249EX ONLY
	613 184 0867	VHR-279E,VHR-279EV
	613 184 6463	VHR-279SP,VHR-269SP
	(CONNECTORS)	
CN851	645 003 0925	PLUG,11P (N.S.P),VHR-279SP,VHR-269SP
CN851	645 013 4548	PLUG,6P (N.S.P), VHR-279E,VHR-249EX,VHR-279EV
CN851	645 008 5031	PLUG,8P (N.S.P),VHR-289E ONLY
CN861	645 003 0932	PLUG,13P (N.S.P),VHR-279SP,VHR-269SP
CN861	645 003 0918	PLUG,9P (N.S.P), EXCEPT VHR-279SP,VHR-269SP
CN871	645 021 1096	SOCKET,RGB 21P (N.S.P)
OR	645 018 7605	SOCKET,RGB 21P (N.S.P)

LOCATION	PARTS NO.	DESCRIPTION
CN872	645 021 1102	SOCKET,RGB 21P (N.S.P), VHR-279SP,VHR-269SP
OR	645 020 9475	SOCKET,RGB 21P (N.S.P), VHR-279SP,VHR-269SP
CN872	645 018 7605	SOCKET,RGB 21P (N.S.P),VHR-289E ONLY
OR	645 021 1096	SOCKET,RGB 21P (N.S.P),VHR-289E ONLY
	(SEMICONDUCTORS)	
Q8604	405 029 3504	TR DTC144EK,VHR-279SP,VHR-269SP
Q8605	405 002 0407	TR 2SA1037K-S,VHR-279SP,VHR-269SP
OR	405 002 0308	TR 2SA1037K-R,VHR-279SP,VHR-269SP
	(INTEGRATED CIRCUITS)	
IC861	409 432 5001	IC LA7148M-MPB,VHR-279SP,VHR-269SP
	(DIODES)	
D8604	407 012 4406	DIODE 1SS133,VHR-279SP,VHR-269SP
D8605	407 012 4406	DIODE 1SS133,VHR-279SP,VHR-269SP
D8606	407 012 4406	DIODE 1SS133,VHR-279SP,VHR-269SP
D8607	407 012 4406	DIODE 1SS133,VHR-279SP,VHR-269SP
D8608	407 063 8804	ZENER DIODE MTZJ5.6A, VHR-279SP,VHR-269SP
D8609	407 063 8804	ZENER DIODE MTZJ5.6A, VHR-279SP,VHR-269SP
D8610	407 063 8804	ZENER DIODE MTZJ5.6A, VHR-279SP,VHR-269SP
D8611	407 063 8804	ZENER DIODE MTZJ5.6A, VHR-279SP,VHR-269SP
D8612	407 099 7000	ZENER DIODE MTZJ15B,VHR-279SP,VHR-269SP
D8613	407 099 7000	ZENER DIODE MTZJ15B
	(INDUCTORS)	
L8502	645 025 0644	INDUCTOR,0.75UH
L8503	645 025 0644	INDUCTOR,0.75UH, VHR-289E,VHR-279SP,VHR-269SP
	(CAPACITORS)	
C8504	403 010 1102	CERAMIC 1000P J 50V
C8508	403 010 1102	CERAMIC 1000P J 50V
C8513	403 010 1102	CERAMIC 1000P J 50V, VHR-289E,VHR-279SP,VHR-269SP
C8531	403 010 1102	CERAMIC 1000P J 50V, VHR-279SP,VHR-269SP
C8572	403 189 2405	ELECT 10U M 16V,VHR-279SP,VHR-269SP
C8574	403 189 2405	ELECT 10U M 16V,VHR-279SP,VHR-269SP
C8577	403 163 8409	ELECT 47U M 16V,VHR-279SP,VHR-269SP
C8578	403 189 2405	ELECT 10U M 16V,VHR-279SP,VHR-269SP
C8579	403 191 8709	ELECT 1U M 50V,VHR-279SP,VHR-269SP
C8580	403 191 8709	ELECT 1U M 50V,VHR-279SP,VHR-269SP
C8581	403 191 8709	ELECT 1U M 50V,VHR-279SP,VHR-269SP
C8582	403 191 8709	ELECT 1U M 50V,VHR-279SP,VHR-269SP
C8601	403 191 8709	ELECT 1U M 50V,VHR-279SP,VHR-269SP
C8602	403 191 8709	ELECT 1U M 50V,VHR-279SP,VHR-269SP
C8603	403 026 2803	CERAMIC 47P J 50V,VHR-279SP,VHR-269SP
C8605	403 068 0409	CERAMIC 0.1U Z 25V, VHR-279SP,VHR-269SP
C8606	403 163 8409	ELECT 47U M 16V,VHR-279SP,VHR-269SP
C8607	403 068 0409	CERAMIC 0.1U Z 25V, VHR-279SP,VHR-269SP
C8609	403 135 4101	ELECT 470U M 6.3V,VHR-279SP,VHR-269SP
C8610	403 086 2805	NP-ELECT 1U M 50V, VHR-279SP,VHR-269SP
C8611	403 191 8709	ELECT 1U M 50V,VHR-279SP,VHR-269SP
C8613	403 026 2209	CERAMIC 47P J 50V, VHR-279SP,VHR-269SP
C8614	403 026 2209	CERAMIC 47P J 50V, VHR-279SP,VHR-269SP
C8615	403 163 7907	ELECT 47U M 6.3V,VHR-279SP,VHR-269SP
	(RESISTORS)	
R8502	401 038 2101	MT-GLAZE 2.7K JA 1/10W
R8504	401 038 7601	MT-GLAZE 560 JA 1/10W
R8505	401 038 0909	MT-GLAZE 220K JA 1/10W, VHR-279SP,VHR-269SP
R8508	401 038 2101	MT-GLAZE 2.7K JA 1/10W, VHR-289E,VHR-279SP,VHR-269SP
R8522	401 038 2101	MT-GLAZE 2.7K JA 1/10W
R8528	401 038 2101	MT-GLAZE 2.7K JA 1/10W, VHR-289E,VHR-279SP,VHR-269SP
R8529	401 038 7601	MT-GLAZE 560 JA 1/10W, VHR-279SP,VHR-269SP
R8592	401 037 5004	MT-GLAZE 0.000 ZA 1/10W, EXCEPT VHR-279SP,VHR-269SP
R8592	401 038 0602	MT-GLAZE 220 JA 1/10W, VHR-279SP,VHR-269SP
R8601	401 038 9506	MT-GLAZE 75 JA 1/10W
R8602	401 038 9506	MT-GLAZE 75 JA 1/10W, VHR-289E,VHR-279SP,VHR-269SP
R8609	401 038 9506	MT-GLAZE 75 JA 1/10W, VHR-279SP,VHR-269SP
R8611	401 018 2701	CARBON 330 JA 1/4W, VHR-279SP,VHR-269SP
R8612	401 014 2804	CARBON 150 JA 1/4W, VHR-279SP,VHR-269SP
R8613	401 014 2804	CARBON 150 JA 1/4W, VHR-279SP,VHR-269SP
R8614	401 037 5202	MT-GLAZE 100 JA 1/10W, VHR-279SP,VHR-269SP
R8615	401 037 5202	MT-GLAZE 100 JA 1/10W, VHR-279SP,VHR-269SP
R8620	401 037 9309	MT-GLAZE 18K JA 1/10W, VHR-279SP,VHR-269SP
R8621	401 038 6406	MT-GLAZE 4.7K JA 1/10W, VHR-279SP,VHR-269SP
R8624	401 038 0701	MT-GLAZE 2.2K JA 1/10W, VHR-279SP,VHR-269SP
R8625	401 038 6406	MT-GLAZE 4.7K JA 1/10W, VHR-279SP,VHR-269SP
R8626	401 037 5004	MT-GLAZE 0.000 ZA 1/10W, VHR-279SP,VHR-269SP
R8630	401 037 6803	MT-GLAZE 12K JA 1/10W, VHR-279SP,VHR-269SP
R8631	401 039 0403	MT-GLAZE 8.2K JA 1/10W, VHR-279SP,VHR-269SP
	(JUMPERS)	
	401 037 5004	MT-GLAZE 0.000 ZA 1/10W

FLEXIBLE FLAT CABLE

645 031 6081	FLEXIBLE FLAT CABLE, CP1(CN351)-STATOR CYL(CN1)
645 032 2129	FLEXIBLE FLAT CABLE,CN701-CN711, VHR-289E ONLY

ACCESSORIES

613 179 2531	COVER BATTERY,FOR REMOCON,INFRARED
645 032 5847	REMOCON,INFRARED,WITH COVER BATTERY, VHR-279SP ONLY
645 032 6257	REMOCON,INFRARED,WITH COVER BATTERY, VHR-249EX ONLY
645 032 5618	REMOCON,INFRARED,WITH COVER BATTERY, VHR-289E ONLY
645 033 7765	REMOCON,INFRARED,WITH COVER BATTERY, VHR-279EV ONLY
645 033 2357	REMOCON,INFRARED,WITH COVER BATTERY, VHR-269SP ONLY
645 031 7781	REMOCON,INFRARED,WITH COVER BATTERY, VHR-279E ONLY
613 184 4773	INSTRUCTION MANUAL,VHR-289E ONLY
613 184 9815	INSTRUCTION MANUAL,VHR-279EV ONLY
613 184 7422	INSTRUCTION MANUAL,VHR-249EX ONLY
613 184 0669	INSTRUCTION MANUAL,VHR-279E ONLY
613 185 1818	INSTRUCTION MANUAL,VHR-269SP ONLY
613 184 5381	INSTRUCTION MANUAL,VHR-279SP ONLY
645 025 1382	CABLE,ANT PAL
OR 645 023 4170	CABLE,ANT PAL
⚠ 645 025 0767	CORD,POWER-1.5MK, EXCEPT VHR-279E,VHR-289E
OR ⚠ 645 024 0522	CORD,POWER-1.5MK, EXCEPT VHR-279E,VHR-289E
OR ⚠ 645 028 3086	CORD,POWER-1.525MK, EXCEPT VHR-279E,VHR-289E
OR ⚠ 645 023 4163	CORD,POWER-1.5MK, EXCEPT VHR-279E,VHR-289E
⚠ 645 023 4156	CORD,POWER-1.5MK,VHR-279E,VHR-289E
OR ⚠ 645 019 1923	CORD,POWER-1.8MK,VHR-279E,VHR-289E
OR ⚠ 613 136 6411	CORD,POWER,VHR-279E,VHR-289E

LOCATION	PARTS NO.	DESCRIPTION

PACKING MATERIALS

	613 184 0942	CARTON CASE,VHR-279E ONLY
	613 185 0033	CARTON CASE,VHR-279EV ONLY
	613 184 4858	CARTON CASE,VHR-289E ONLY
	613 184 5367	CARTON CASE,VHR-279SP ONLY
	613 185 2525	CARTON CASE,VHR-269SP ONLY
	613 184 8504	CARTON CASE,VHR-249EX ONLY
	613 183 5856	CUSHION, FRONT(SID)
	613 183 5863	CUSHION, BACK(SID)
	613 139 8047	POLYE COVER,INNER-K

SANYO Electric Co.,Ltd.
Osaka, Japan

Jan./'99/3500 NS Printed in Japan

VHR-279E VHR-289E
VHR-269SP VHR-279SP
VHR-249EX VHR-279EV

BLOCK DIAGRAMS,CIRCUIT DIAGRAMS & PRINTED WIRING BOARDS

TABLE OF CONTENTS

Page

1. OVERALL WIRING & BLOCK DIAGRAMS

OVERALL WIRING 1
AUDIO CIRCUIT 3
SYSTEM CONTROL & SERVO CIRCUIT 4
VIDEO CIRCUIT 7
DECODER INTERFACE (VHR-269SP AND VHR-279SP) 10

2. CIRCUIT DIAGRAMS & PRINTED WIRING BOARDS (P.W.B.)

CP-1 BOARD (PW-A) POWER SUPPLY 11
CP-1 P.W.B. 13
IC301 SYSTEM CONTROL, TIMER, TUNING CONTROL, OSC & SERVO MPU PIN FUNCTIONS 16
SERVO CIRCUIT WAVEFORMS 16
CP-1 BOARD (SY-A) SYSTEM CONTROL, TIMER, TUNER, OSC & SERVO 17
CP-1 BOARD (VA-A) VIDEO & AUDIO 19
VIDEO CIRCUIT WAVEFORMS 21
CP-1 BOARD (AD-A) AUDIO(EXPECT VHR-269SP AND VHR-279SP) 22
CP-1 BOARD (AD-A) AUDIO(VHR-269SP AND VHR-279SP) 24
CP-1 BOARD (TM-A) DISPLAY (FLD) & KEY SCAN 25
TM-1 BOARD SWITCH (VHR-289E ONLY) 25
TM-2 BOARD SWITCH (VHR-289E ONLY) 25
A7001 DISPLAY (FLD) GRID/ANODE ASSIGNMENT DRAWING & TABLE 26
TM-1 P.W.B. (VHR-289E ONLY) 27
TM-2 P.W.B. (VHR-289E ONLY) 27
CP-1 BOARD (MC-A) MECHANISM SENSOR 28
CP-1 BOARD (TC-A) VPS/PDC (VHR-279E, VHR-289E AND VHR-279EV) 28
TB-1 P.W.B. 29
TB-1 BOARD TERMINAL(EXPECT VHR-269SP AND VHR-279SP) 31
TB-1 BOARD TERMINAL AND DECODER INTERFACE(VHR-269SP AND VHR-279SP) 33

REFERENCE No.SM5310003

NOTES:

1. All resistance values in "OHMS" unless otherwise noted.
   (K=1,000; M=1,000,000)
2. All capacitance values in "μF" unless otherwise noted.
   p=pico farad ; μ,u or U=micro farad
3. All inductance values in "μH" unless otherwise noted.
   μ,u or U=micro henry ; m=milli henry

PRODUCTSAFETYNOTICE

THE COMPONENTS DESIGNATED BY A SYMBOL (⚠) IN THIS SCHEMATIC DIAGRAM DESIGNATES COMPONENTS WHOSE VALUEAREOFSPECIALSIGNIFICANCETOPRODUCTSAFETY. SHOULDANYCOMPONENTDESIGNATEDBYASYMBOLNEEDTO BEREPLACED,USEONLYTHEPARTDESIGNATEDINTHEPARTS LIST.
DONOTDEVIATEFROMTHERESISTANCE,WATTAGEANDVOLT-AGERATINGSSHOWN.

EXPLANATORY NOTES (EXAMPLES)

Resistor 10K:1/16J means 10kilo ohm ±5%, 1/16watt max.
1M:1/10K means 1mega ohm ±10%, 1/10watt max.
Capacitor 0.047:F means 0.047micro farad, Ftype.
Electrolytic capacitor
10:16 means 10micro farad, 16volt max.
Inductor 330:J means 330micro henry ±5%
470:K means 470micro henry ±10%
No description J or K means ±5%

PAL-C-EX

OVERALL WIRING

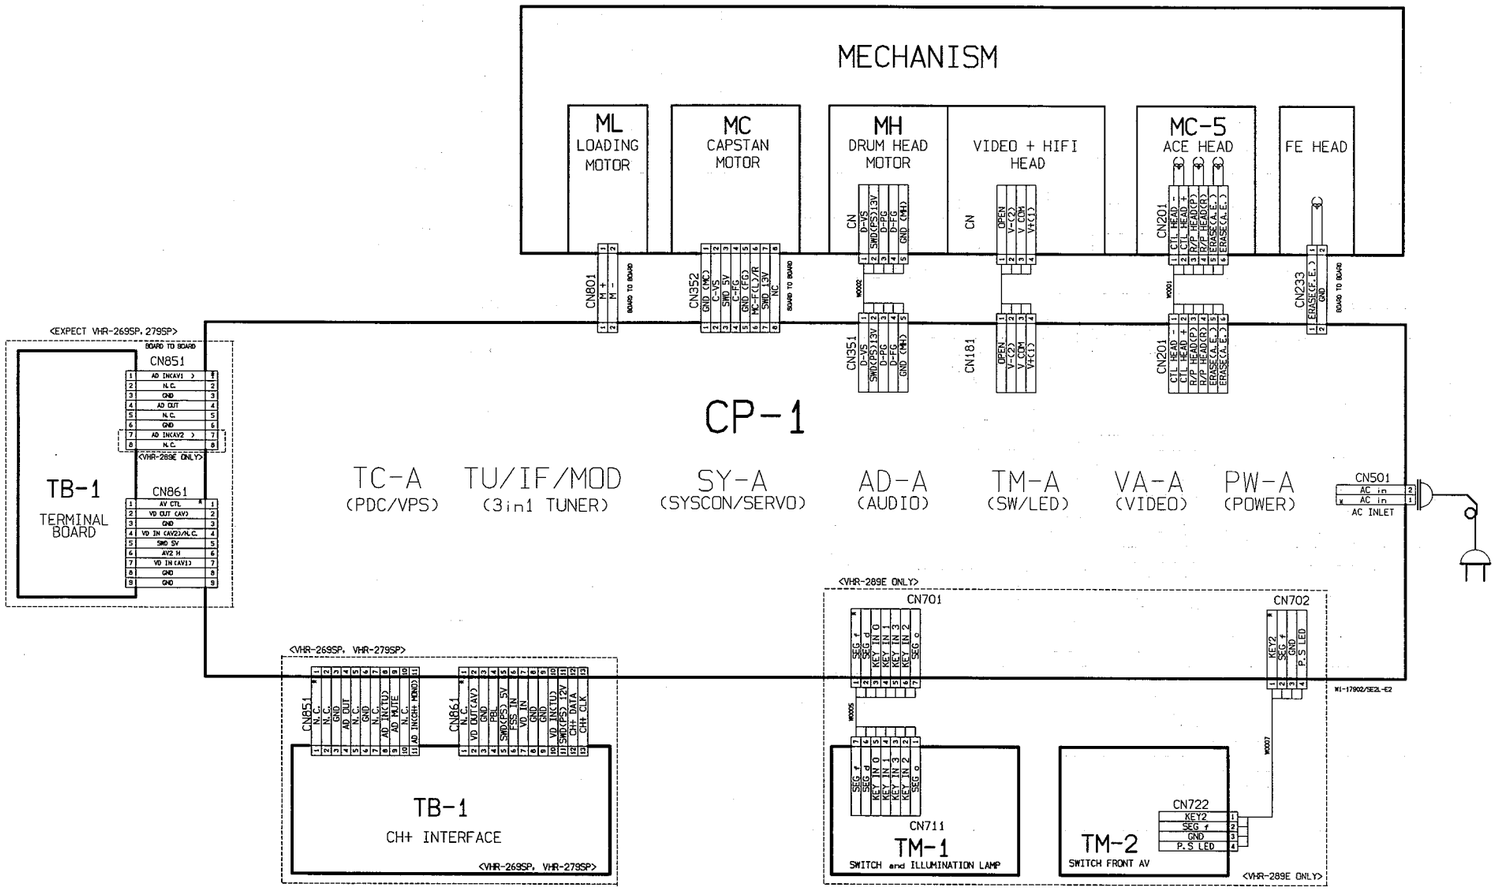

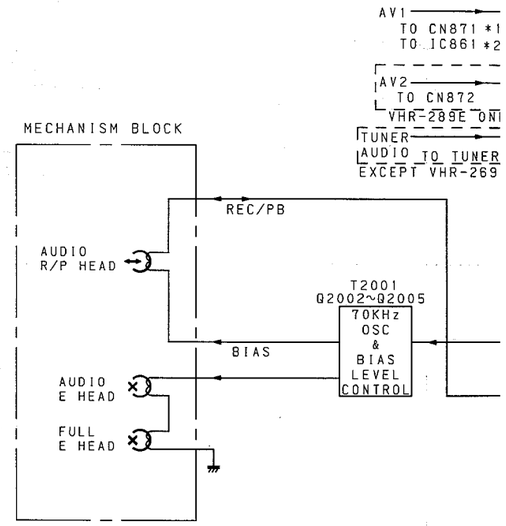

G

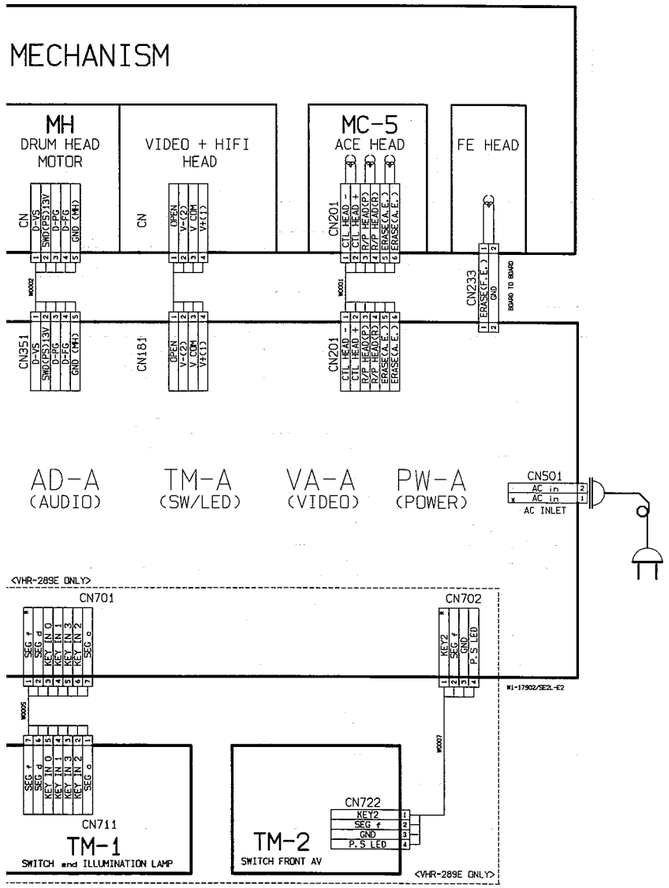

AUDIO CIRCUIT

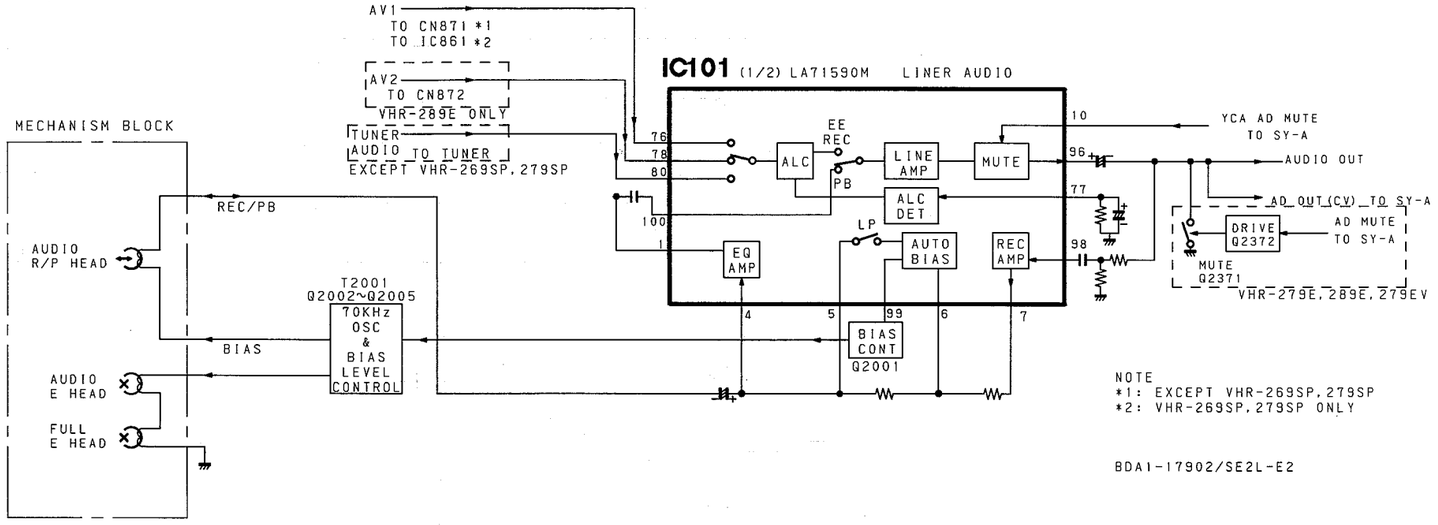

NOTE
*1: EXCEPT VHR-269SP,279SP
*2: VHR-269SP,279SP ONLY

BDA1-17902/SE2L-E2

7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23

–1– –2– –3–

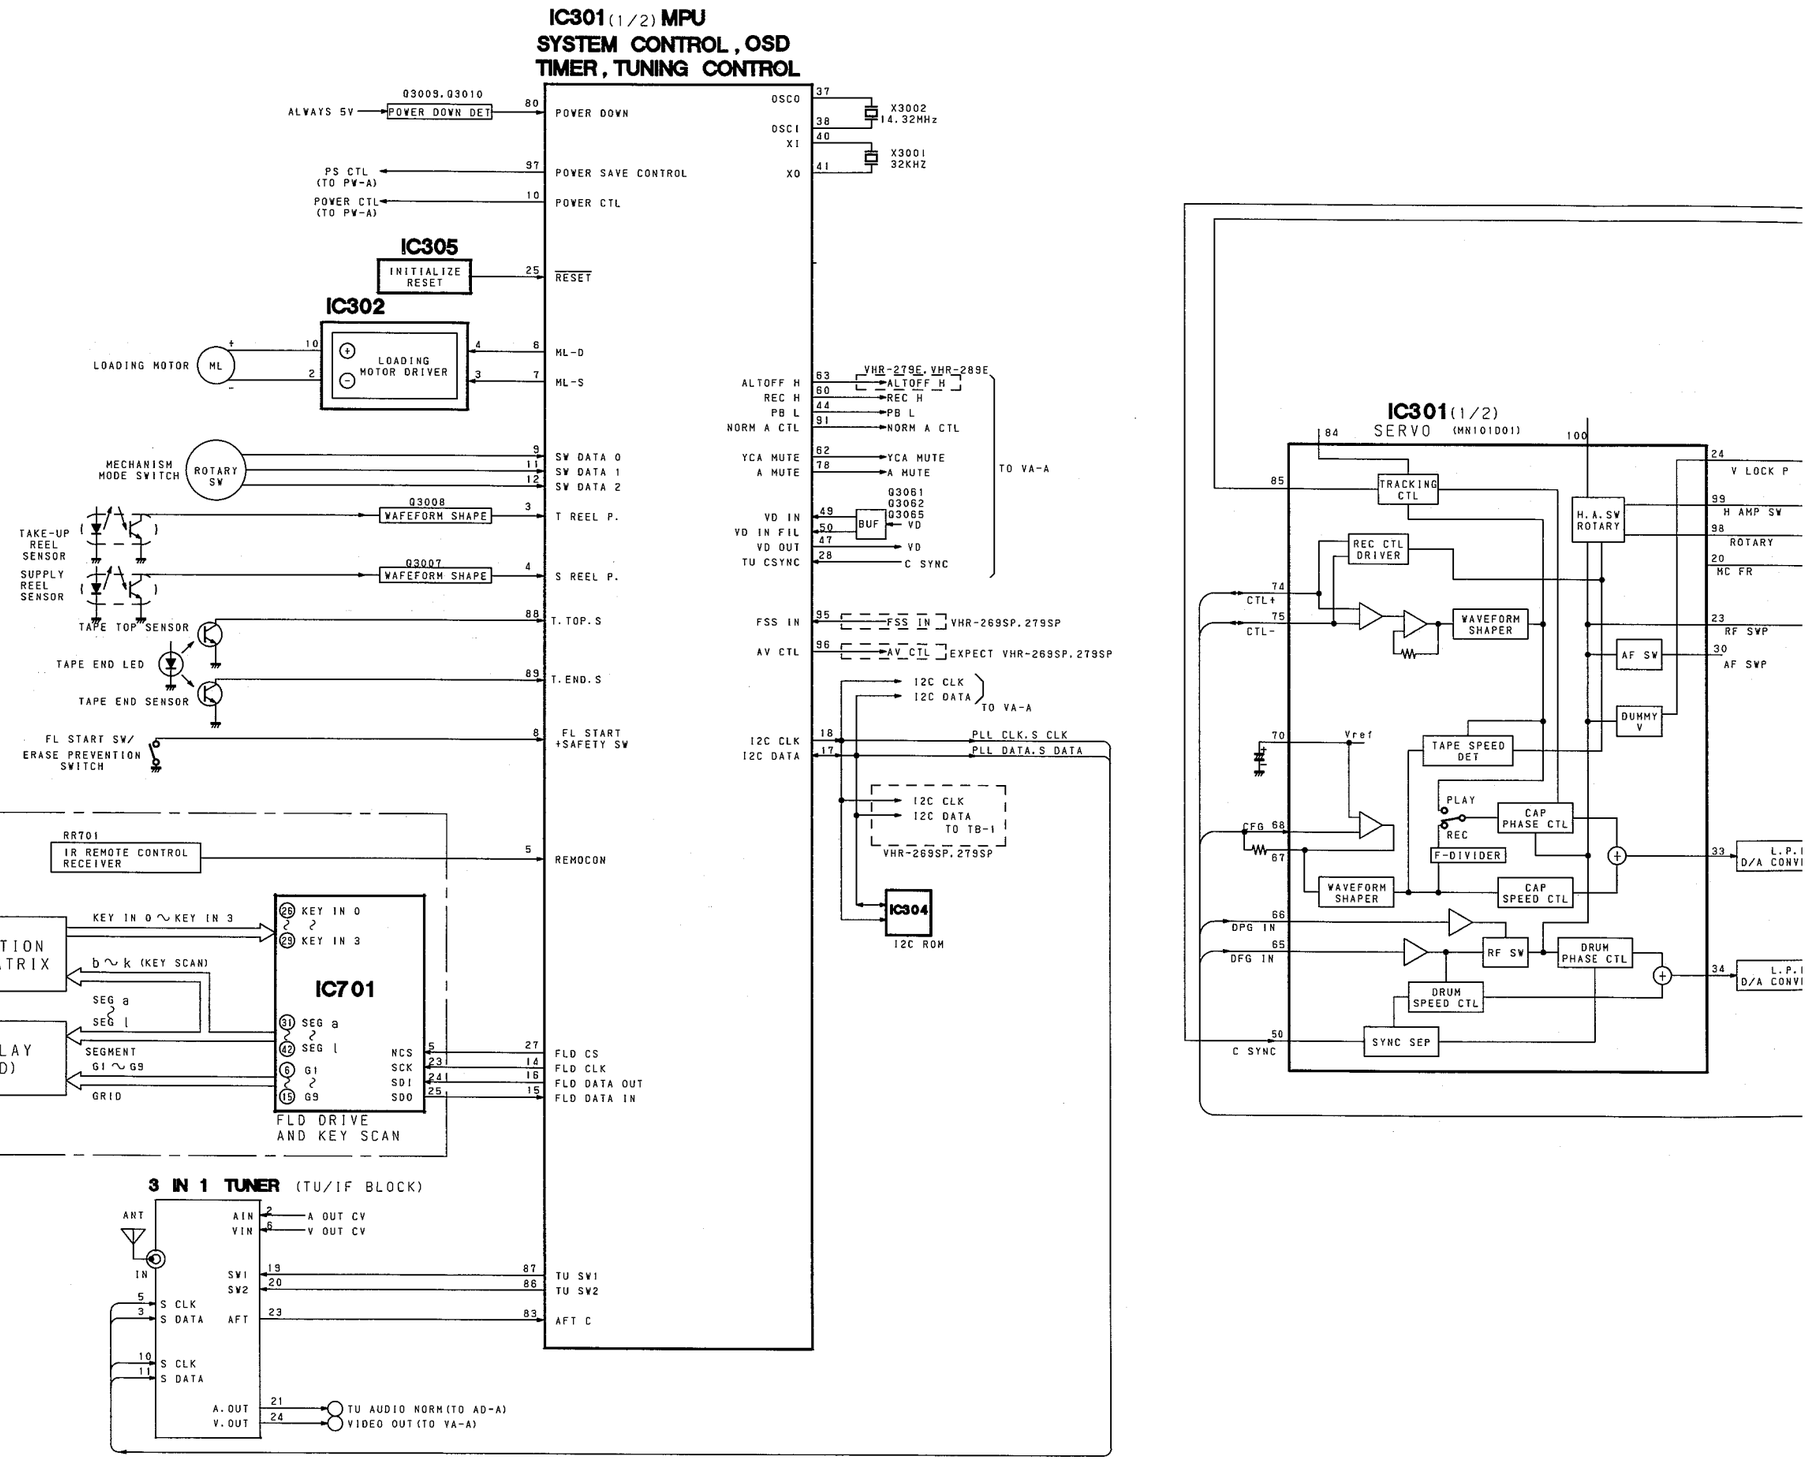
IC301 (1/2) MPU
SYSTEM CONTROL, OSD
TIMER, TUNING CONTROL
Q3009, Q3010
ALWAYS 5V
POWER DOWN DET
80
POWER DOWN
PS CTL (TO PW-A)
97
POWER SAVE CONTROL
POWER CTL (TO PW-A)
10
POWER CTL
IC305
INITIALIZE RESET
25
RESET
IC302
LOADING MOTOR
ML
LOADING MOTOR DRIVER
10
2
4
3
6
7
ML-D
ML-S
MECHANISM MODE SWITCH
ROTARY SW
9
11
12
SW DATA 0
SW DATA 1
SW DATA 2
Q3008
WAVEFORM SHAPE
3
T REEL P.
TAKE-UP REEL SENSOR
SUPPLY REEL SENSOR
Q3007
WAVEFORM SHAPE
4
S REEL P.
TAPE TOP SENSOR
88
T.TOP.S
TAPE END LED
TAPE END SENSOR
89
T.END.S
FL START SW/ ERASE PREVENTION SWITCH
8
FL START +SAFETY SW
OSCO
OSCI
XI
XO
37
38
40
41
X3002 14.32MHz
X3001 32KHZ
ALTOFF H
REC H
PB L
NORM A CTL
63
60
44
91
VHR-279E, VHR-289E
ALTOFF H
REC H
PB L
NORM A CTL
YCA MUTE
A MUTE
62
78
YCA MUTE
A MUTE
TO VA-A
VD IN
VD IN FIL
VD OUT
TU CSYNC
49
50
47
28
BUF
Q3061
Q3062
Q3065
VD
VD
C SYNC
FSS IN
AV CTL
95
96
FSS IN
AV CTL
VHR-269SP, 279SP
EXPECT VHR-269SP, 279SP
I2C CLK
I2C DATA
TO VA-A
I2C CLK
I2C DATA
18
17
PLL CLK.S CLK
PLL DATA.S DATA
I2C CLK
I2C DATA
TO TB-1
VHR-269SP, 279SP
IC304
I2C ROM
RR701
IR REMOTE CONTROL RECEIVER
5
REMOCON
OPERATION KEY-MATRIX
KEY IN 0 ~ KEY IN 3
b ~ k (KEY SCAN)
SEG a
SEG l
SEGMENT
G1 ~ G9
GRID
A7001
DISPLAY (FLD)
HEATER+
26
29
31
42
6
15
KEY IN 0
KEY IN 3
IC701
SEG a
SEG l
G1
G9
NCS
SCK
SDI
SDO
5
23
24
25
27
14
16
15
FLD CS
FLD CLK
FLD DATA OUT
FLD DATA IN
FLD DRIVE AND KEY SCAN
3 IN 1 TUNER (TU/IF BLOCK)
ANT
IN
AIN
VIN
SW1
SW2
S CLK
S DATA
AFT
S CLK
S DATA
A.OUT
V.OUT
2
6
19
20
5
3
23
10
11
21
24
A OUT CV
V OUT CV
87
86
83
TU SW1
TU SW2
AFT C
TU AUDIO NORM (TO AD-A)
VIDEO OUT (TO YA-A)
IC301 (1/2)
SERVO (MN101D01)
84
100
85
TRACKING CTL
REC CTL DRIVER
WAVEFORM SHAPER
74
75
CTL+
CTL-
H.A.SW ROTARY
AF SW
DUMMY V
70
Vref
TAPE SPEED DET
PLAY
REC
CAP PHASE CTL
F-DIVIDER
CFG 68
67
WAVEFORM SHAPER
CAP SPEED CTL
66
DFG IN
65
DFG IN
RF SW
DRUM PHASE CTL
DRUM SPEED CTL
50
C SYNC
SYNC SEP
24
V LOCK P
99
H AMP SW
98
ROTARY
20
MC FR
23
RF SWP
30
AF SWP
33
34
L.P.I D/A CONVI
L.P.I D/A CONVI

SYSTEM CONTROL & SERVO CIRCUIT

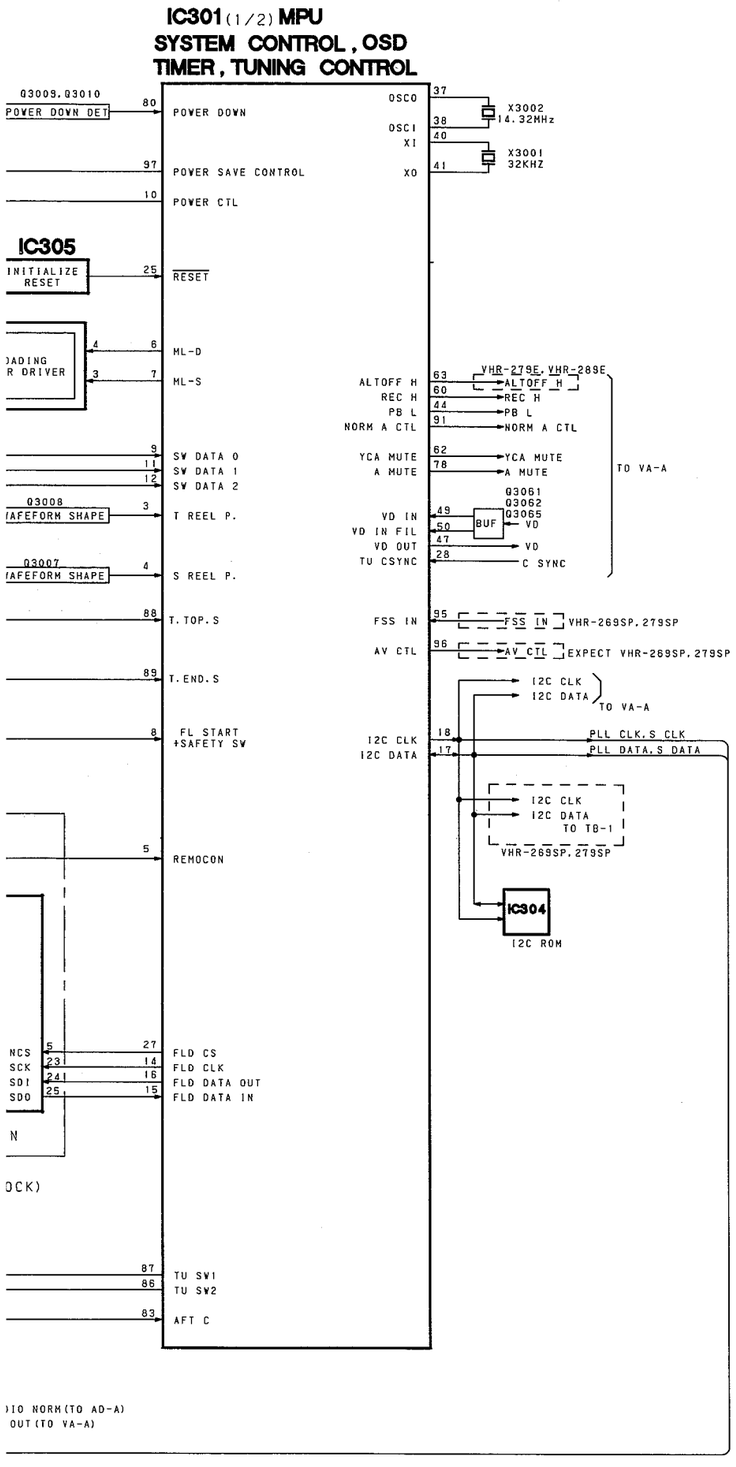

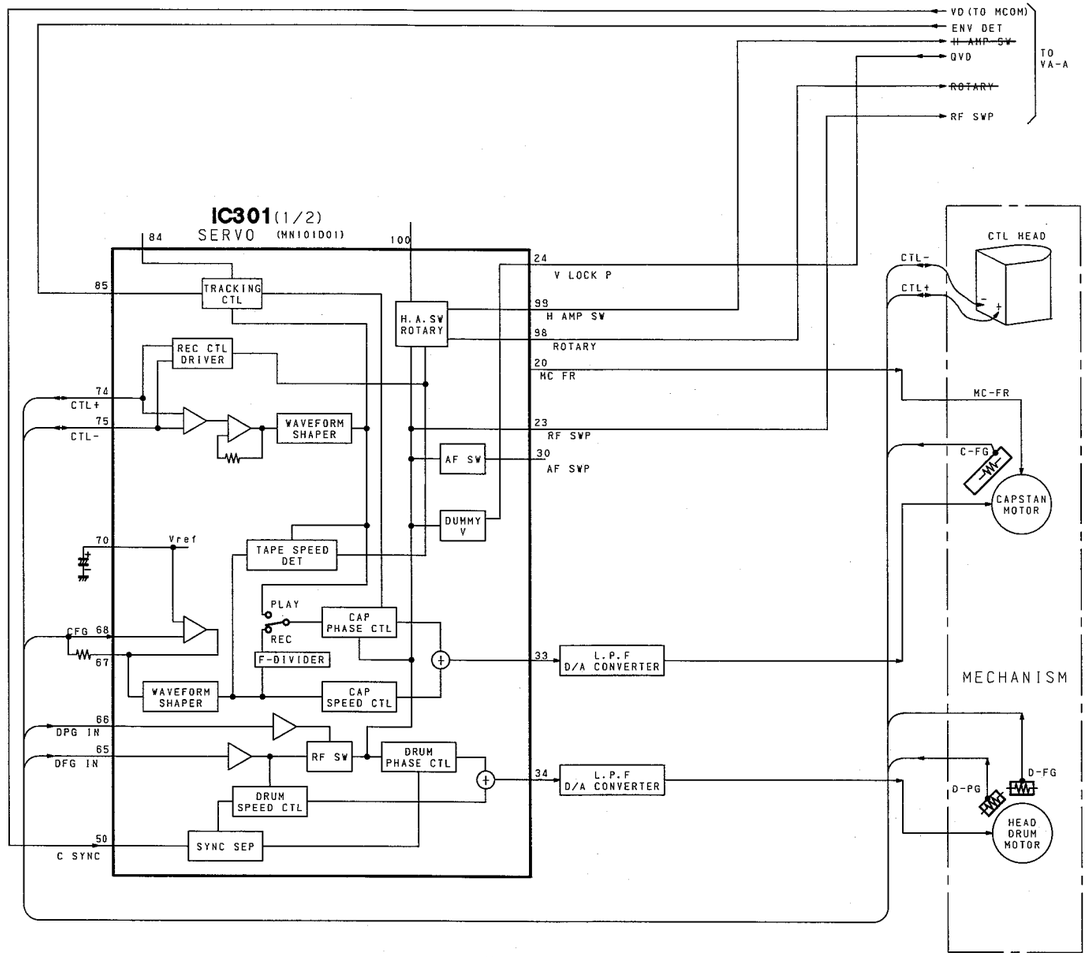

BDS1-17902/SE2L-E2

8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

VIDEO CIRCUIT

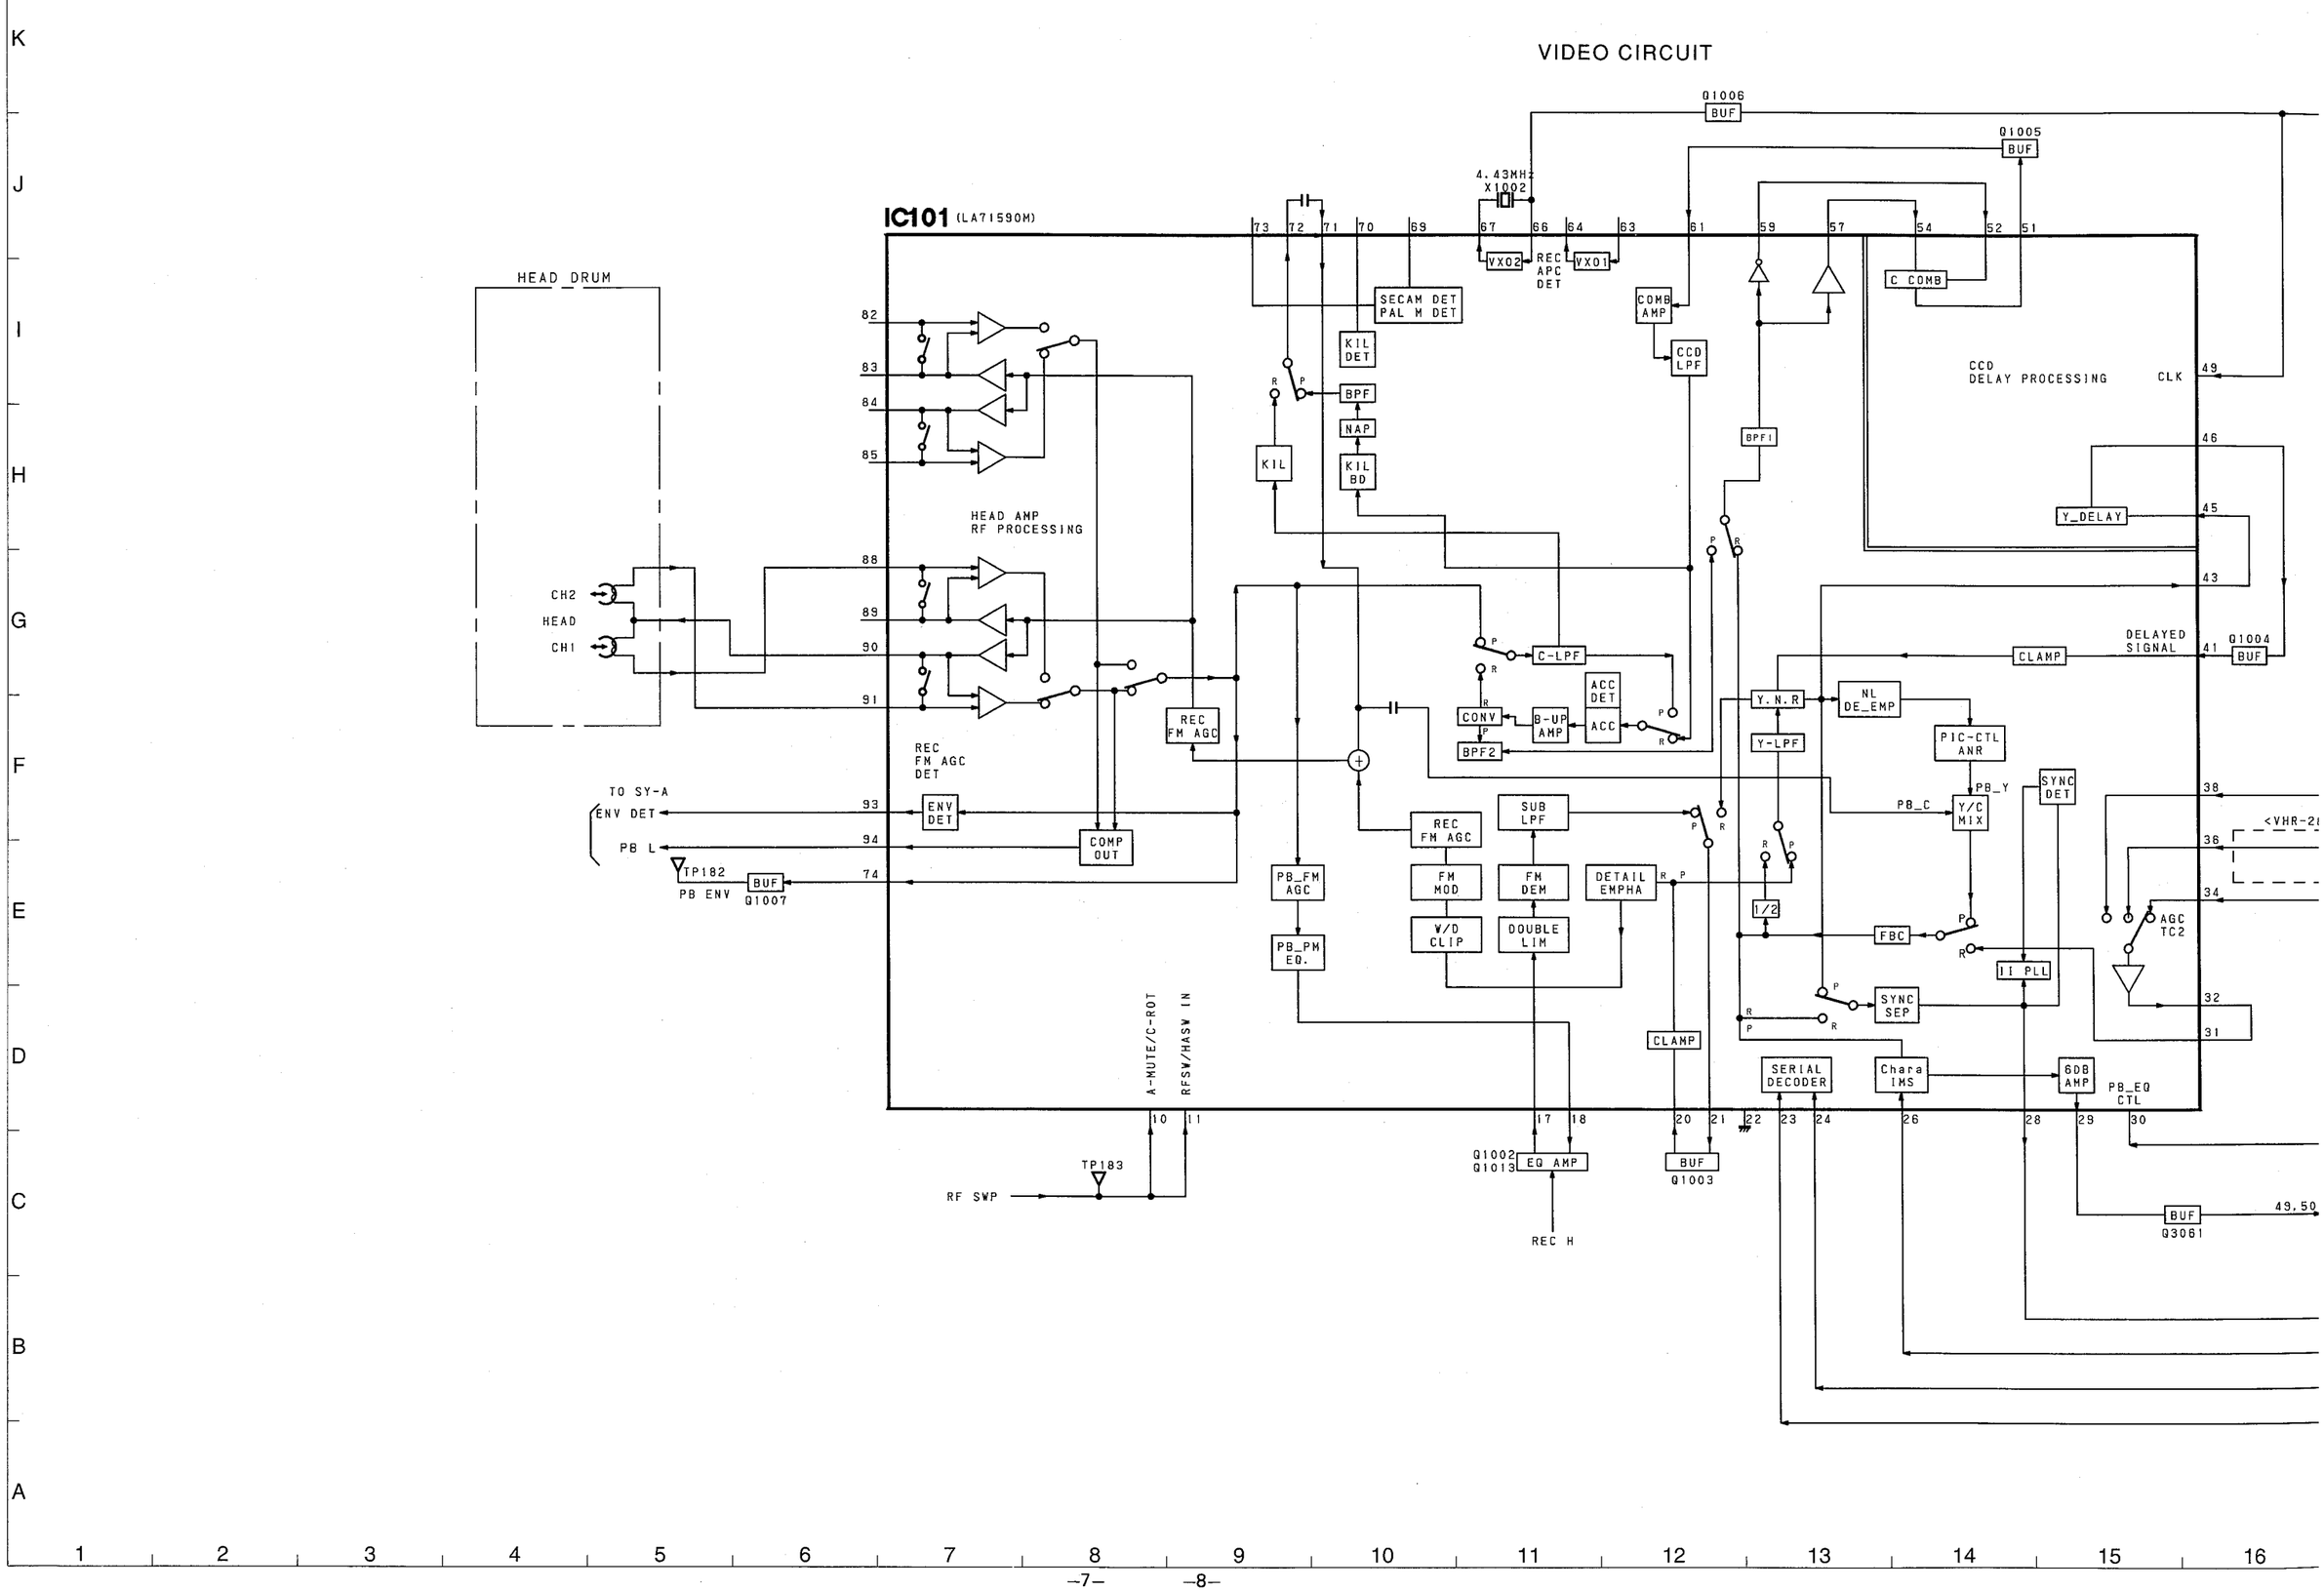

VIDEO CIRCUIT

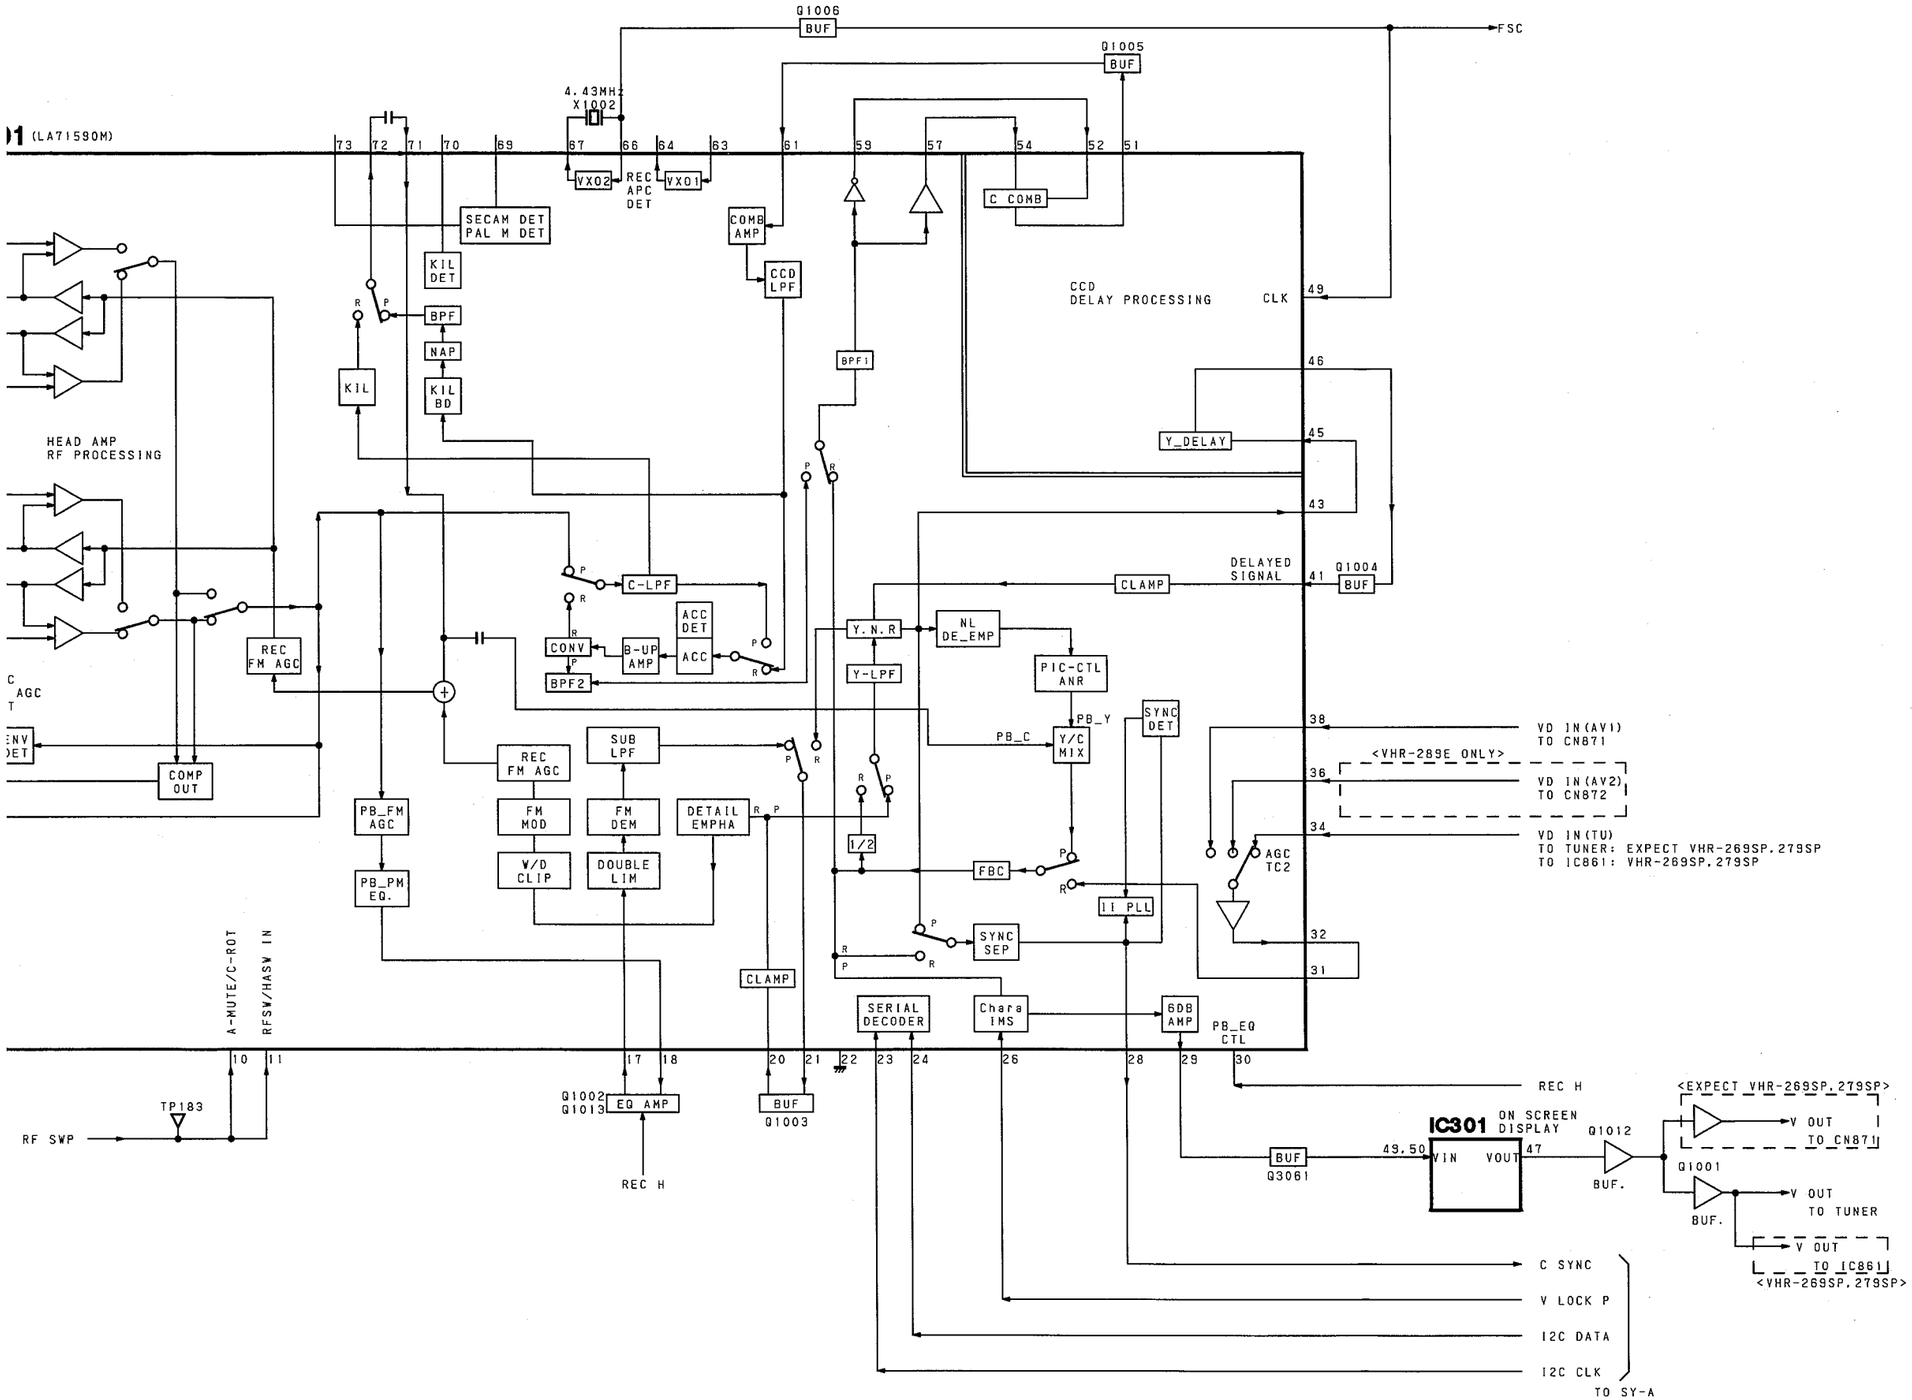

V1-17902/SE2L-E2

DECODER INTERFACE CIRCUIT (VHR-269SP AND VHR-279SP)

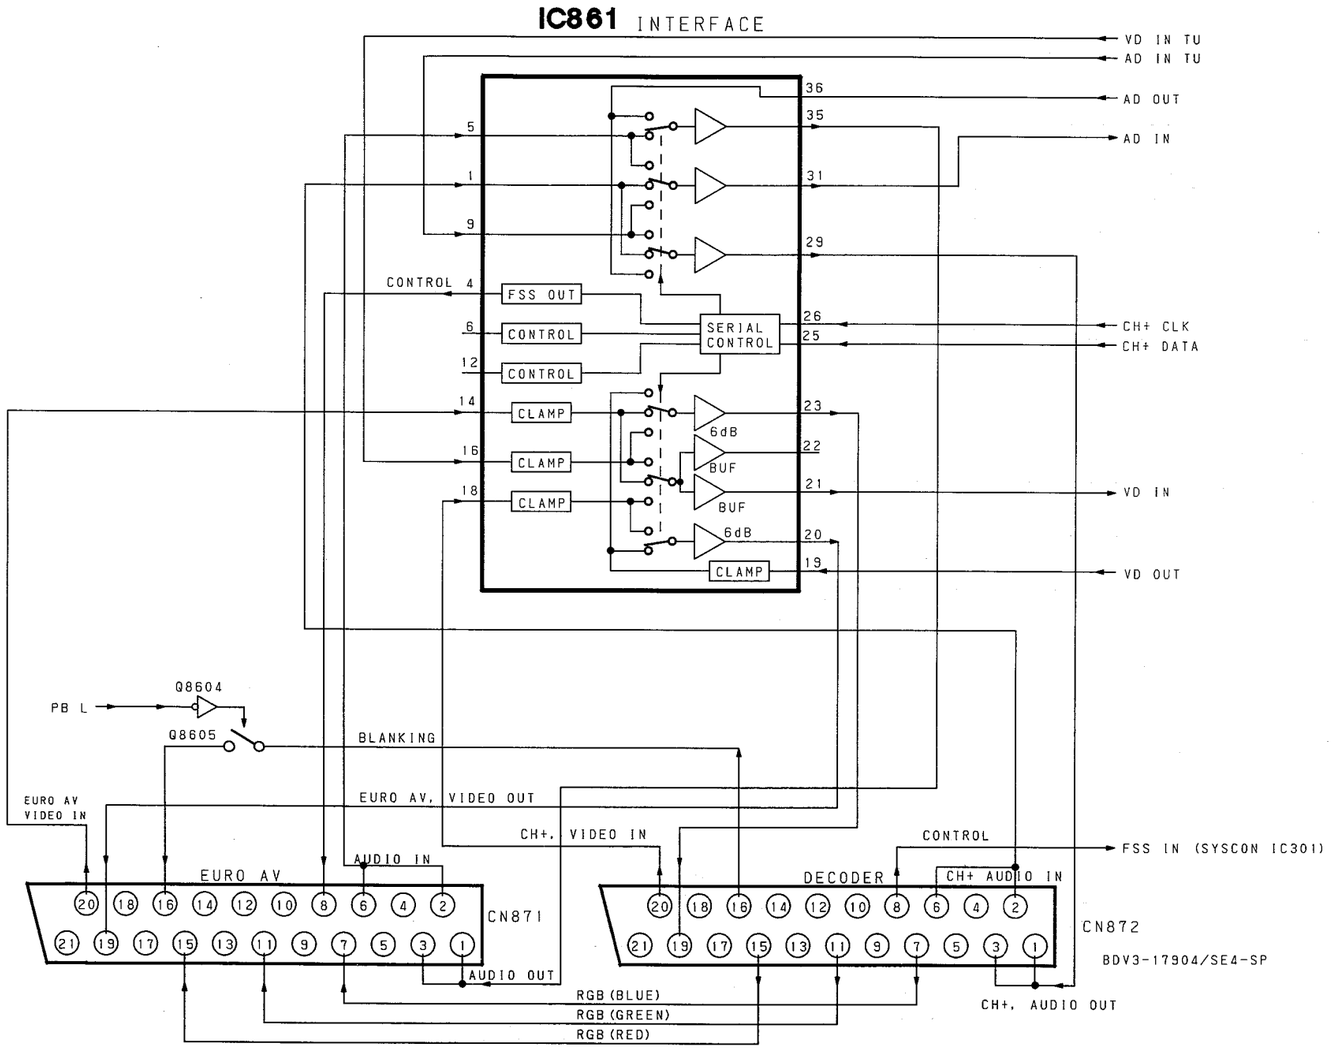

CP-1 BOARD (PW-A) P(

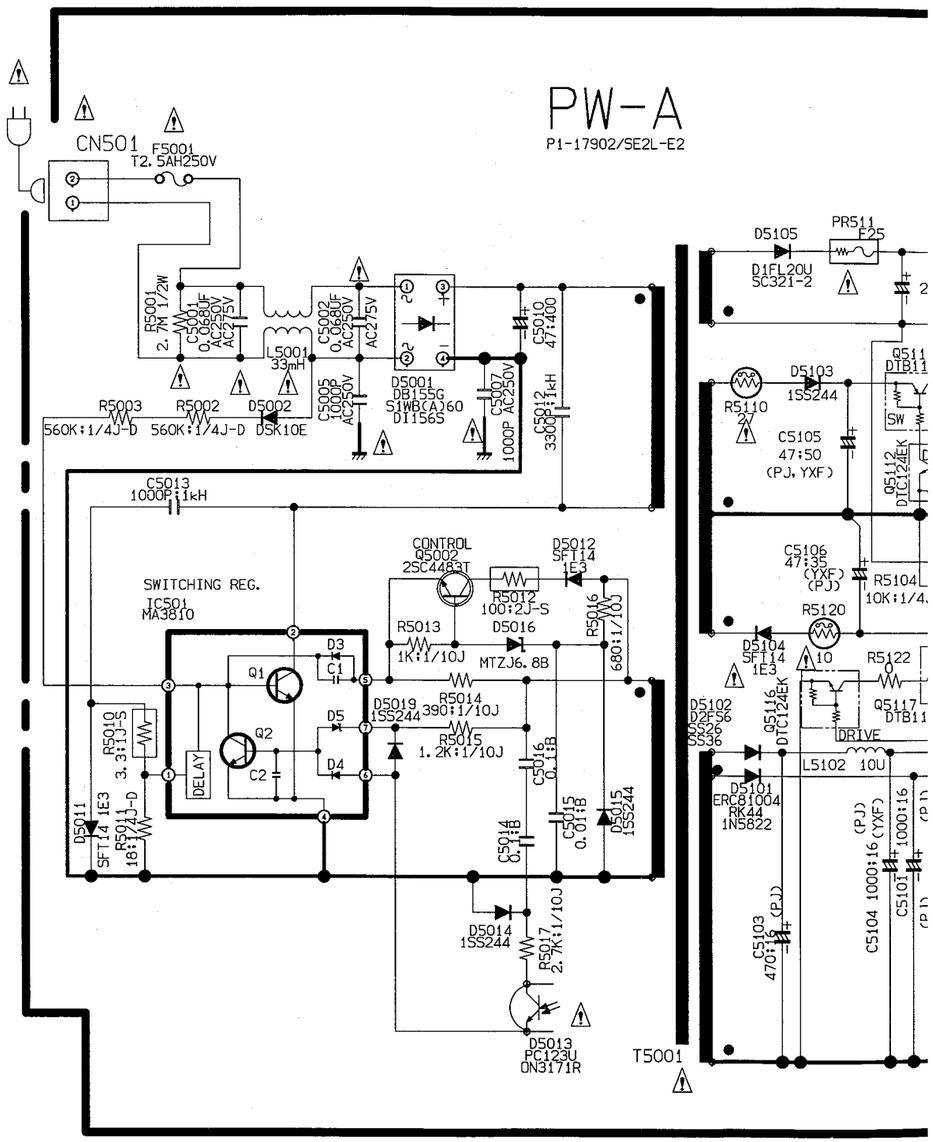

-279SP)

CP-1 BOARD (PW-A) POWER SUPPLY

VD IN TU
AD IN TU
AD OUT
AD IN
CH+ CLK
CH+ DATA
VD IN
VD OUT
CONTROL
FSS IN (SYSCON IC301)
CH+ AUDIO IN
CN872
BDV3-17904/SE4-SP
CH+, AUDIO OUT

PW-A
P1-17902/SE2L-E2

CN501
F5001 T2.5AH250V
R5001 2.7M 1/2W
C5001 0.068UF AC250V
C5002 0.068UF AC250V
AC275V
L5001 33mH
D5001 DB155G S1WB(A)60 D1156S
C5010 47:400
C5007 1000P AC250V
C5012 3300P:1kH
C5005 1000P AC250V
R5003 560K:1/4J-D
R5002 560K:1/4J-D
D5002 DSK10E
C5013 1000P:1kH
SWITCHING REG.
IC501 MA3810
CONTROL Q5002 2SC4483T
D5012 SFT14 1E3
R5012 100:2J-S
R5013 1K:1/10J
D5016 MTZJ6.8B
R5016 680:1/10J
R5014 390:1/10J
R5015 1.2K:1/10J
D5019 1SS244
C5016 0.1:B
C5015 0.01:B
D5015 1SS244
R5010 3.3:1J-S
D5011 SFT14 1E3
R5011 18:1/4J-D
D5014 1SS244
R5017 2.7K:1/10J
D5013 PC123U ON3171R
T5001
D5105 D1FL20U SC321-2
PR511 F25
R5121 3.9:1/4J-D
C5107 2201:3 (YXF) (PJ)
Q5110 DTB113ZK
D5103 1SS244
R5110 2
Q5111 DTB113ZK
C5105 47:50 (PJ, YXF)
Q5112 DTC124EK
DRIVE
R5119 47K:1/10J
C5122 0.1:B
Q5115 DTC144EK
C5106 47:35 (YXF) (PJ)
R5104 10K:1/4J-D
R5120
D5104 SFT14 1E3
R5122 0
Q5117 DTB113ZK
SW&REG D5115 1SS244
D5109 MTZJ5.6B
D5116 RD24MB
Q5113 DTC114EK
D5102 D2FS6 D5S26 D5S36
Q5116 DTC124EK
L5102 10U
L5101 10U
D5101 ERC81004 RK44 1N5822
C5103 470:16 (PJ)
C5104 1000:16 (YXF)
C5101 1000:16 (PJ)
D5111 MTZJ6.8A
R5101 390:1/4J-D
R5102 150:1/10J
D5013
C5135 0.1:B
R5135 120:1/10J
R5123 820:1/10J
IC511 UPC1093J REG
R5103 560:1/10J
R5111 560:1/10J
C5102 1000:6.3 (105)
R5116 2.7K:1/10J
Q5114 2SC5070
R5126 1K:1/10J
Q5120 2SC2274E, F
REG
D5112 ERA38-04
C5127 0.1:B
C5128 0.1:B
C5125 0.1:B
D5125 MTZJ6.2B
C5129 0.1:B
J5120
IC512 PQ09RF11
R5113 10K:1/10J
C5111 10:16
R5109 3.3K:1/10J
C5115 3.3:50
R5108 1.8K:1/10J
Q5103 2SC2274E, F, KE, KF
C5116 10:16
D5120 RB441Q
D5119 RB441Q
D5118 RB441Q
PR512 491002
PR513 4911.25
SW&REG
Q5101 2SC5070
Q5104 2SC4483S, T 2SD1858Q, R
Q5102 2SC4483S, T 2SD1858Q, R
R5106 470:1/4J-D
R5105 220:1/4J-D
D5107 MTZJ5.6B
C5114 10:16
C5112 10:16
C5119 3.3:50
HEATER +
HEATER -
PS CTL
SWD(PS) 37V
SWD 5V
SWD 5V(AD)
SWD(PS) 5V
GND(MH)
SWD(PS) -23V
SWD(PS) 13V (MC)
SWD(PS) 13V
ALWAYS 5.8V(LED)
ALWAYS 5V(FL)
ALWAYS 5V(2)
ALWAYS 5V(1)
SWD 9V
GND(MC, ML)
SWD(PS) 12V
GND (S)
POWER CTL

8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

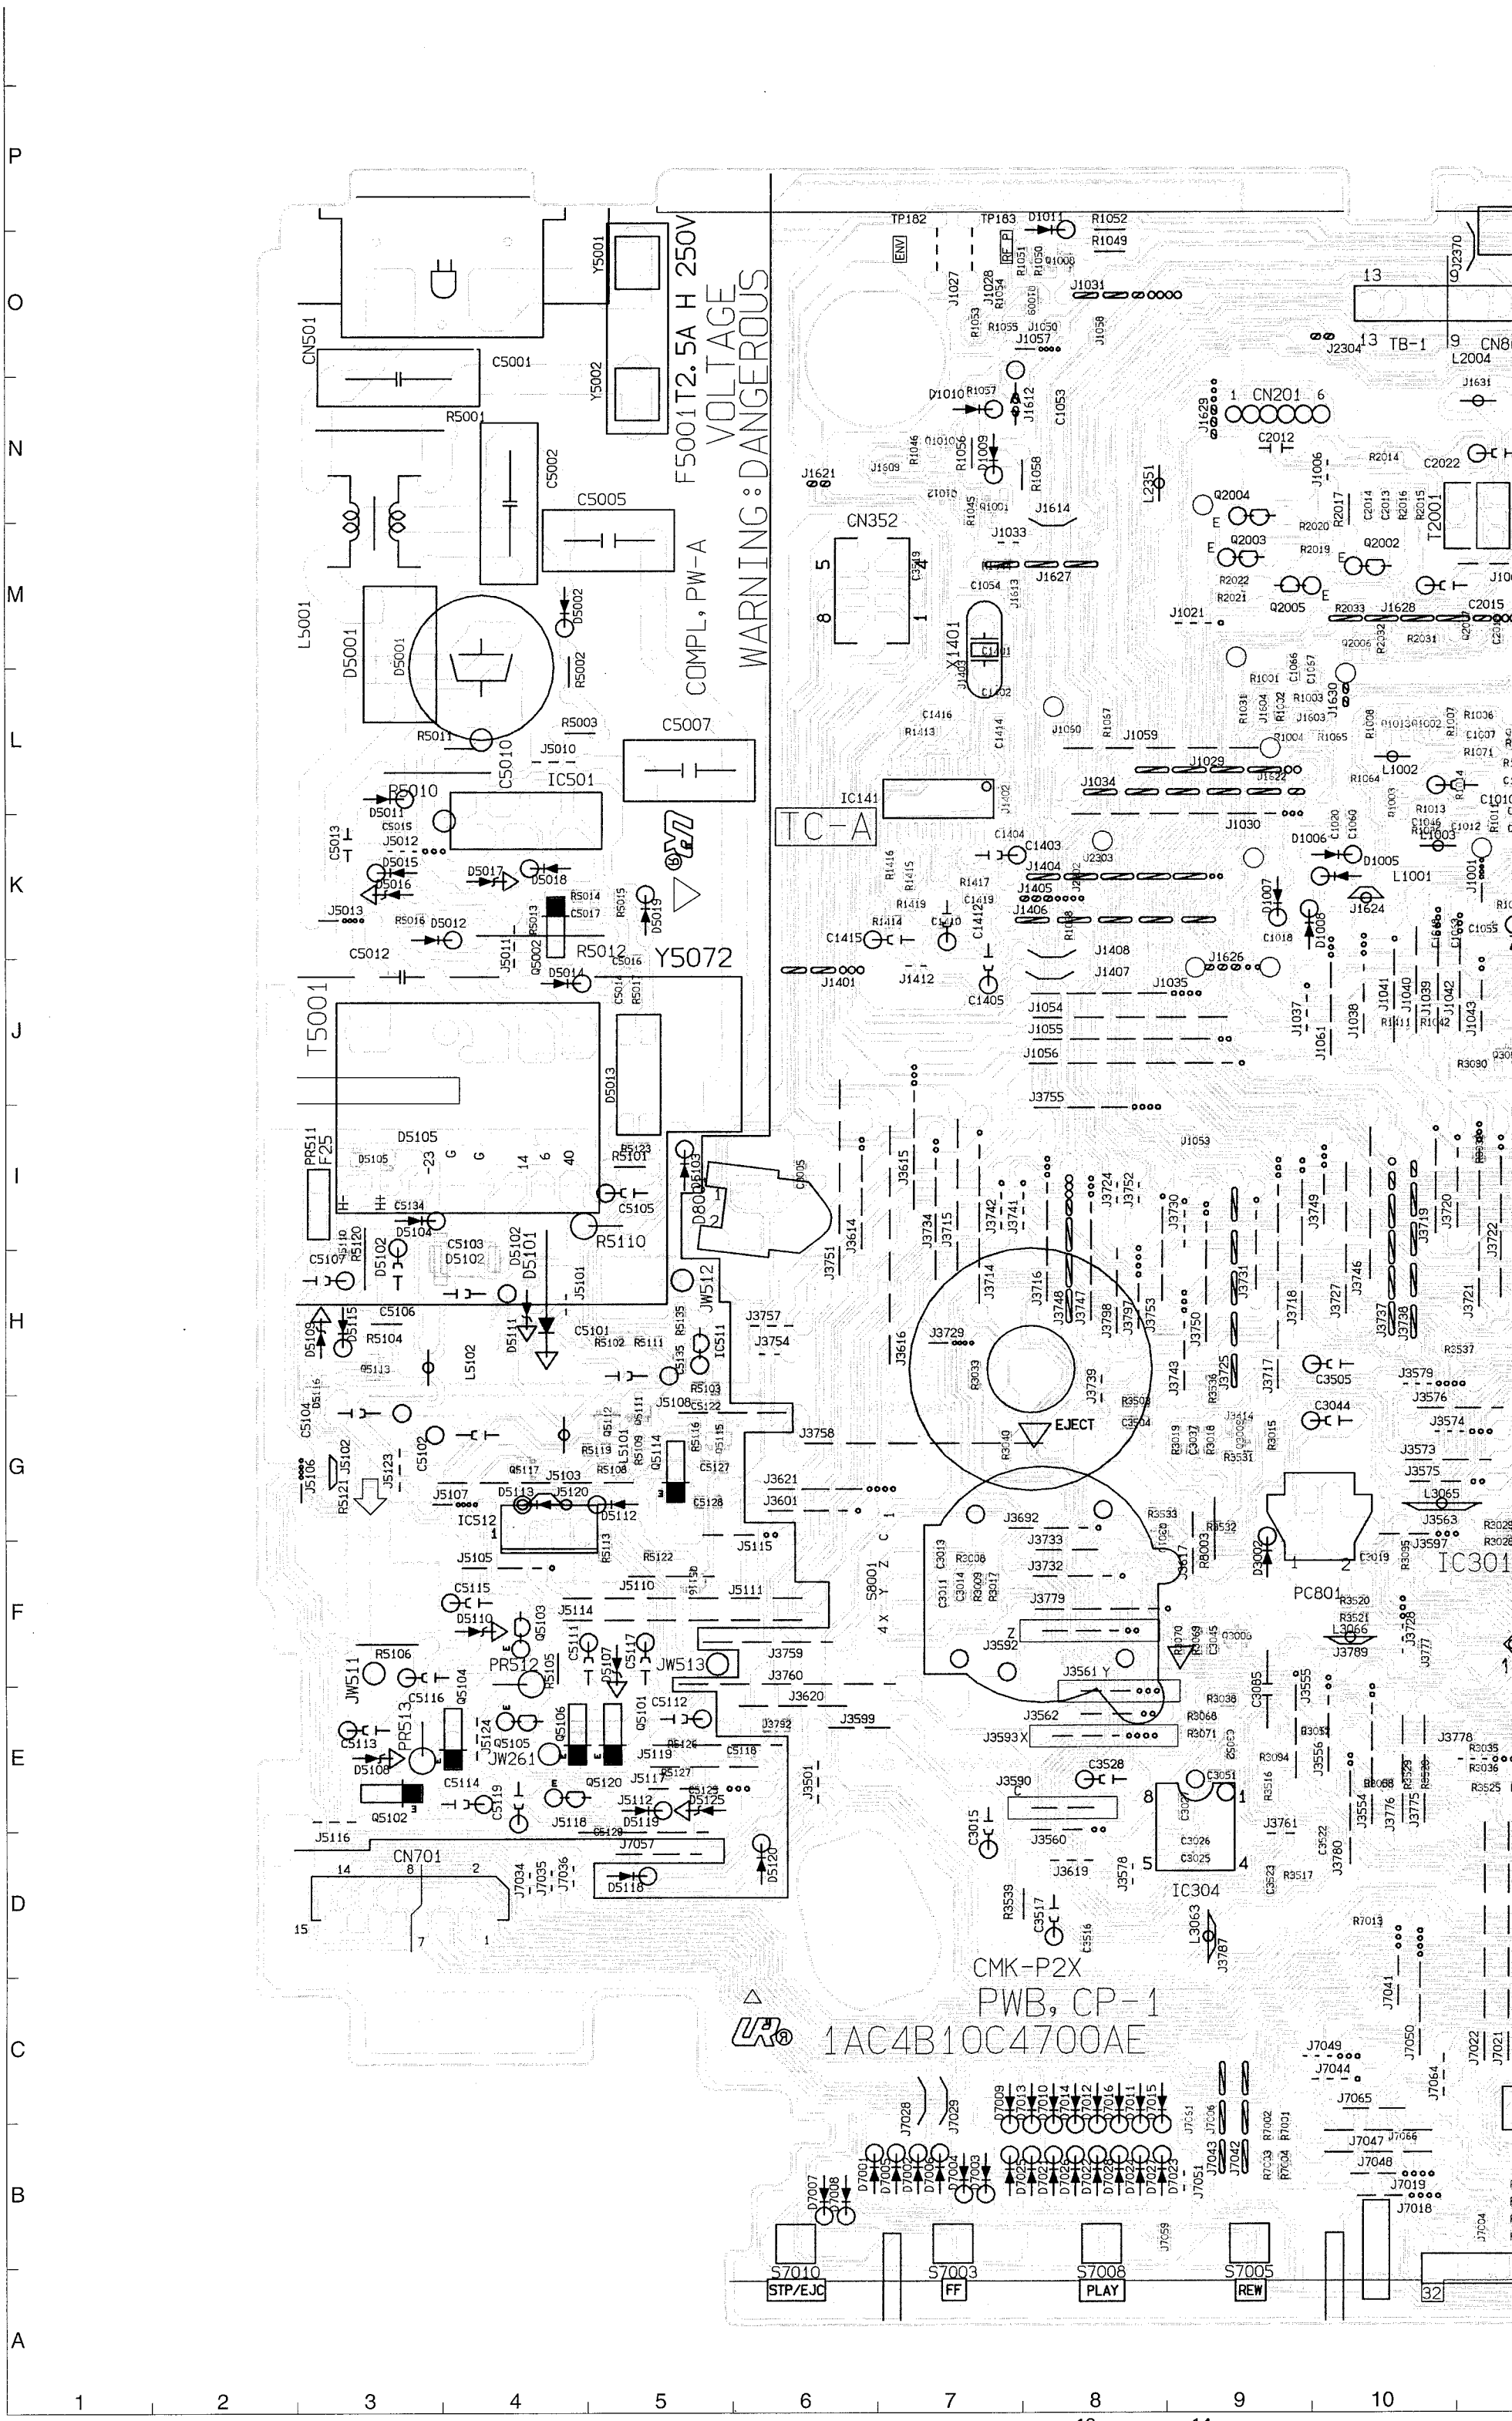
F5001T2.5A H 250V
VOLTAGE
WARNING:DANGEROUS
COMPL. PW-A
CMK-P2X
PWB, CP-1
1AC4B10C4700AE
TC-A
EJECT
S7010 STP/EJC
S7003 FF
S7008 PLAY
S7005 REV
CN352
CN201
CN701
IC501
IC512
IC141
IC301
IC304
T5001
T2001
Y5072
X1401
PC801
TB-1
CN8
L2004
L1001
L1002
L2351
L5001
L5102
L5101
CN501
C5001
R5001
C5002
C5005
C5007
R5011
R5010
R5012
C5012
R5003
C5010
J5010
D5001
R5002
D5002
Y5001
Y5002
R5110
C5105
R5101
D5105
D5013
D5103
D8001
PR511
F25
C5134
D5104
C5103
D5102
D5101
C5107
R5120
C5106
R5104
D5109
C5115
C5101
R5102
R5111
R5135
JW512
IC511
J3757
J3754
J5108
C5122
R5103
J3758
J3621
J3601
J5107
J5120
D5113
D5112
J5105
R5122
J5115
J5110
J5111
C5115
D5110
J5114
Q5103
C5111
C5107
C5117
JW513
J3759
J3760
J3620
J3599
PR512
R5105
R5106
JW511
C5116
Q5104
PR513
C5113
D5108
C5114
Q5102
J5116
J5124
Q5105
JW261
Q5106
C5112
Q5101
D5126
C5118
J5119
R5127
Q5120
J5117
D5125
J5112
D5119
J5118
C5120
J7057
D5118
D5120
J3501
J7034
J7035
J7036
J5123
R5121
J5102
C5102
C5104
D5116
J5106
D5115
C5109
D5111
Q5113
Q5117
J5103
R5108
L5101
R5109
Q5111
Q5112
R5119
Q5114
C5127
C5128
R5116
R5115
D5114
R5113
C5013
D5015
D5016
J5013
D5017
D5018
R5014
C5017
R5015
D5019
R5016
D5012
J5011
Q5002
R5013
R5012
C5016
D5014
C5014
R5017
J5012
J5015
D5011
R5011
C5015
J5010
C5010
R5010
IC501
J5013
C5012
J5011
D5013
R5123
C5105
R5110
D5105
D5104
C5103
D5102
D5101
J5101
D5111

CP-1 P.W.B.

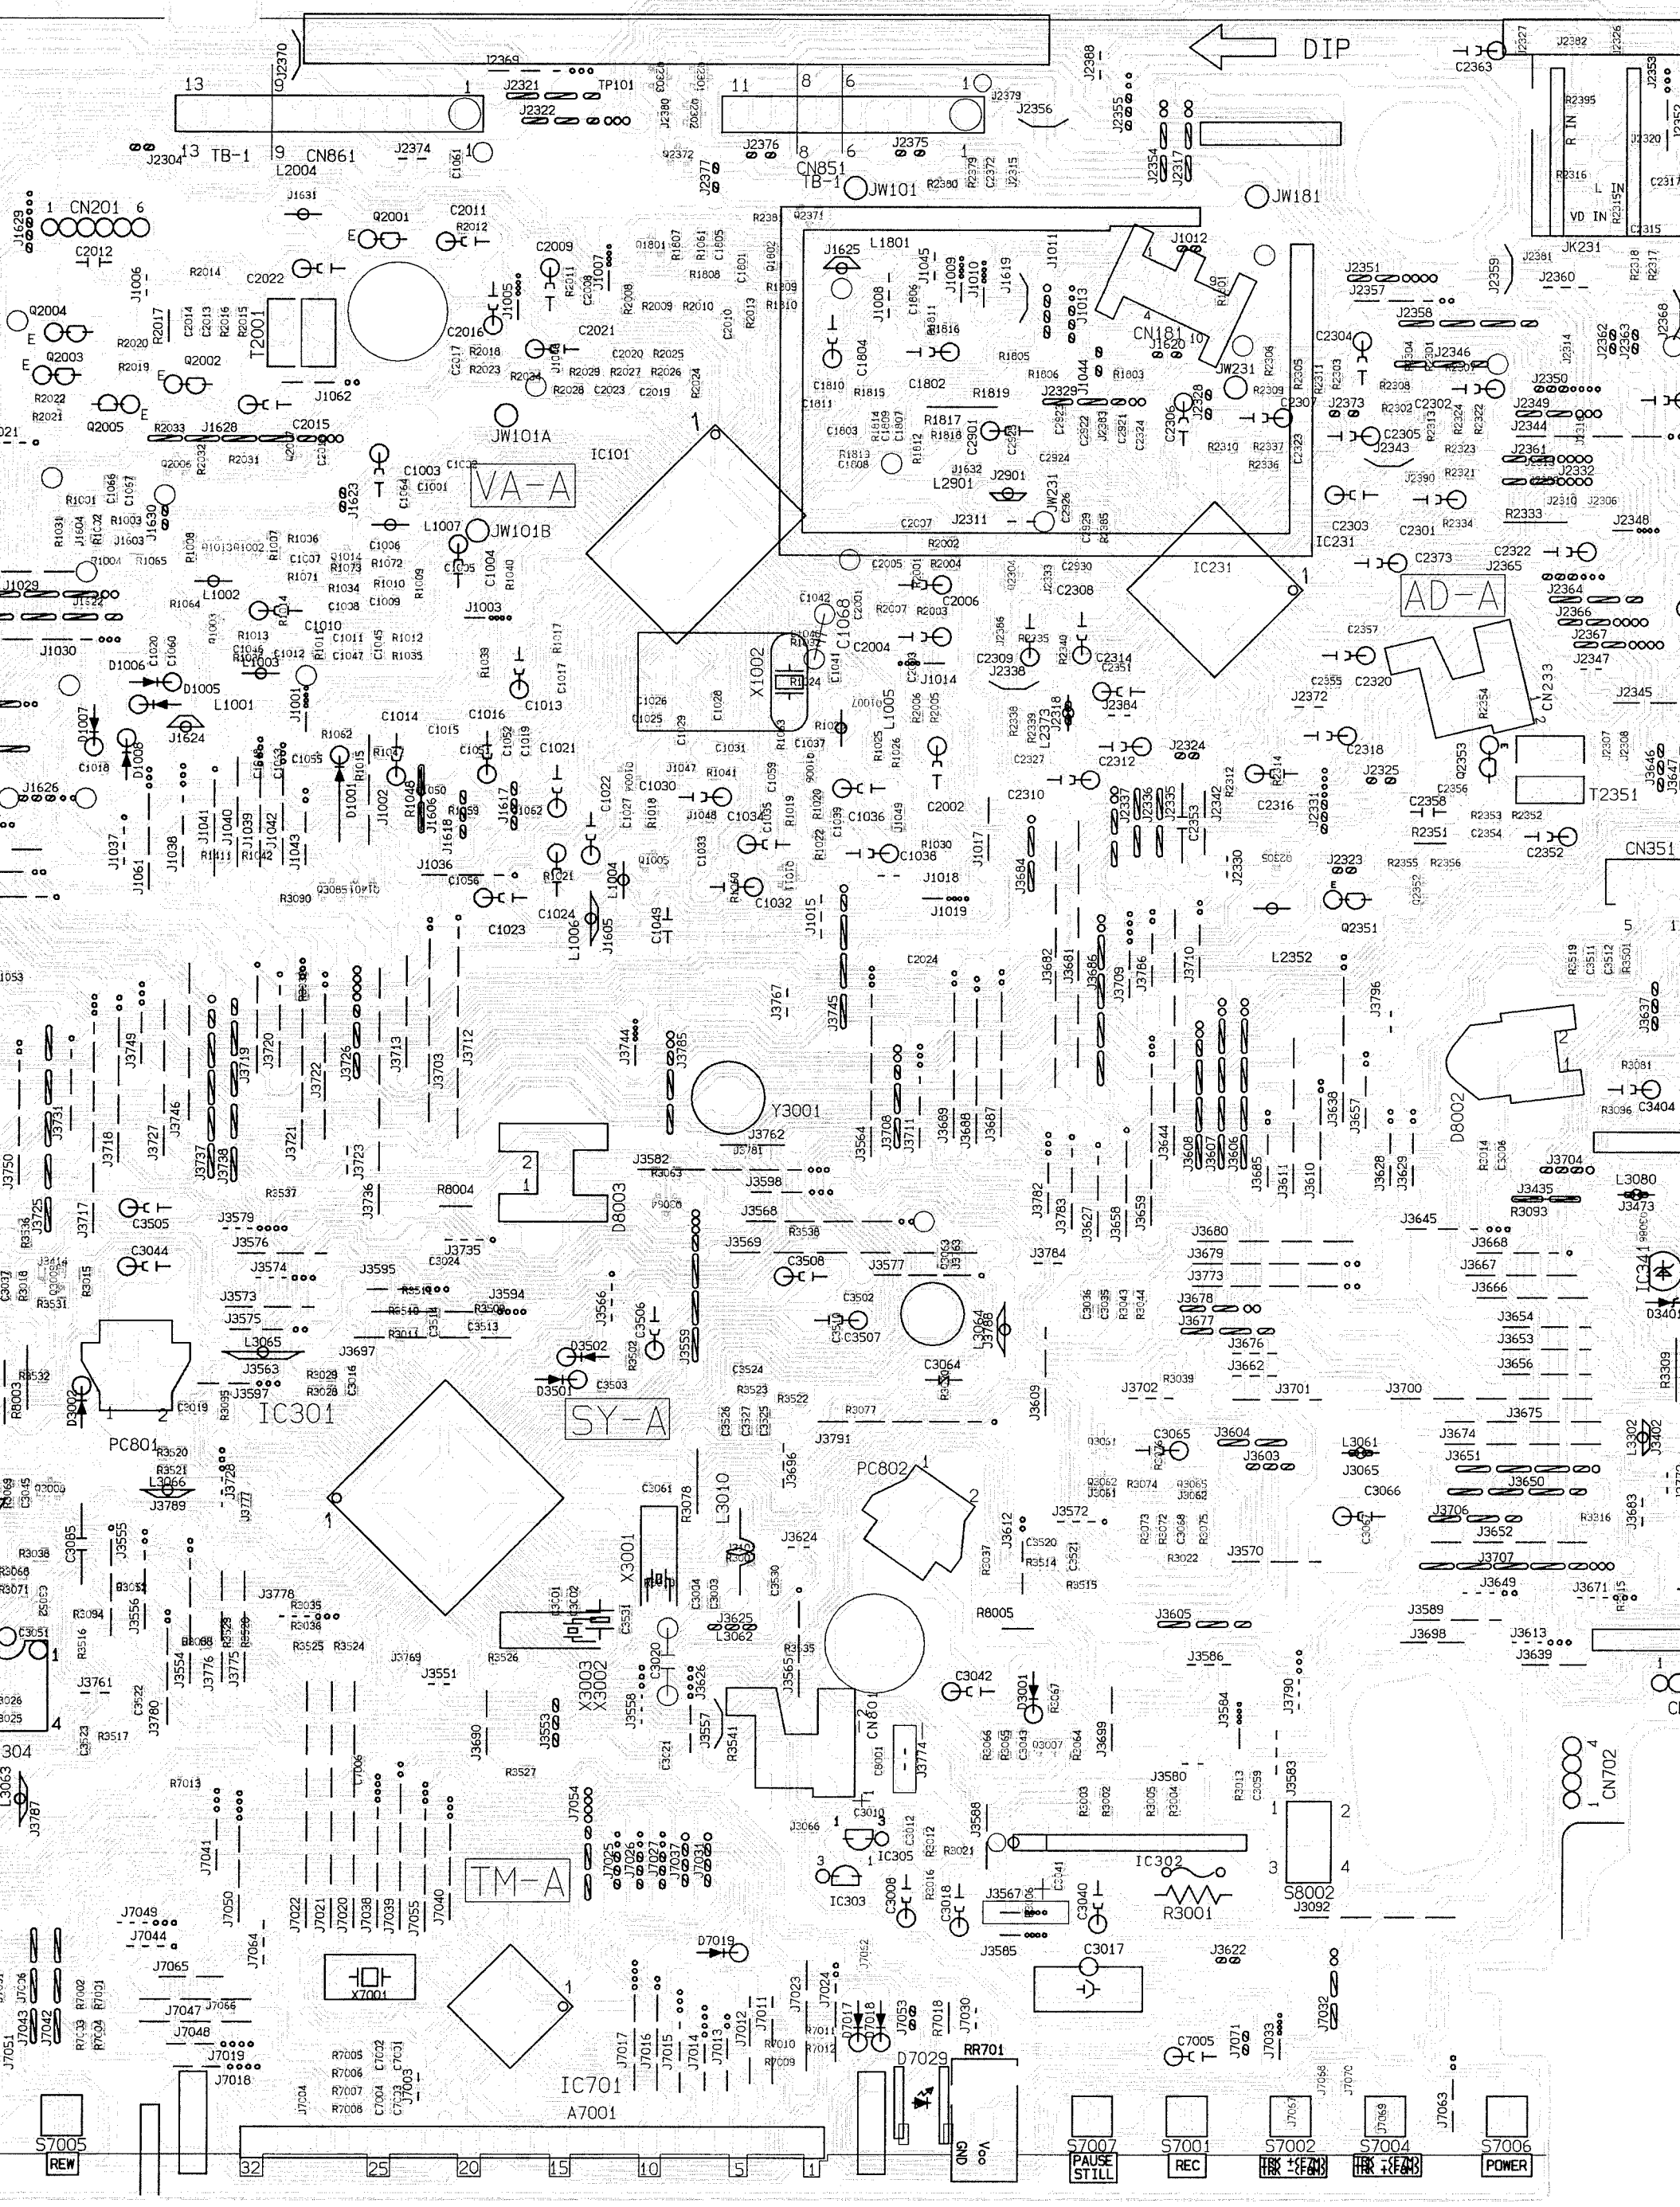
DIP
CN201
CN861
TB-1
CN851
JW101
JW181
JK231
CN181
JW231
JW101A
IC101
VA-A
JW101B
IC231
AD-A
X1002
T2001
T2351
CN351
D8002
D8003
Y3001
IC301
PC801
SY-A
PC802
X3001
X3003
X3002
CN801
IC305
IC303
IC302
S8002
R3001
TM-A
IC701
A7001
RR701
S7005
REW
S7007
PAUSE STILL
S7001
REC
S7002
S7004
S7006
POWER

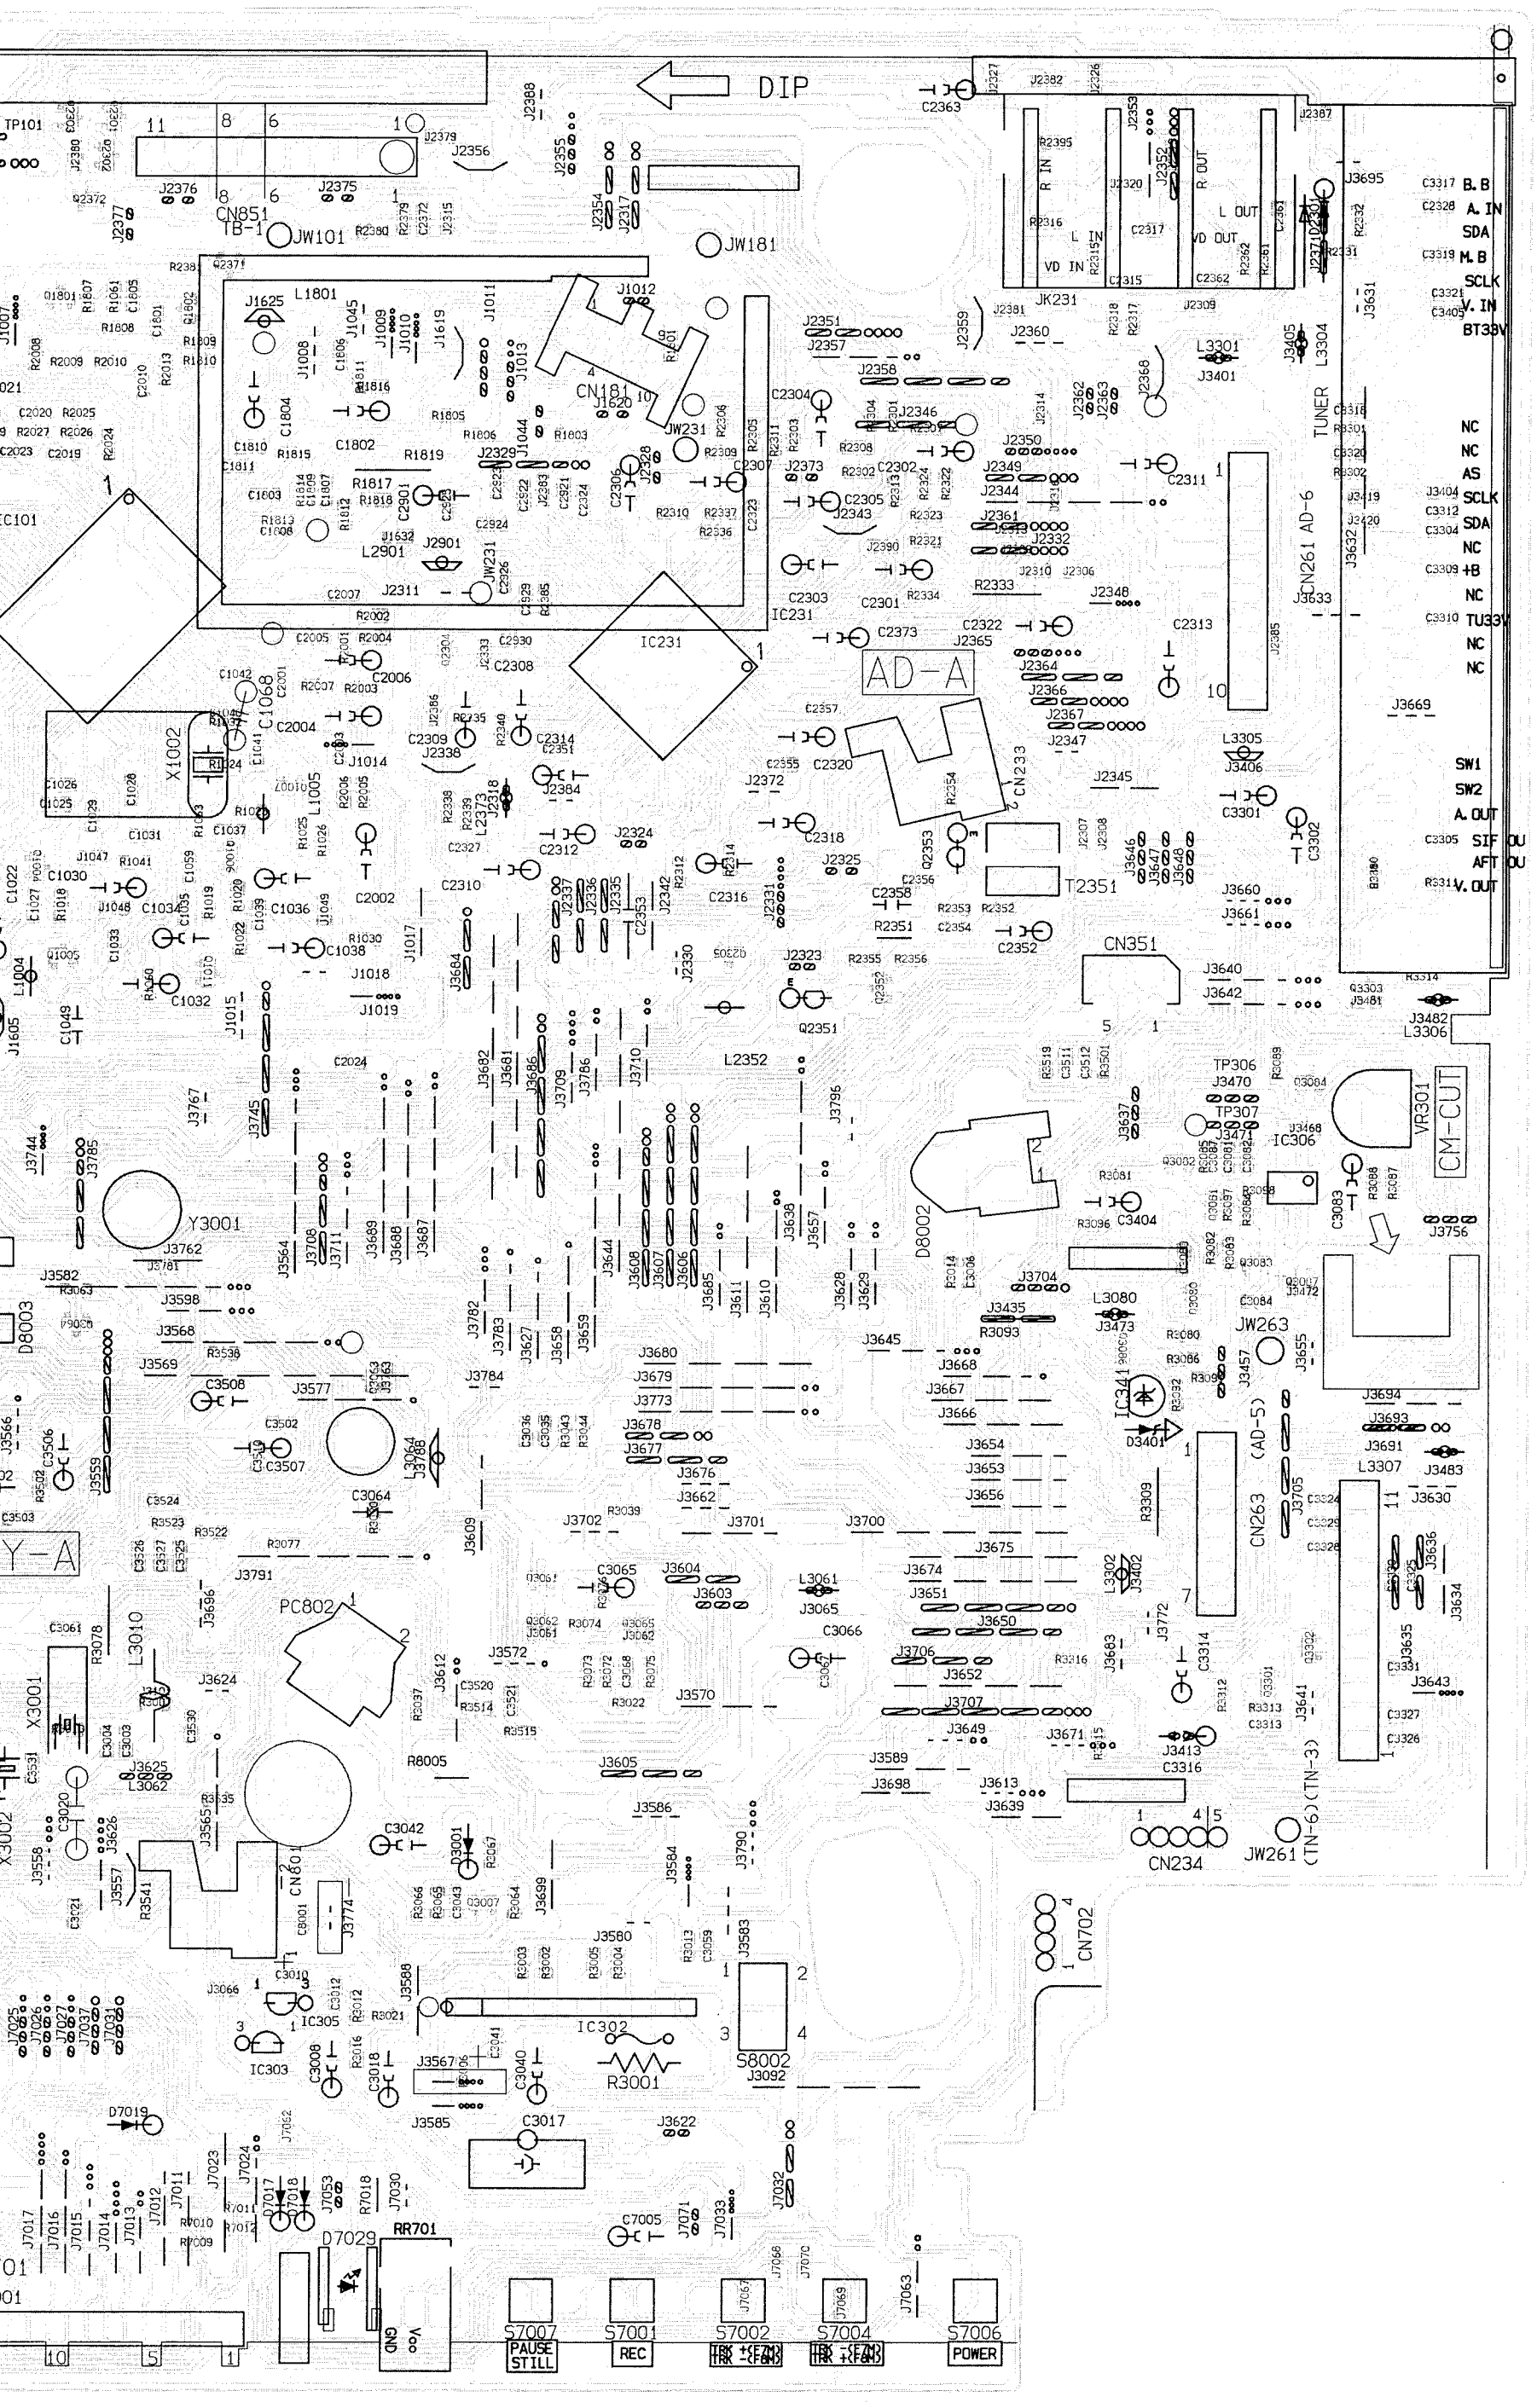
DIP
TP101
CN851
TB-1
JW101
JW181
L1801
CN181
JW231
JK231
L3301
J3401
TUNER
CN261 AD-6
J3633
J3695
B. B
A. IN
SDA
M. B
SCLK
V. IN
BT33V
NC
NC
AS
SCLK
SDA
NC
+B
NC
TU33V
NC
NC
SW1
SW2
A. OUT
SIF OU
AFT OU
V. OUT
IC101
IC231
AD-A
X1002
L2901
T2351
CN351
L2352
TP306
TP307
IC306
VR301
CM-CUT
Y3001
D8002
D8003
IC341
JW263
CN263 (AD-5)
L3307
Y-A
PC802
X3001
L3010
L3062
CN601
R8005
CN233
L3305
L3306
L3080
CN234
JW261
(TN-6)(TN-3)
CN702
IC305
IC303
IC302
R3001
S8002
D7019
D7029
RR701
S7007
PAUSE STILL
S7001
REC
S7002
S7004
S7006
POWER

IC301 SYSTEM CONTROL,TIMER,TUNING CONTROL,OSC & SERVO MPU PIN FUNCTIONS

No.	Name	I/O	H/L	Signal Function
1	GND	-	-	Ground terminal
2	OPEN	-	-	-
3	T REEL P	I	-	Pulse signal from take up reel moving sensor.
4	S REEL P	I	-	Pulse signal from supply up reel moving sensor.
5	REMOCON IN	I	-	Remote control signal input.
6	ML-D	O	-	Loading motor rotation indication signal. (Load "H", Brake "M", Unload "L")
7	ML-S	O	-	Loading motor rotation speed indication signal. (High "H", Middle "M", Low "L")
8	FLSTART + SAFETY	I	L	Switch input indicating start of cassette loading or discharge by cassette mechanism and detecting accidental erasure prevention tab of cassette tape.
9	SW0	I	-	Data indicating operation position of mechanism.
10	POWER UP	O	H	High output except when power is off.
11	SW1	I	-	Data indicating operation position of mechanism.
12	SW2	I	-	Data indicating operation position of mechanism.
13	REMOCON OUT	-	-	-
14	FLD SCLK	O	-	Clock pulse for FLD display drive IC,
15	FLD SDIN	I	-	Data signal input from FLD display drive IC,
16	FLD SDOT	O	-	Data signal output to FLD display drive IC,
17	I2C DAT	O	-	Control signal output to tuner, video-audio and HiFi audio IC.
18	I2C CLK	O	-	Clock signal output to tuner, video-audio and HiFi audio IC.
19	N.C.	-	-	-
20	MC F/R	O	-	Capstan motor rotation (normal/reverse) indication signal. (reverse H)
21	CM SKIP P	O	-	-
22	TU AD MUTE	O	H	Signal disable tuner audio signal output.
23	RF SW P	O	-	RF switching pulse created by head drum PG.
24	QVD	O	-	Quasi vertical synchronizing signal.
25	RESET	I	L	Initial reset terminal for this IC.
26	CM SKIP IN	I	-	-
27	FLD CS	O	H	Chip select signal to FLD display drive IC.
28	TU C-SYNC	I	-	Composite synchronizing signal input.
29	CLK ADJ	-	-	-
30	AF SW P	O	-	AF switching pulse created by head drum PG.
31	N.C.	-	-	-
32	N.C.	-	-	-
33	MC-PWM	O	-	Output of capstan motor servo control signal. (PWM signal)
34	MH-PWM	O	-	Output of head drum motor servo control signal. (PWM signal)
35	Q SOUND H	O	H	Signal to indicate "Q sound" is on.
36	VDD	-	-	Back up 5V
37	OSCO	O	-	IC clock OSC terminal.
38	OSCI	I	-	14.318MHz
39	VSS	-	-	Ground terminal
40	XI	I	-	IC timer clock OSC terminal.
41	XO	O		32.768KHz
42	VDD	-	-	-
43	V STEREO H	-	-	-
44	PB-L	O	L	Signal for indicating playback mode.
45	Q SOUND SUPER	O	H	Signal for indicating "Q sound" effect is strong.
46	N.C.	-	-	-
47	VD OUT	O	-	Video output signal from on screen display circuit.
48	VSS2	-	-	Ground terminal.
49	VD IN	I		Video input signal to on screen display circuit.
50	VD IN FILTER	I		Video input signal to on screen display circuit and servo circuit.
51	VDD2	-	-	Always 5V
52	AFCC	-	-	-
53	AFCLPF	-	-	-
54	N.C.	-	-	-
55	N.C.	-	-	-
56	TN CLK	O	-	Clock signal to control MTS and NICAM decoder.
57	TN DATA	O	-	Data signal to control MTS and NICAM decoder.
58	VSC DATA	O	-	Data to VSC(DMSS) control.
59	VSC CLK	O	-	Clock to VSC(DMSS) control.
60	REC H	O	H	Signal to indicate recording mode.
61	VD MUTE	O	H	Signal disable video signal output.
62	YCA MUTE	O	L	Signal disable video or audio signal output.
63	ALT OFF H.	O	H	Signal to switch the time-constant of APC circuit while special play mode.
64	GND	-	-	Ground
65	DFG SIG IN	I	-	Head drum FG pulse input.
66	PG SIG IN	I	-	Head drum PG(phase) pulse input.
67	FG OUT	O	-	Head drum FG amp output.
68	CFG SIG IN	O	-	Capstan FG pulse input.
69	AMP BIAS	O	-	Bias voltage for DFG amp.
70	VRI	O	-	-
71	AVSS	-	-	Ground terminal.
72	CTLA	-	-	-
73	AVDD	O	-	Always 5V.
74	CTL+	I/O	-	Control pulse I/O.
75	CTL-	I/O	-	Control pulse I/O.
76	CO	-	-	-
77	ROM OP	-	-	-
78	AD MUTE	O	H	Signal disable audio signal output.
79	N.C.	-	-	-
80	POWER DOWN	I	L	Power failure detection circuit.
81	N.C.	-	-	-
82	N.C.	-	-	-
83	AFT C	I	-	Tuner AFT S-curve signal for tuner AFT control.
84	AF ENV	I	-	HiFi audio head envelope detection signal input.
85	VD ENV	I	-	Video head envelope detection signal input for ATR function.
86	TU SW2	O	-	Detect the system of RF out. (PALI H)
87	TU SW1	O	-	Detect the system of RF out. (PALDK H)
88	T TOP S	I	L	Sensor signal input for tape beginning detection.
89	T END S	I	L	Sensor signal input for tape end detection.
90	N.C.	-	-	-
91	NORM A CTL	O	-	H during normal audio recording.
92	N.C.	-	-	-
93	N.C.	-	-	-
94	N.C.	-	-	-
95	FSS IN	I	-	CH+ mode control signal input. (CH+ model)
96	AVCTL (SY)	O	H	AV control signal output.
97	PS CTL	O	-	Power save control signal output.
98	ROTARY	O	-	Video head CH1/CH2 confirmation signal. Used in the processing of image circuit color signals.
99	H AMP SW	O	-	Main head and sub head switching signal.
100	ENV SW	I	-	Input comparatione signal for main head and sub head.

SE4HN_IC301

SERVO CIRCUIT WAVEFORMS

TEST LOCATION	WAVEFORM	TEST LOCATION	WAVEFORM
IC301 PIN 23 REC/PB RF SWP 2V/div. 10ms/div.	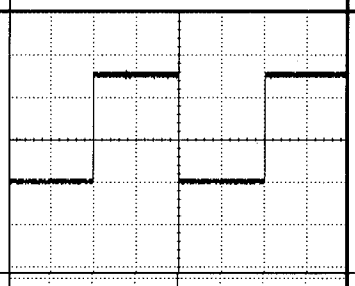	IC301 PIN 65 REC/PB DFG 500mV/div. 500μs/div.	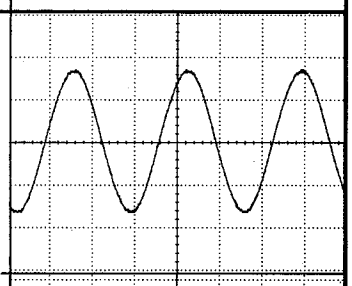
IC301 PIN 24 STILL 2V/div. 10ms/div.	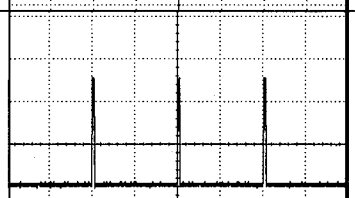	IC301 PIN 66 REC/PB DPG 100mV/div. 10ms/div.	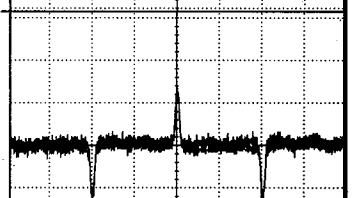
IC301 PIN 24 STILL V LOCK 2V/div. 200μs/div.	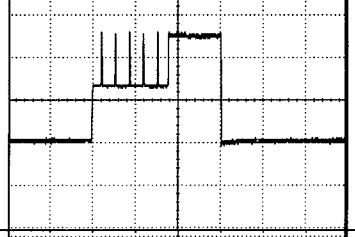	IC301 PIN 67 REC/PB CFG OUT 200mV/div. 500μs/div.	
IC301 PIN 28 REC/PB C-SYNC 2V/div. 20μs/div.	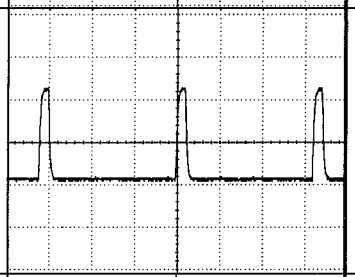	IC301 PIN 74 REC CTL+ 1V/div. 20ms/div.	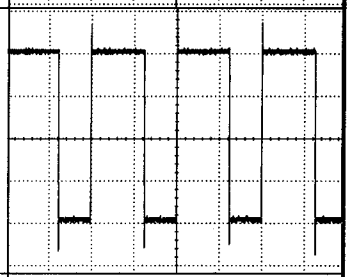
IC301 PIN 33,34 REC/PB 2V/div. 5μs/div.	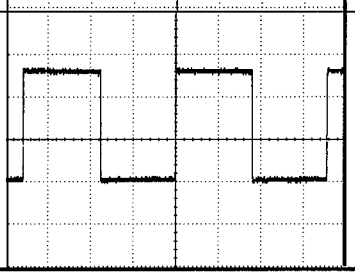		

WF-S-AF4H-Z

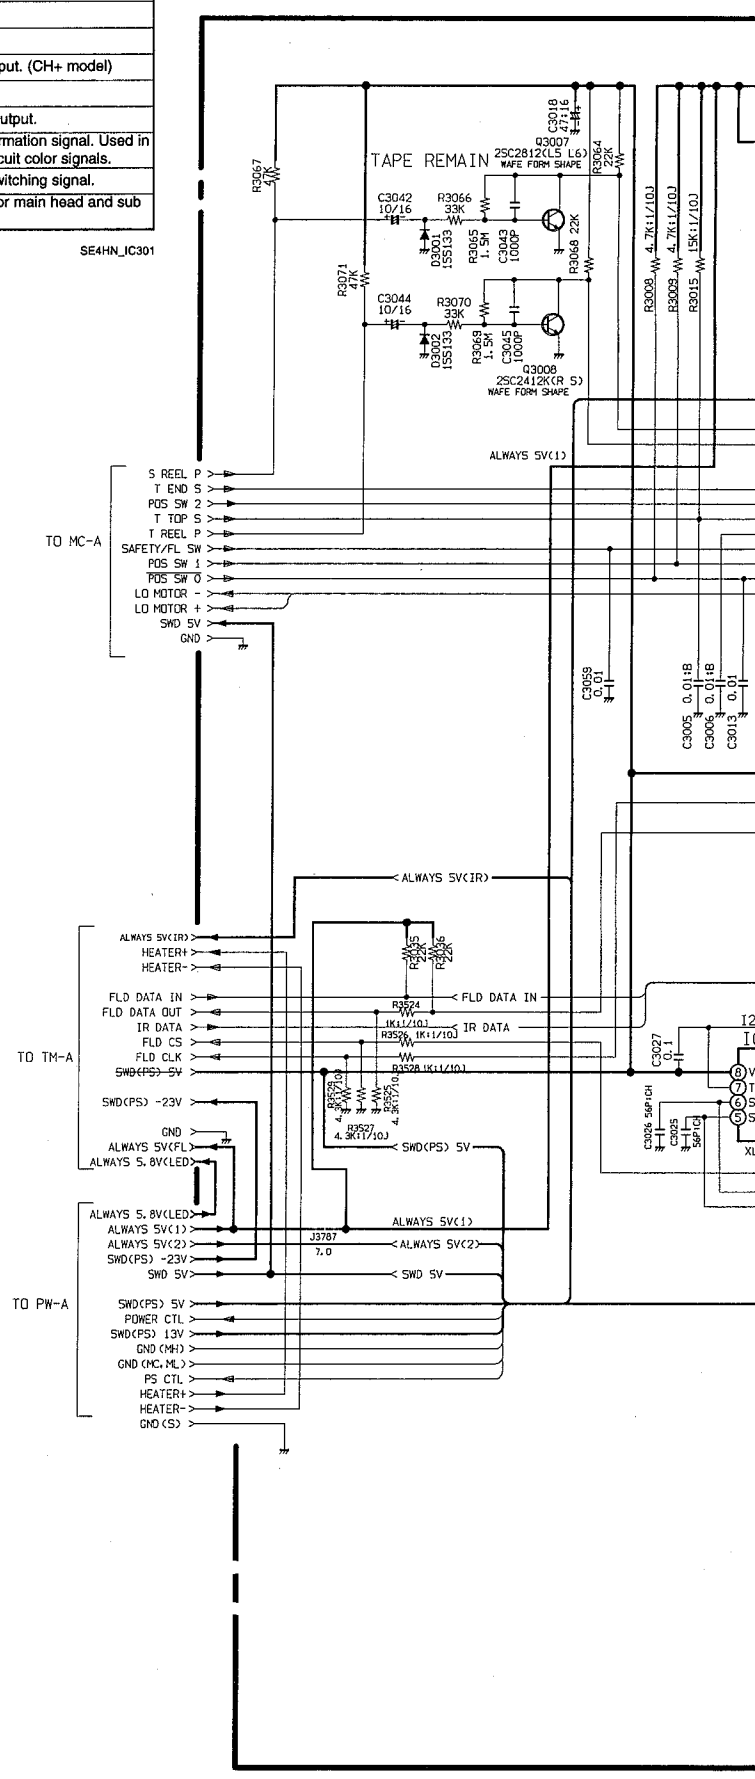

CP-1 BOARD (SY-A) SYSTEM CONTROL, TIMER, TUNER, OSC & SERVO

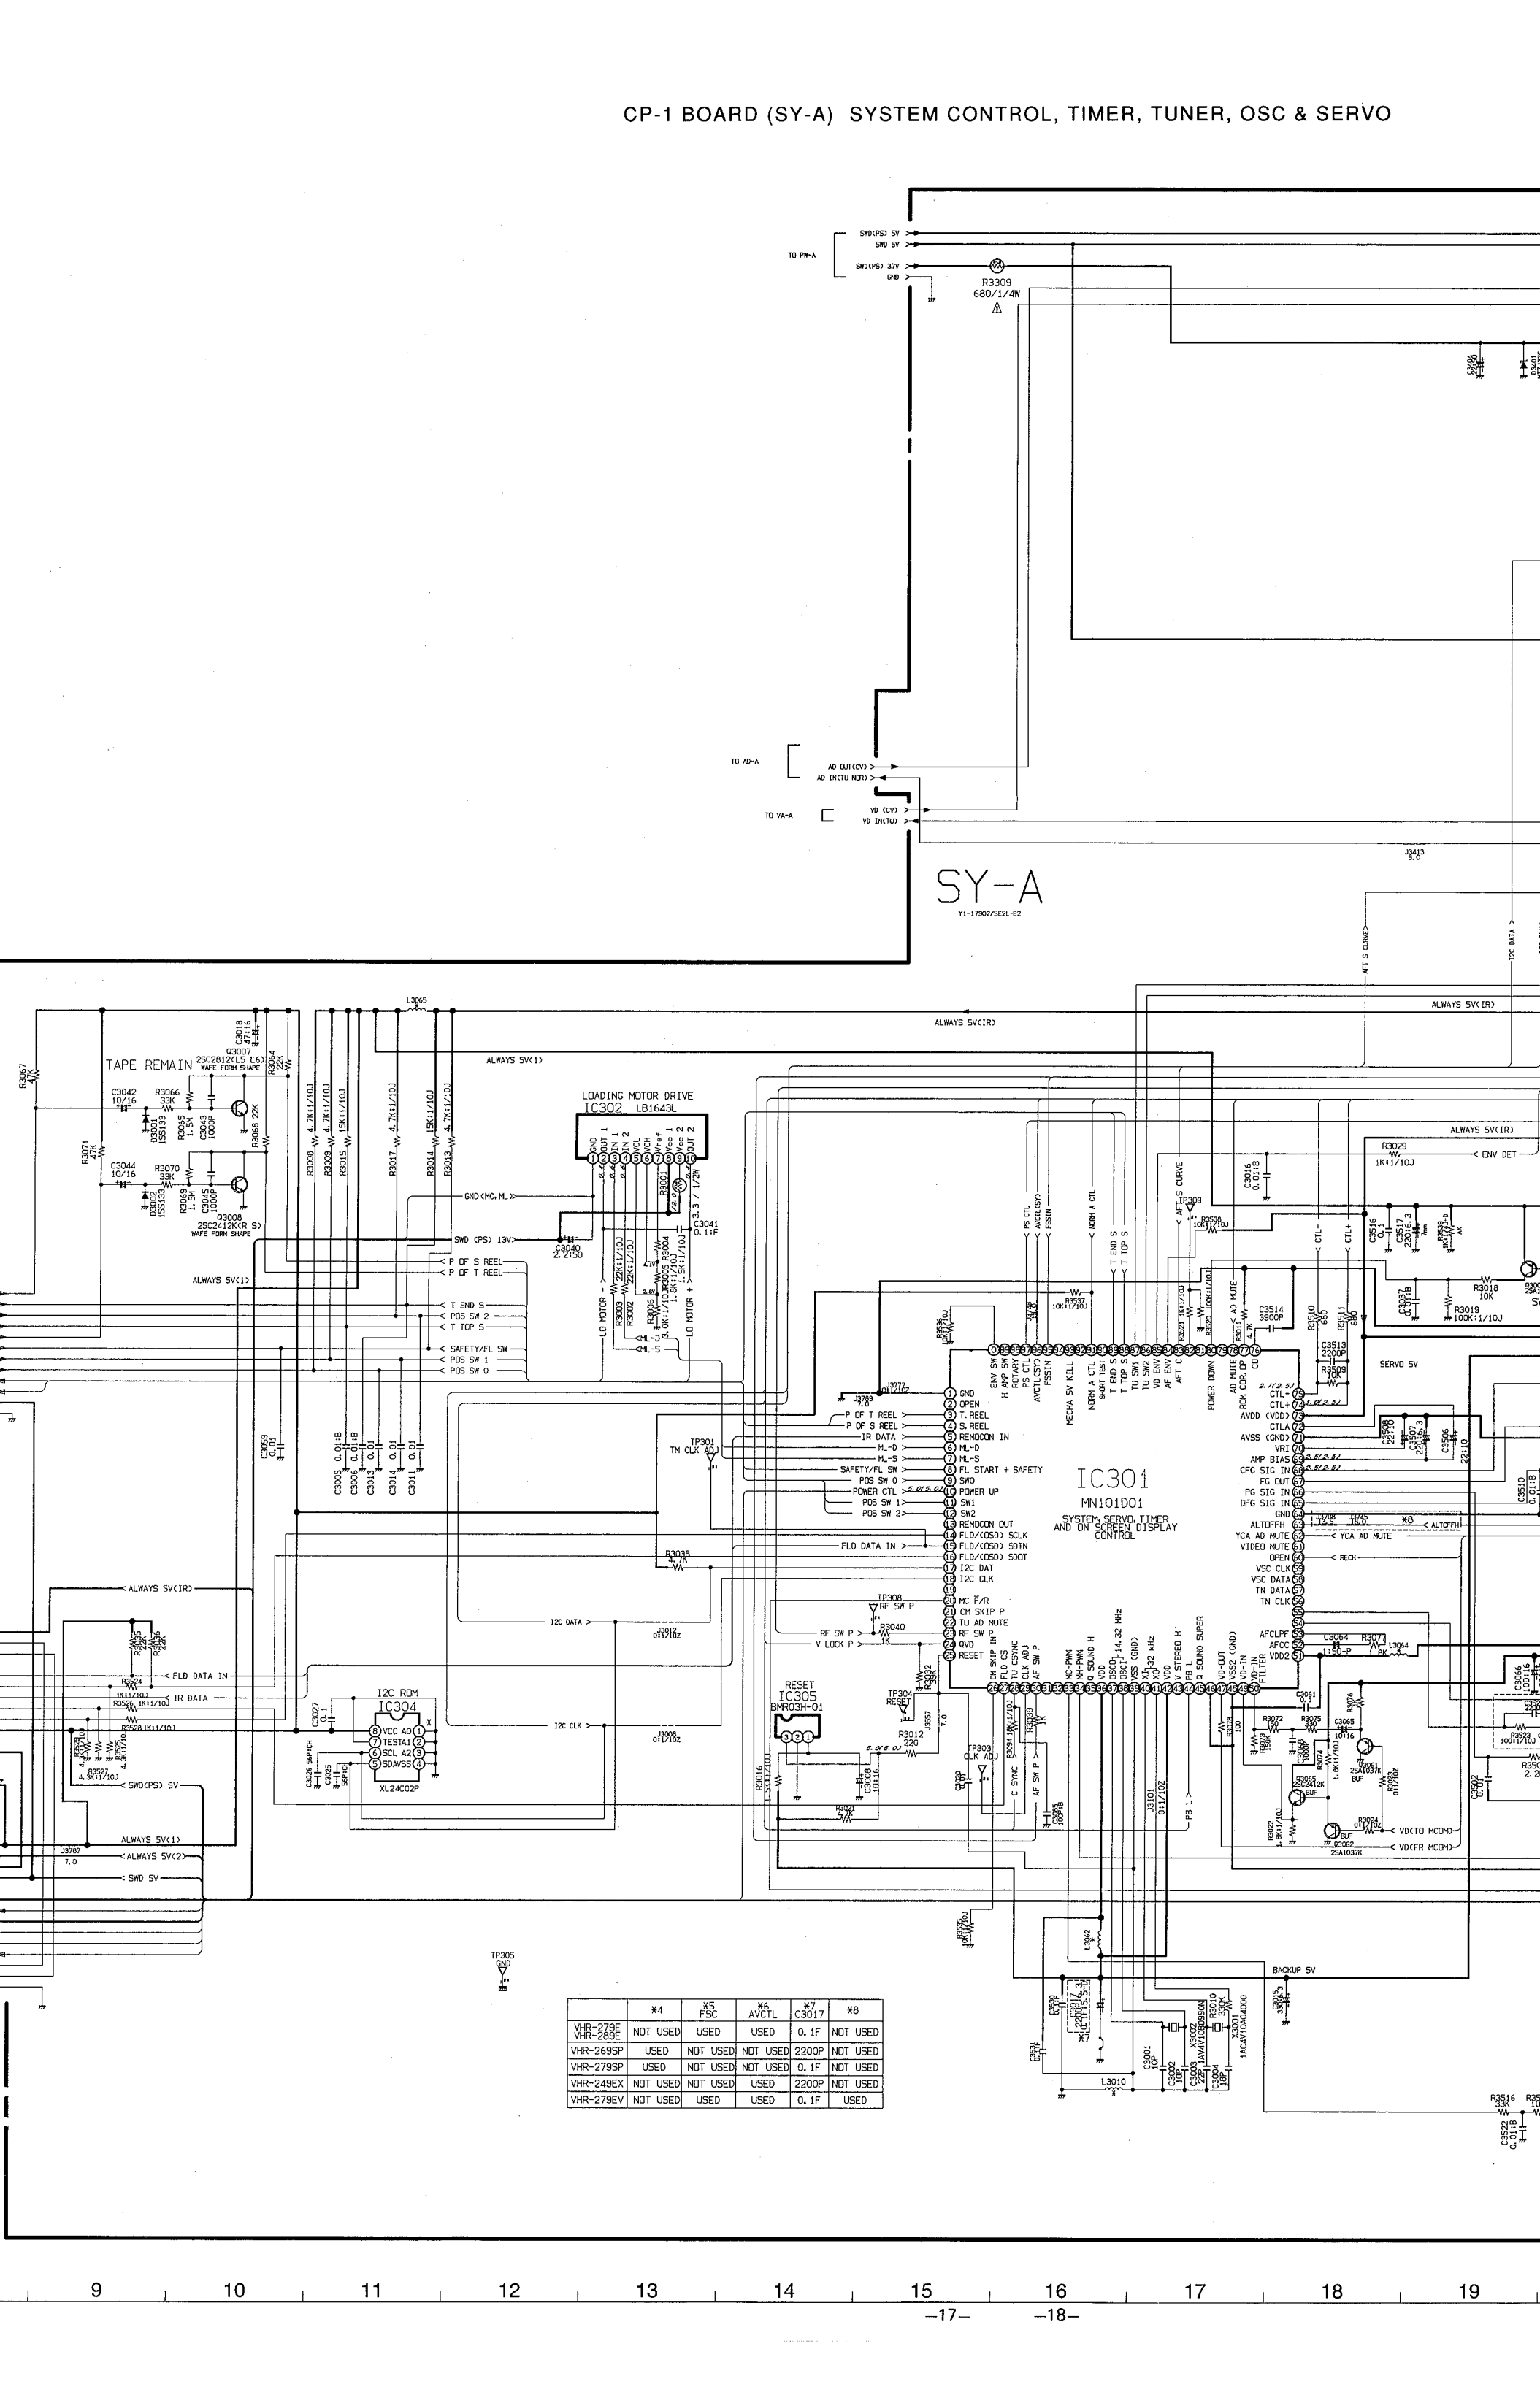

	※4	※5 F5C	※6 AVCTL	※7 C3017	※8
VHR-279E VHR-289E	NOT USED	USED	USED	0.1F	NOT USED
VHR-269SP	USED	NOT USED	NOT USED	2200P	NOT USED
VHR-279SP	USED	NOT USED	NOT USED	0.1F	NOT USED
VHR-249EX	NOT USED	NOT USED	USED	2200P	NOT USED
VHR-279EV	NOT USED	USED	USED	0.1F	USED

1 BOARD (SY-A) SYSTEM CONTROL, TIMER, TUNER, OSC & SERVO

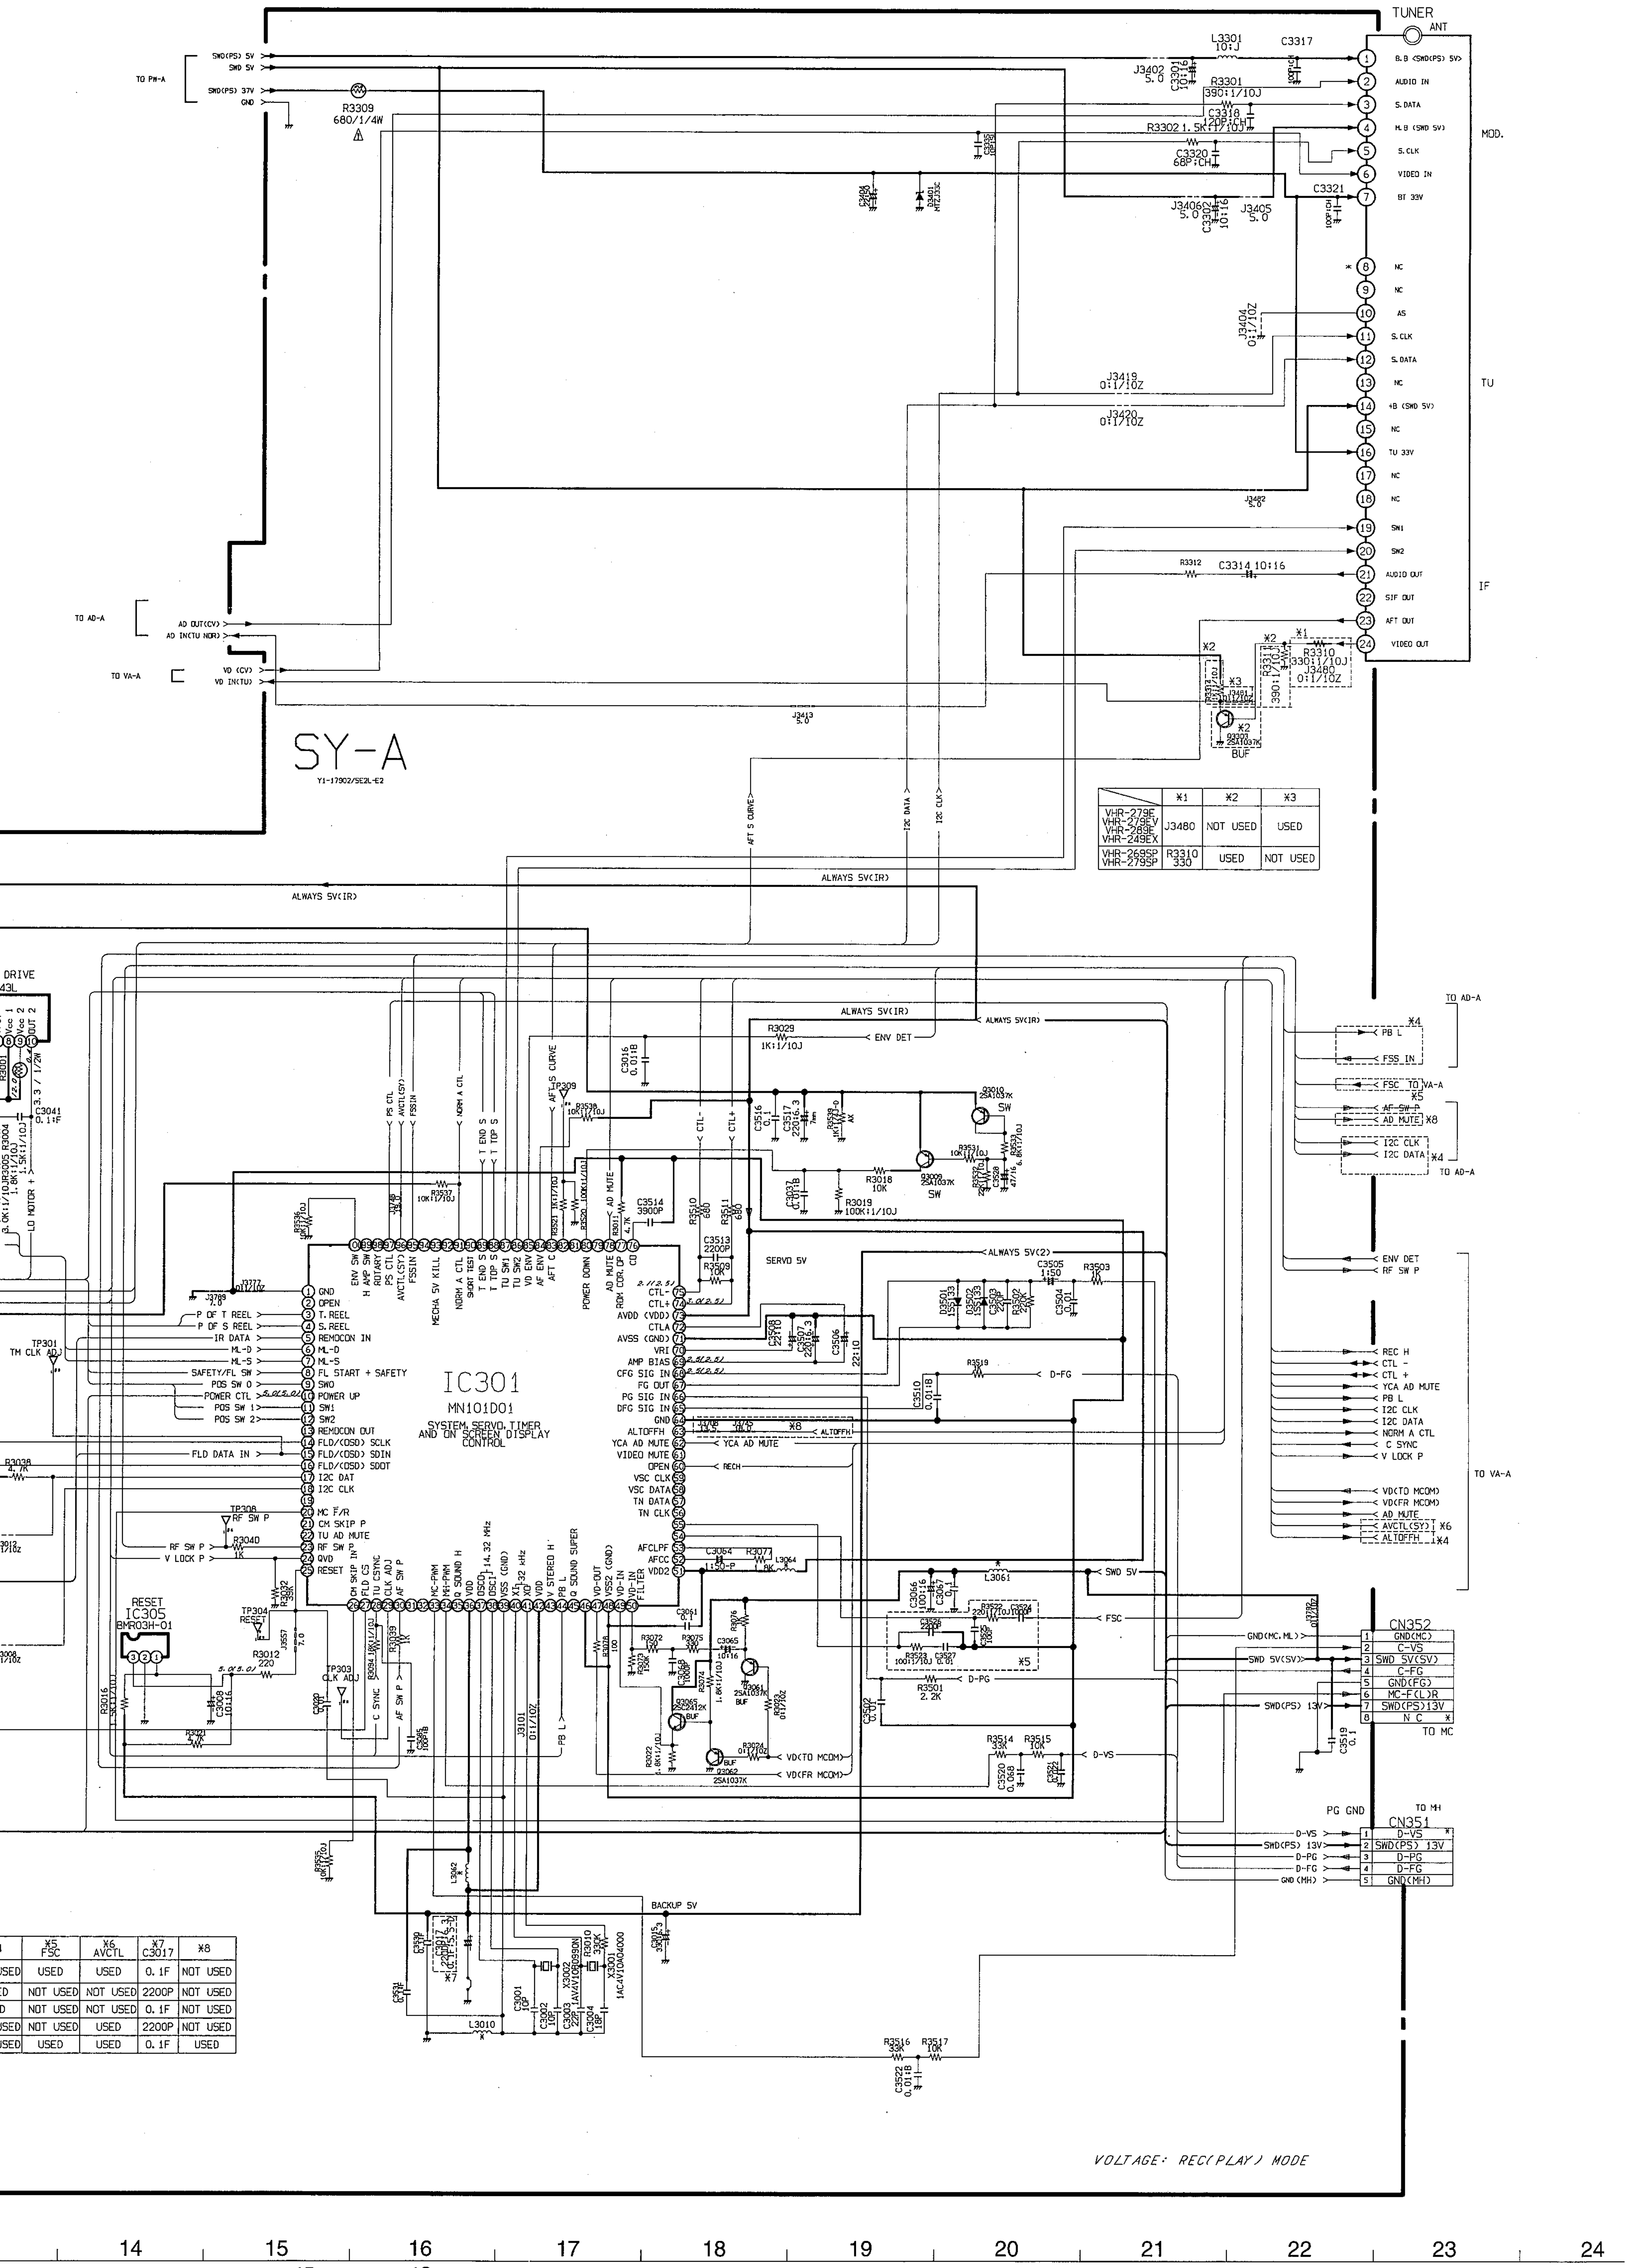

TUNER
ANT
MOD.
TU
IF
B.B (SWD(PS) 5V)
AUDIO IN
S.DATA
M.B (SWD 5V)
S.CLK
VIDEO IN
BT 33V
NC
AS
+B (SWD 5V)
TU 33V
SW1
SW2
AUDIO OUT
SIF OUT
AFT OUT
VIDEO OUT
TO PW-A
SWD(PS) 5V
SWD 5V
SWD(PS) 37V
GND
R3309
680/1/4W
TO AD-A
AD OUT(CV)
AD IN(TU NOR)
TO VA-A
VD (CV)
VD IN(TU)
SY-A
Y1-17902/SE2L-E2
ALWAYS 5V(IR)
AFT S CURVE
I2C DATA
I2C CLK
ENV DET
IC301
MN101D01
SYSTEM, SERVO, TIMER AND ON SCREEN DISPLAY CONTROL
SERVO 5V
ALWAYS 5V(2)
D-FG
D-PG
D-VS
FSC
SWD 5V
RESET
IC305
BMR03H-01
BACKUP 5V
PB L
FSS IN
AF SW P
AD MUTE
RF SW P
REC H
CTL -
CTL +
YCA AD MUTE
NORM A CTL
C SYNC
V LOCK P
VD(TO MCOM)
VD(FR MCOM)
AVCTL(SY)
ALTOFFH
CN352
GND(MC)
C-VS
SWD 5V(SV)
C-FG
GND(FG)
MC-F(L)R
SWD(PS)13V
N C
TO MC
PG GND
TO MH
CN351
D-VS
SWD(PS) 13V
D-PG
D-FG
GND(MH)
VOLTAGE: REC(PLAY) MODE
14
15
16
17
18
19
20
21
22
23
24

	※1	※2	※3
VHR-279E VHR-279EV VHR-289E VHR-249EX	J3480	NOT USED	USED
VHR-269SP VHR-279SP	R3310 330	USED	NOT USED

※4	※5 FSC	※6 AVCTL	※7 C3017	※8
USED	USED	USED	0.1F	NOT USED
ED	NOT USED	NOT USED	2200P	NOT USED
D	NOT USED	NOT USED	0.1F	NOT USED
USED	NOT USED	USED	2200P	NOT USED
USED	USED	USED	0.1F	USED

CP-1 BOARD (VA-A) VIDEO & AUDIO

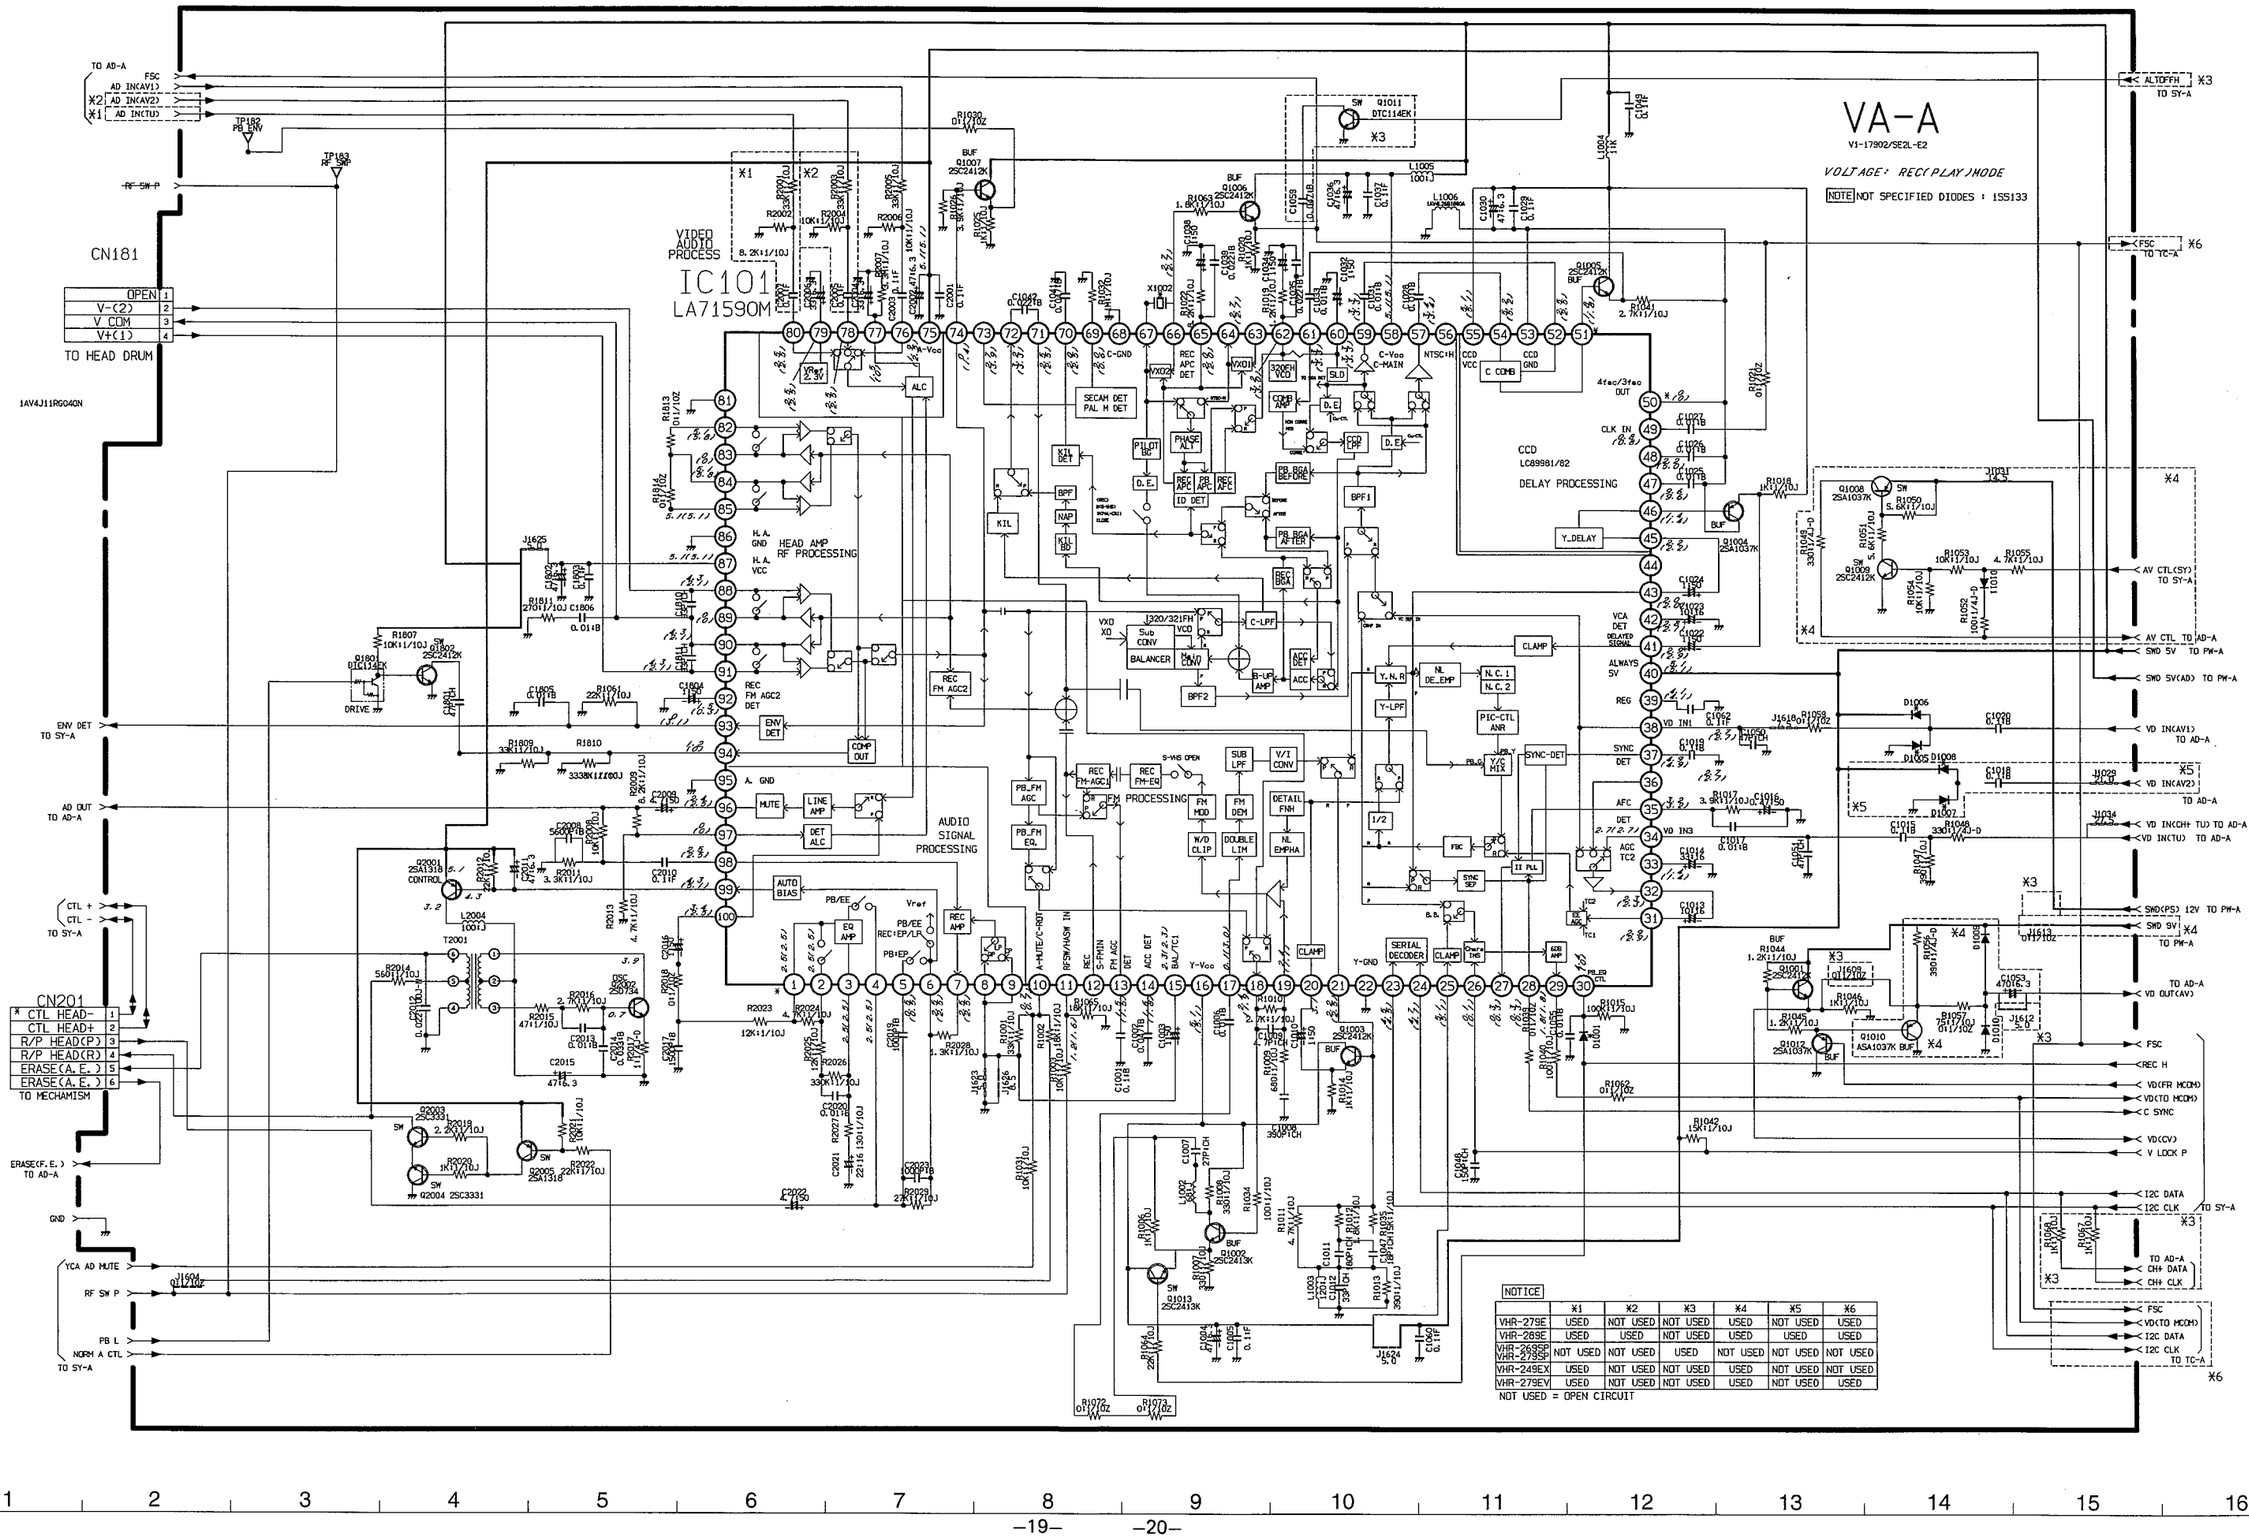

NOTICE	¥1	¥2	¥3	¥4	¥5	¥6
VHR-279E	USED	NOT USED	NOT USED	USED	NOT USED	USED
VHR-289E	USED	USED	NOT USED	USED	USED	USED
VHR-269SP VHR-279SP	NOT USED	NOT USED	USED	NOT USED	NOT USED	NOT USED
VHR-249EX	USED	NOT USED	NOT USED	USED	NOT USED	NOT USED
VHR-279EV	USED	NOT USED	NOT USED	USED	NOT USED	USED

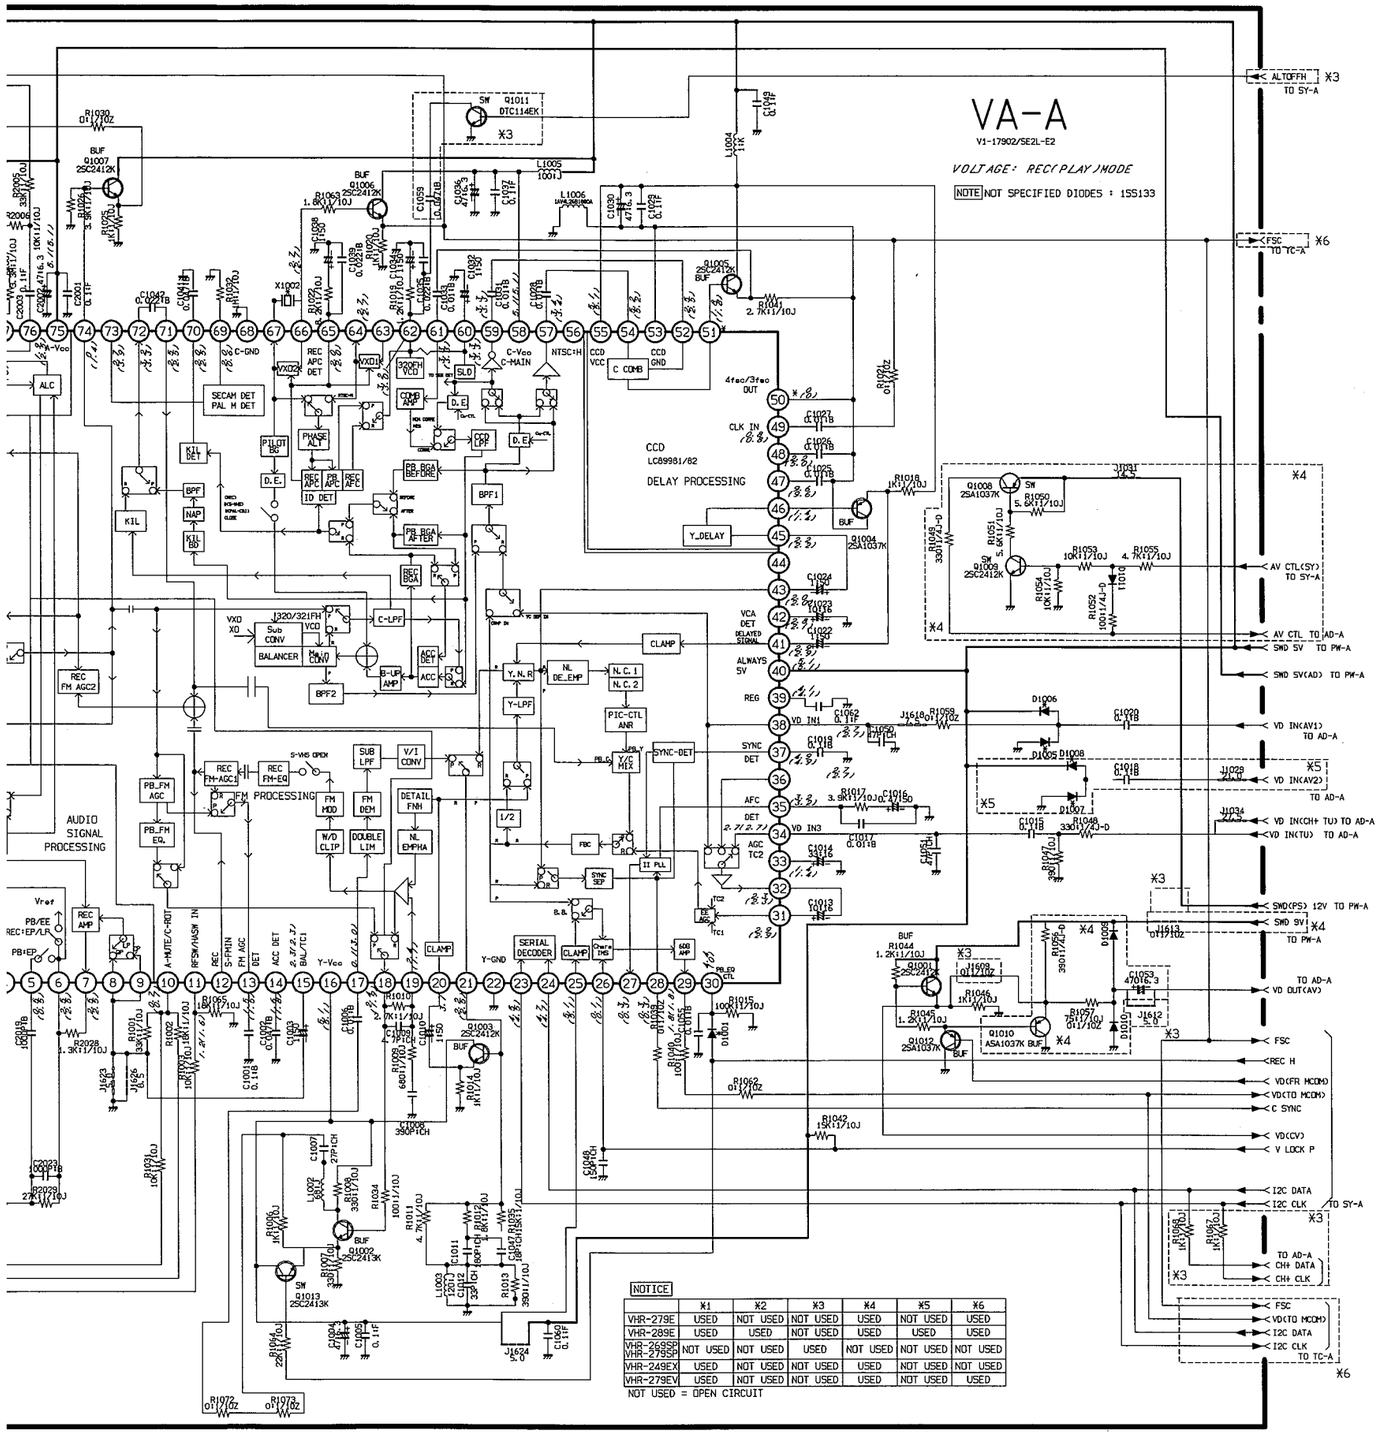

NOTICE	※1	※2	※3	※4	※5	※6
VHR-279E	USED	NOT USED	NOT USED	USED	NOT USED	USED
VHR-289E	USED	USED	NOT USED	USED	USED	USED
VHR-269SP VHR-279SP	NOT USED	NOT USED	USED	NOT USED	NOT USED	NOT USED
VHR-249EX	USED	NOT USED	NOT USED	USED	NOT USED	NOT USED
VHR-279EV	USED	NOT USED	NOT USED	USED	NOT USED	USED

VIDEO CIRCUIT WAVEFORMS

TEST LOCATION	WAVE FORM	TEST LOCATION	WAVE FORM
IC101 PIN17 PLAY 100mV/500ns/div		IC101 PIN43,45 REC/PLAY 100mV/20µs/div	
IC101 PIN20,21 REC/PLAY 100mV/20µs/div		IC101 PIN57,59 REC/PLAY 100mV/20µs/div	
IC101 PIN26 STILL 2V/200µs/div		IC101 PIN51,61 REC/PLAY 100mV/20µs/div	
IC101 PIN28 REC/PLAY 1V/20µs/div		IC101 PIN71,72 REC 100mV/20µs/div	
IC101 PIN29 REC/PLAY 500mV/20µs/div		IC101 PIN71,72 PLAY 100mV/20µs/div	
IC101 PIN34,36,38 REC 200mV/20µs/div		IC101 PIN90 REC 1V/200ns/div	
IC101 PIN41,46 REC/PLAY 100mV/20µs/div			

WF_V_SE4

CP-1 BOARD (AD-A) AUDIO (EXCEPT VHR-269SP AND VHR-279SP)

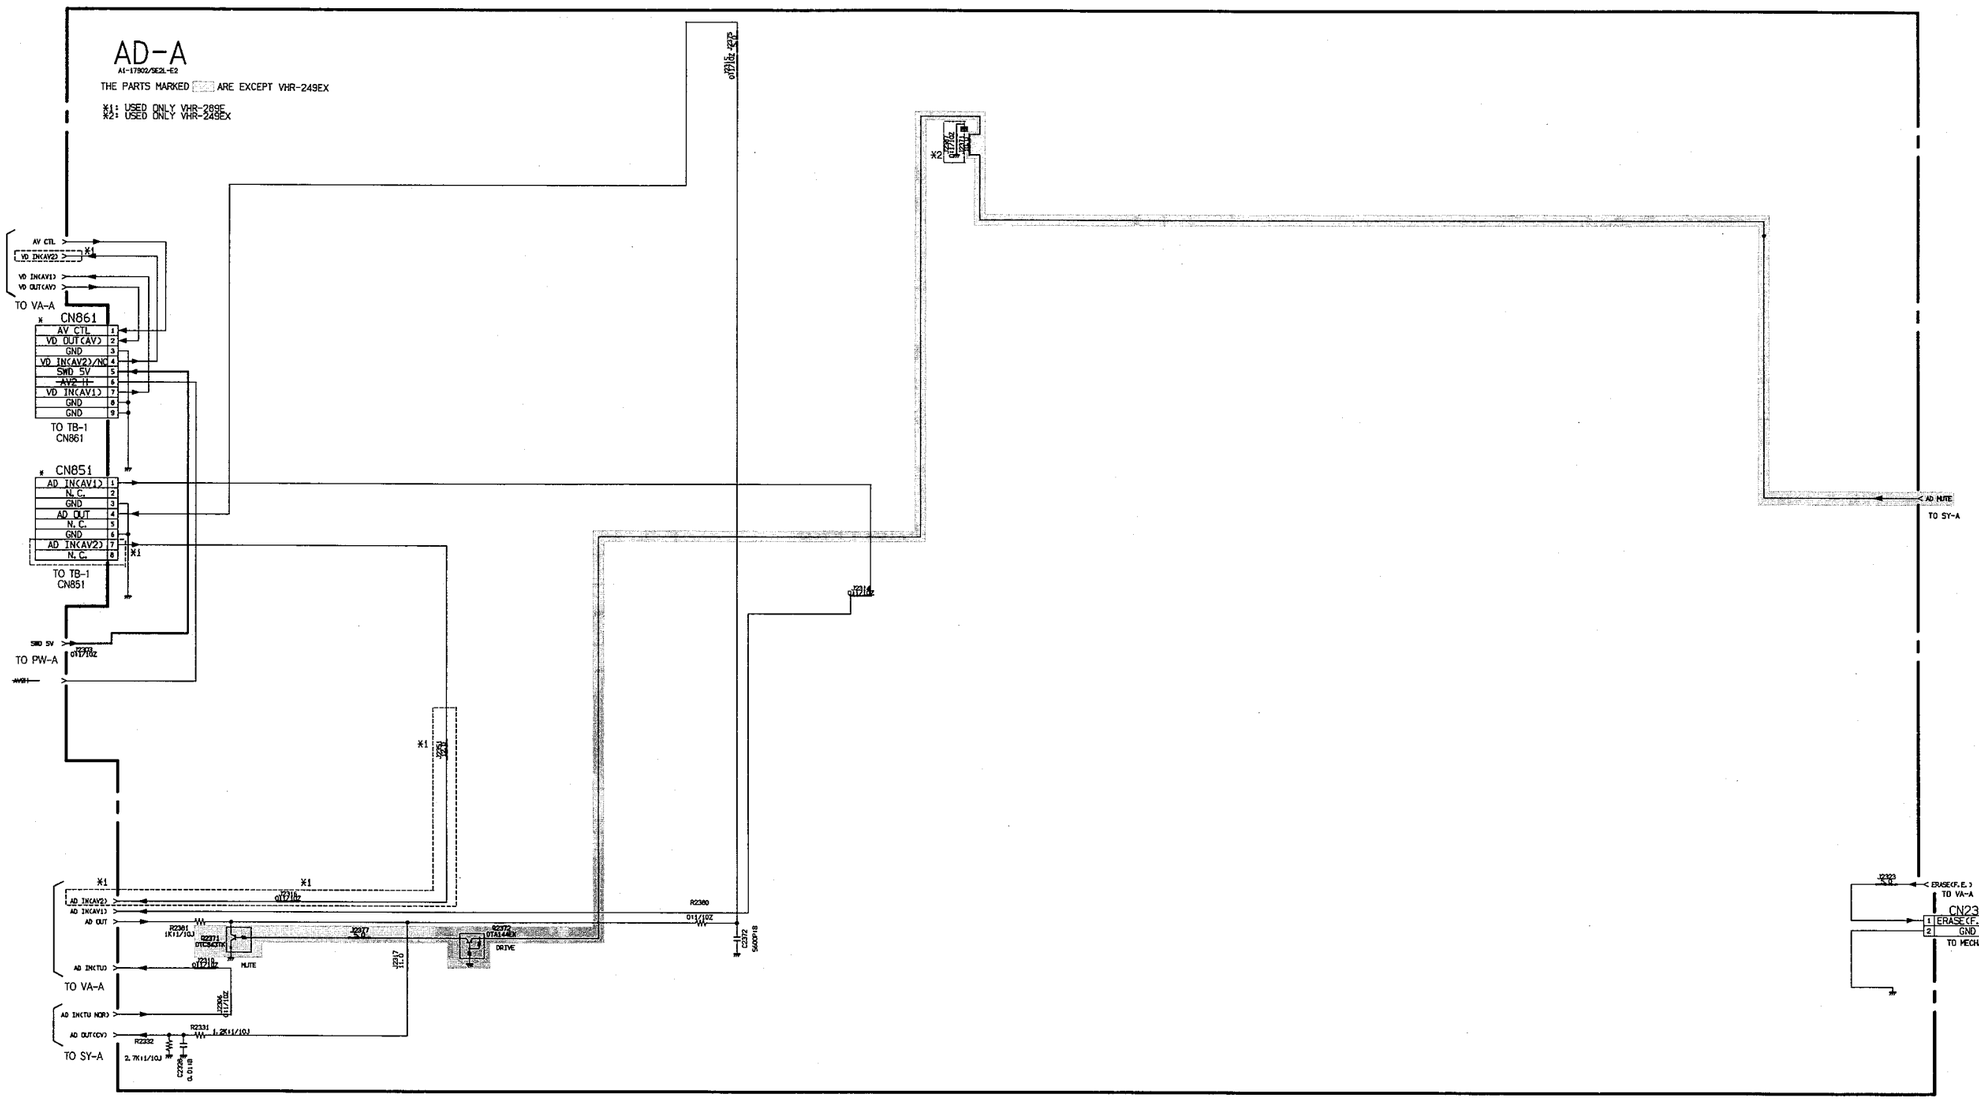

XCEPT VHR-269SP AND VHR-279SP)

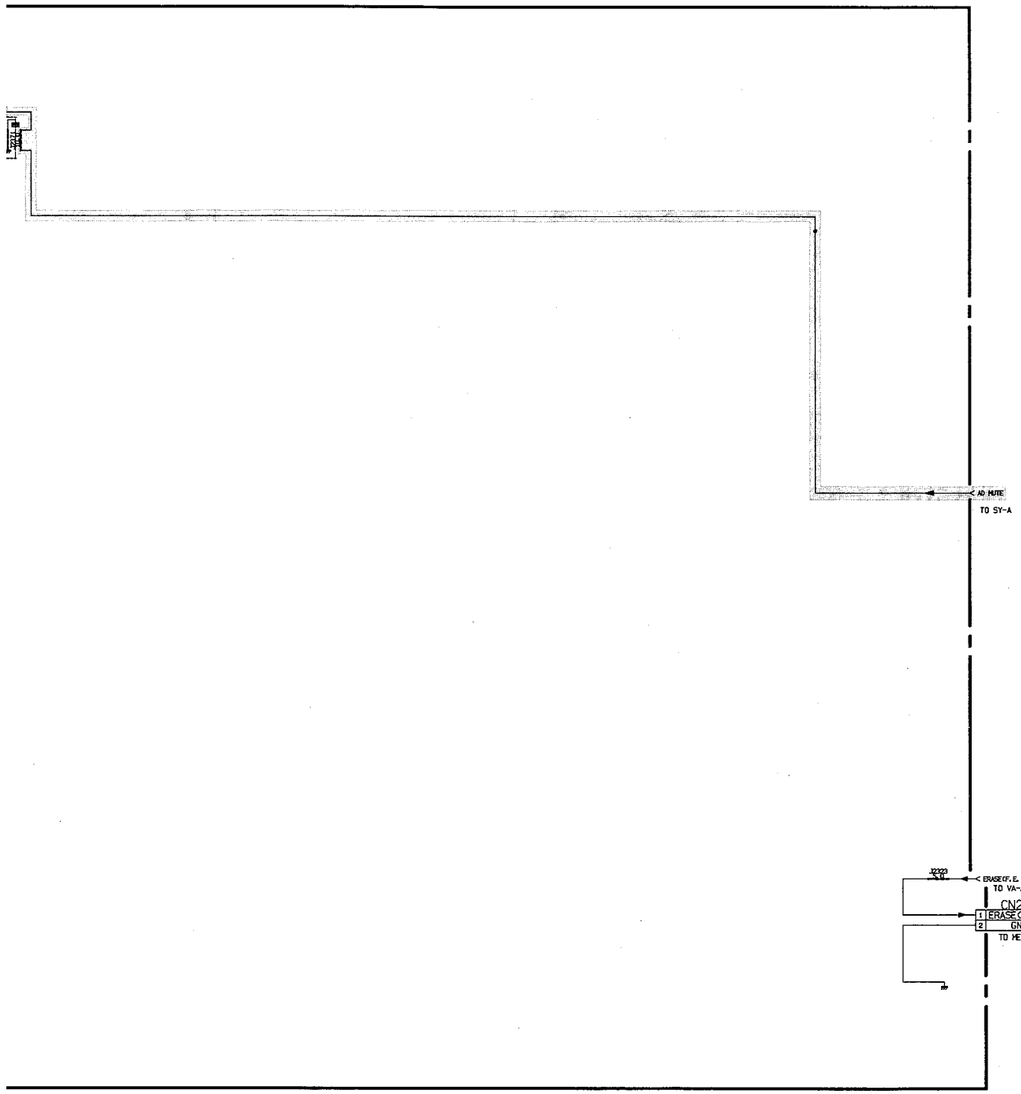

CP-1 BOARD (AD-A) AUDIO (VHR-269SP AND VHR-279SP)

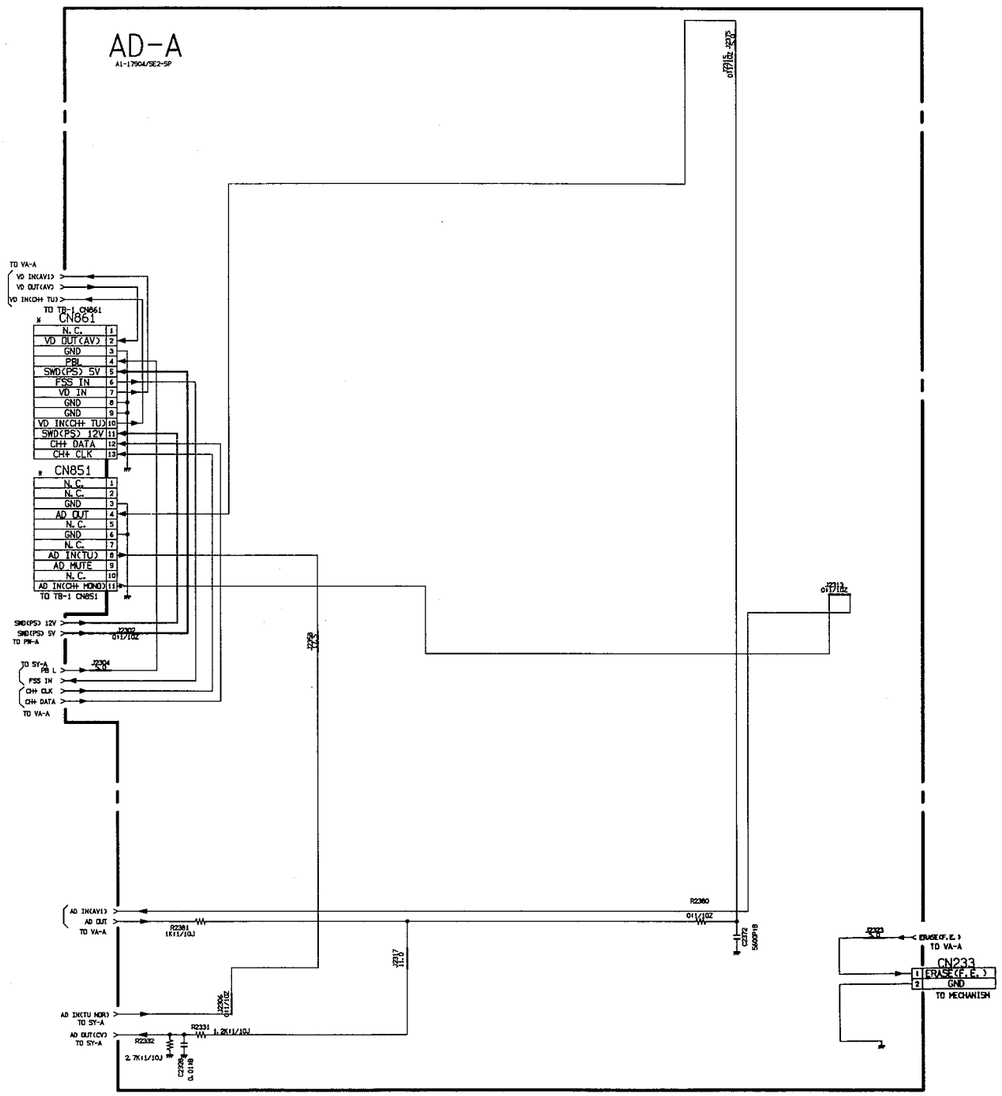

CP-1 BOARD (TM-A) DISPLAY (FLD) & KEY SCAN

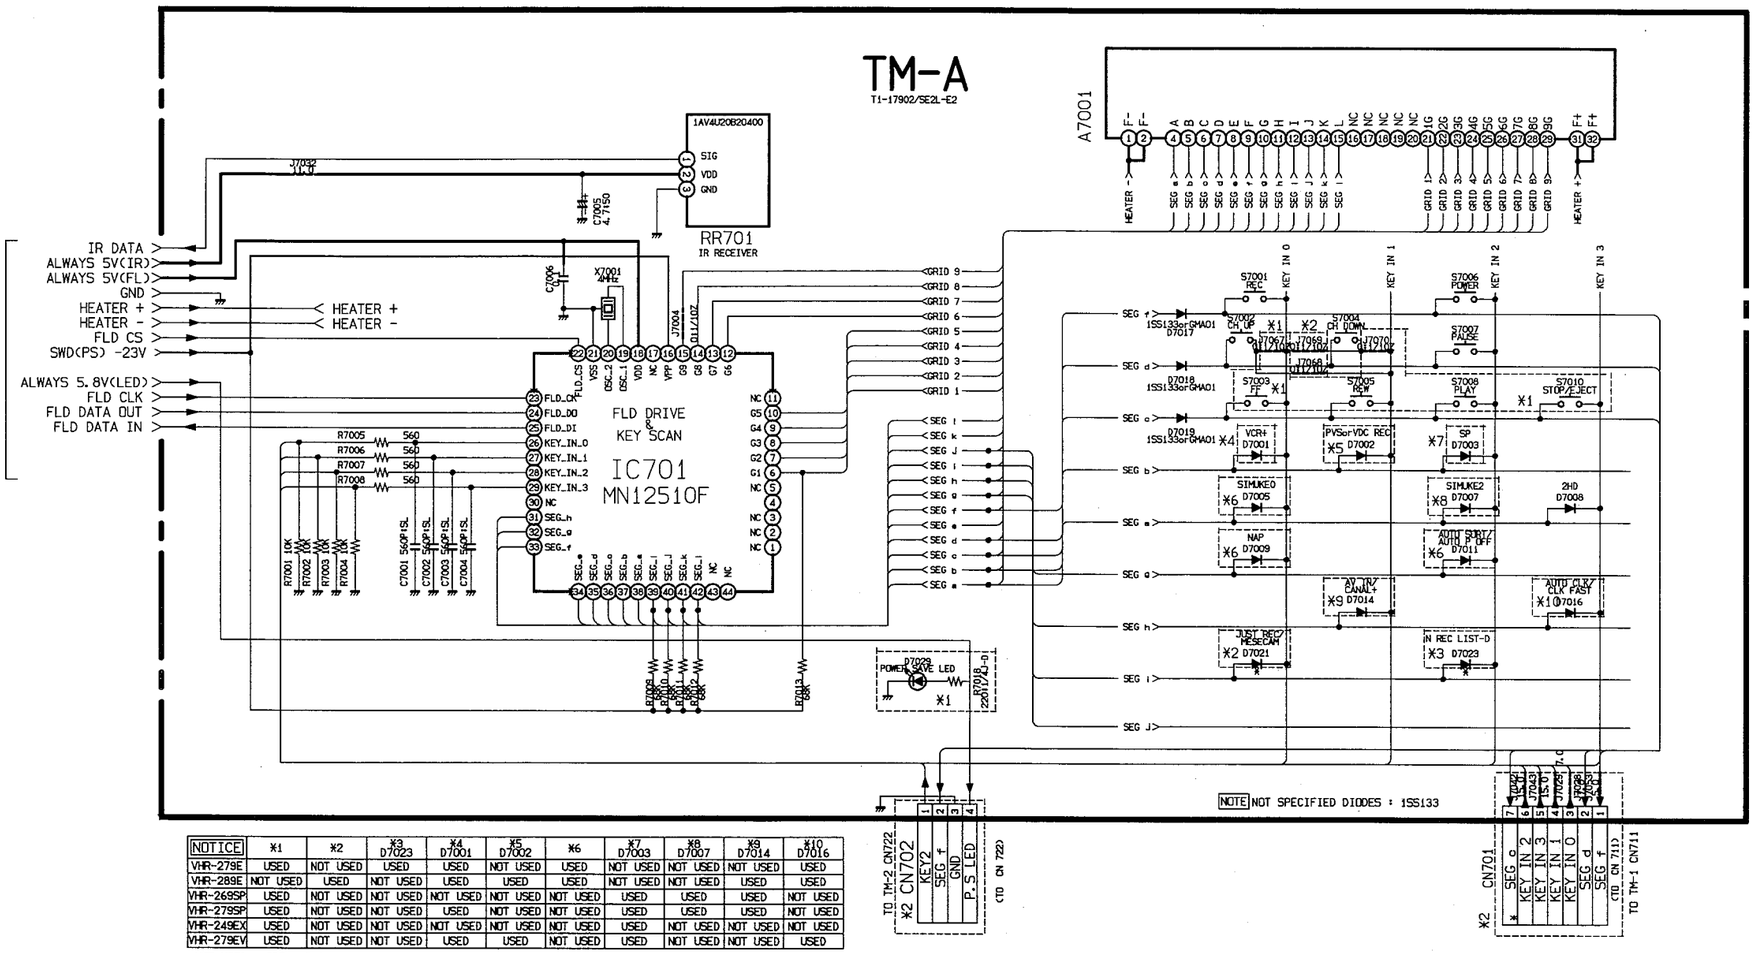

NOTICE	✻1	✻2	✻3 D7023	✻4 D7001	✻5 D7002	✻6	✻7 D7003	✻8 D7007	✻9 D7014	✻10 D7016
VHR-279E	USED	NOT USED	USED	USED	NOT USED	USED	NOT USED	NOT USED	NOT USED	USED
VHR-289E	NOT USED	USED	NOT USED	USED	USED	USED	NOT USED	NOT USED	USED	USED
VHR-269SP	USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	USED	USED	USED	NOT USED
VHR-279SP	USED	NOT USED	NOT USED	USED	NOT USED	NOT USED	USED	USED	USED	NOT USED
VHR-249EX	USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	USED	NOT USED	NOT USED	NOT USED
VHR-279EV	USED	NOT USED	NOT USED	USED	USED	NOT USED	USED	NOT USED	NOT USED	USED

NOT USED = OPEN CIRCUIT

A7001 DISPLAY (FLD) GRID/ANODE / DRAWING & TABLE

ANODE CONNECTION

GRID / SEGMENT	9G	8G	7G	6G	5G	4G	3G	2G
a	ST	PR	L	◁	▷	REC	▮▮	AUTO
b	n	—	n	n	—	—	n	—
c	a	a	a	a	a	a	a	a
d	b	b	b	b	b	b	b	b
e	c	c	c	c	c	c	c	c
f	d	d	d	d	d	d	d	d
g	e	e	e	e	e	e	e	e
h	f	f	f	f	f	f	f	f
i	g	g	g	g	g	g	g	g
j	m	m	m	m	m	m	m	m
k	BIL	—	VPS	—	col 2	—	—	col 1
l	VCR	📼	R	M	PDC	⏎	DATE	LP

GR-

TM-2 BOARD SWITCH (VHR-289E ONLY)

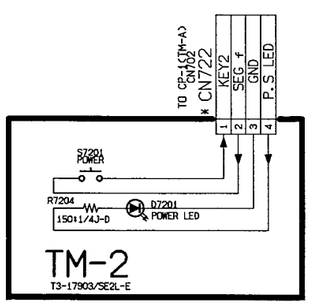

TM-1 BOARD SWITCH (VHR-289E ONLY)

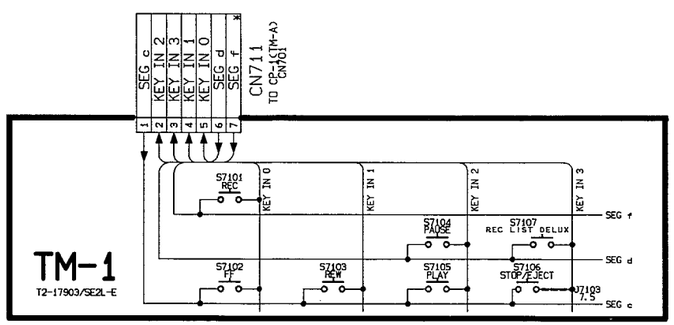

GRID & SEGMENT ASSIGNMENT

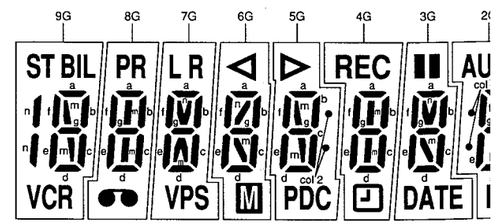

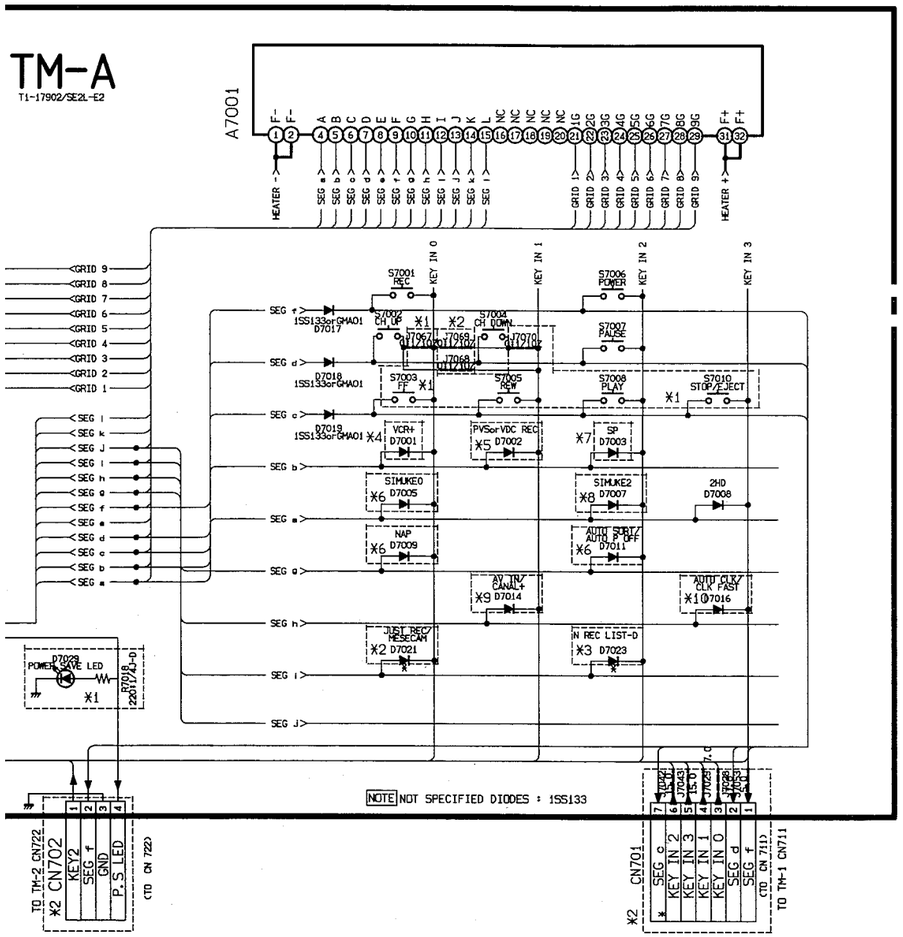

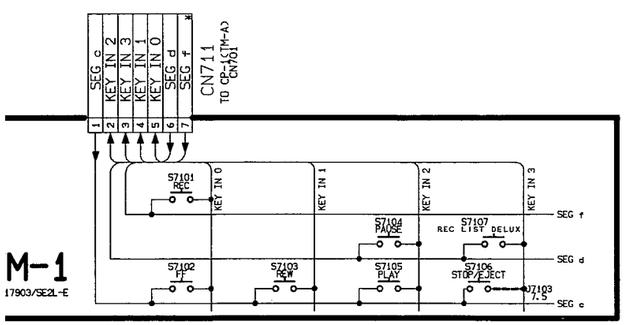

A7001 DISPLAY (FLD) GRID/ANODE ASSIGNMENT DRAWING & TABLE

ANODE CONNECTION

GRID / SEGMENT	9G	8G	7G	6G	5G	4G	3G	2G	1G
a	ST	PR	L	◁	▷	REC	▮▮	AUTO	EP
b	n	—	n	n	—	—	n	—	n
c	a	a	a	a	a	a	a	a	a
d	b	b	b	b	b	b	b	b	b
e	c	c	c	c	c	c	c	c	c
f	d	d	d	d	d	d	d	d	d
g	e	e	e	e	e	e	e	e	e
h	f	f	f	f	f	f	f	f	f
i	g	g	g	g	g	g	g	g	g
j	m	m	m	m	m	m	m	m	m
k	BIL	—	VPS	—	col 2	—	—	col 1	—
l	VCR	📼	R	Ⓜ	PDC	⏎	DATE	LP	OK

GR-00600A

GRID & SEGMENT ASSIGNMENT

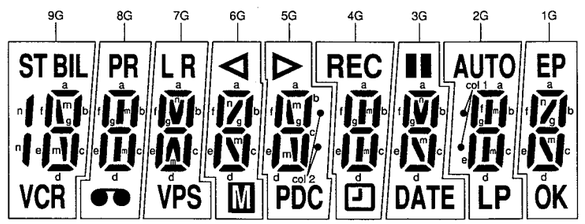

TM-1 P.W.B. (VHR-289E ONLY)

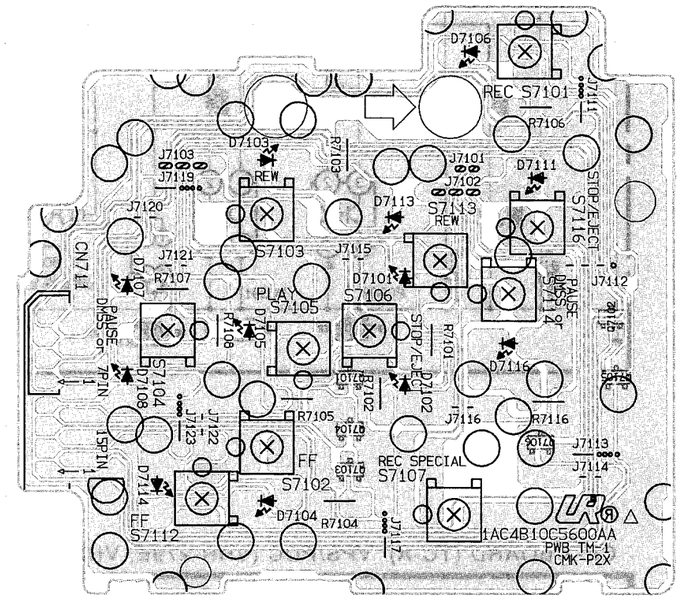

TM-2 P.W.B. (VHR-289E ONLY)

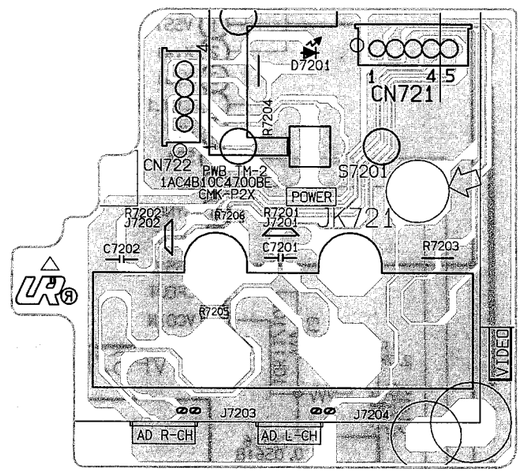

CP-1 BOARD (MC-A) MECHANISM SENSOR

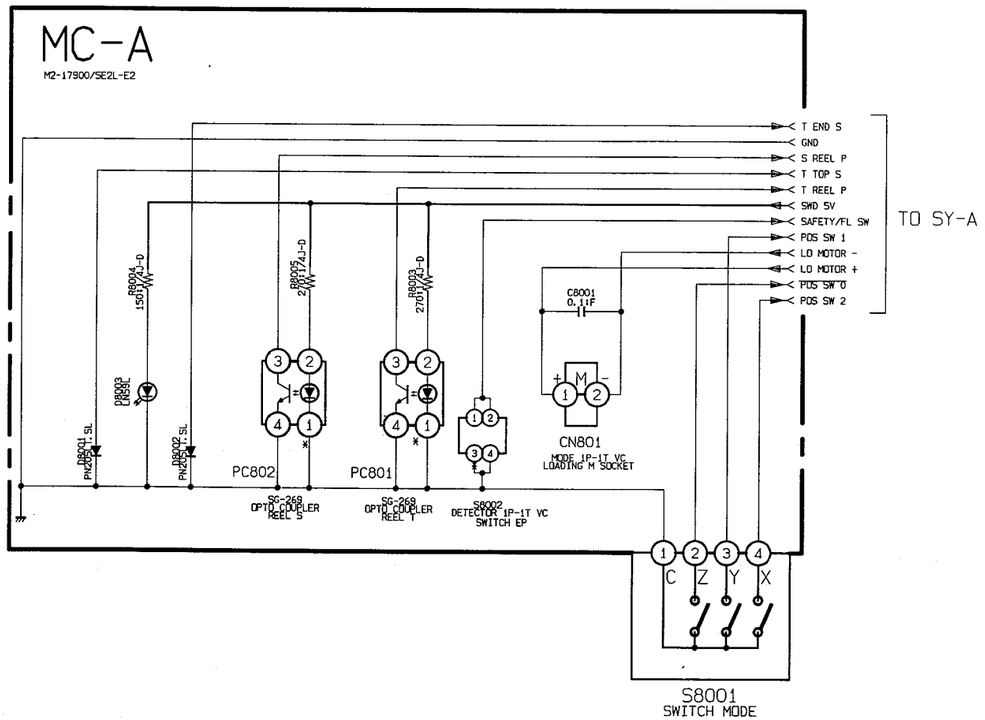

CP-1 BOARD (TC-A) VPS/PDC (VHR-279E, VHR-289E AND VHR-279EV)

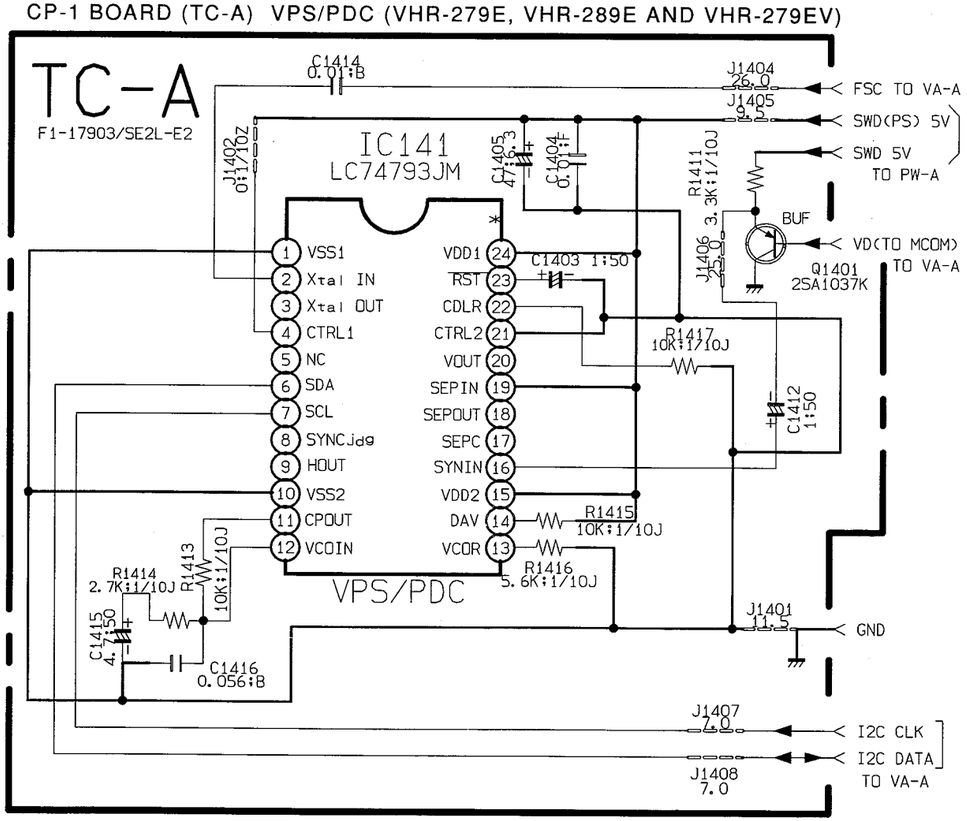

TB-1 P.W.B.

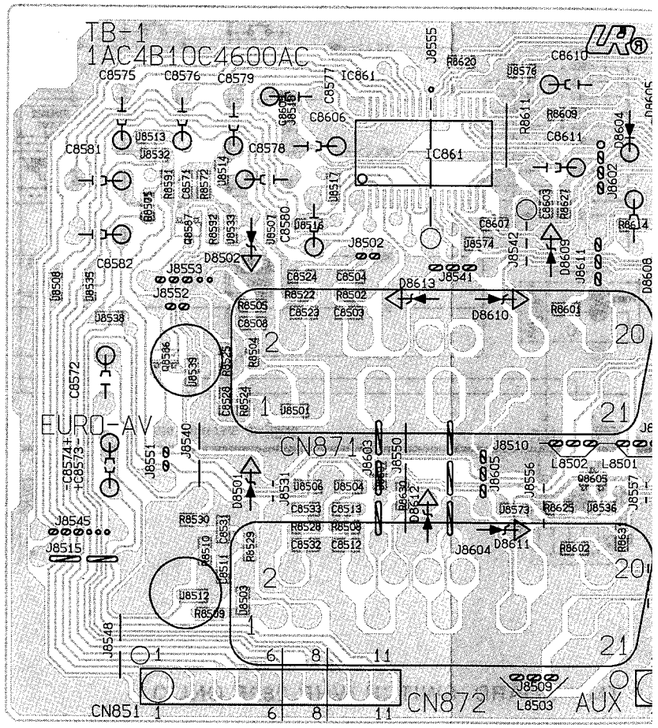

TO SY-A

C TO VA-A
D(PS) 5V
D 5V
TO PW-A

(TO MCOM)
TO VA-A

ID

2C CLK
2C DATA
O VA-A

TB-1 P.W.B.

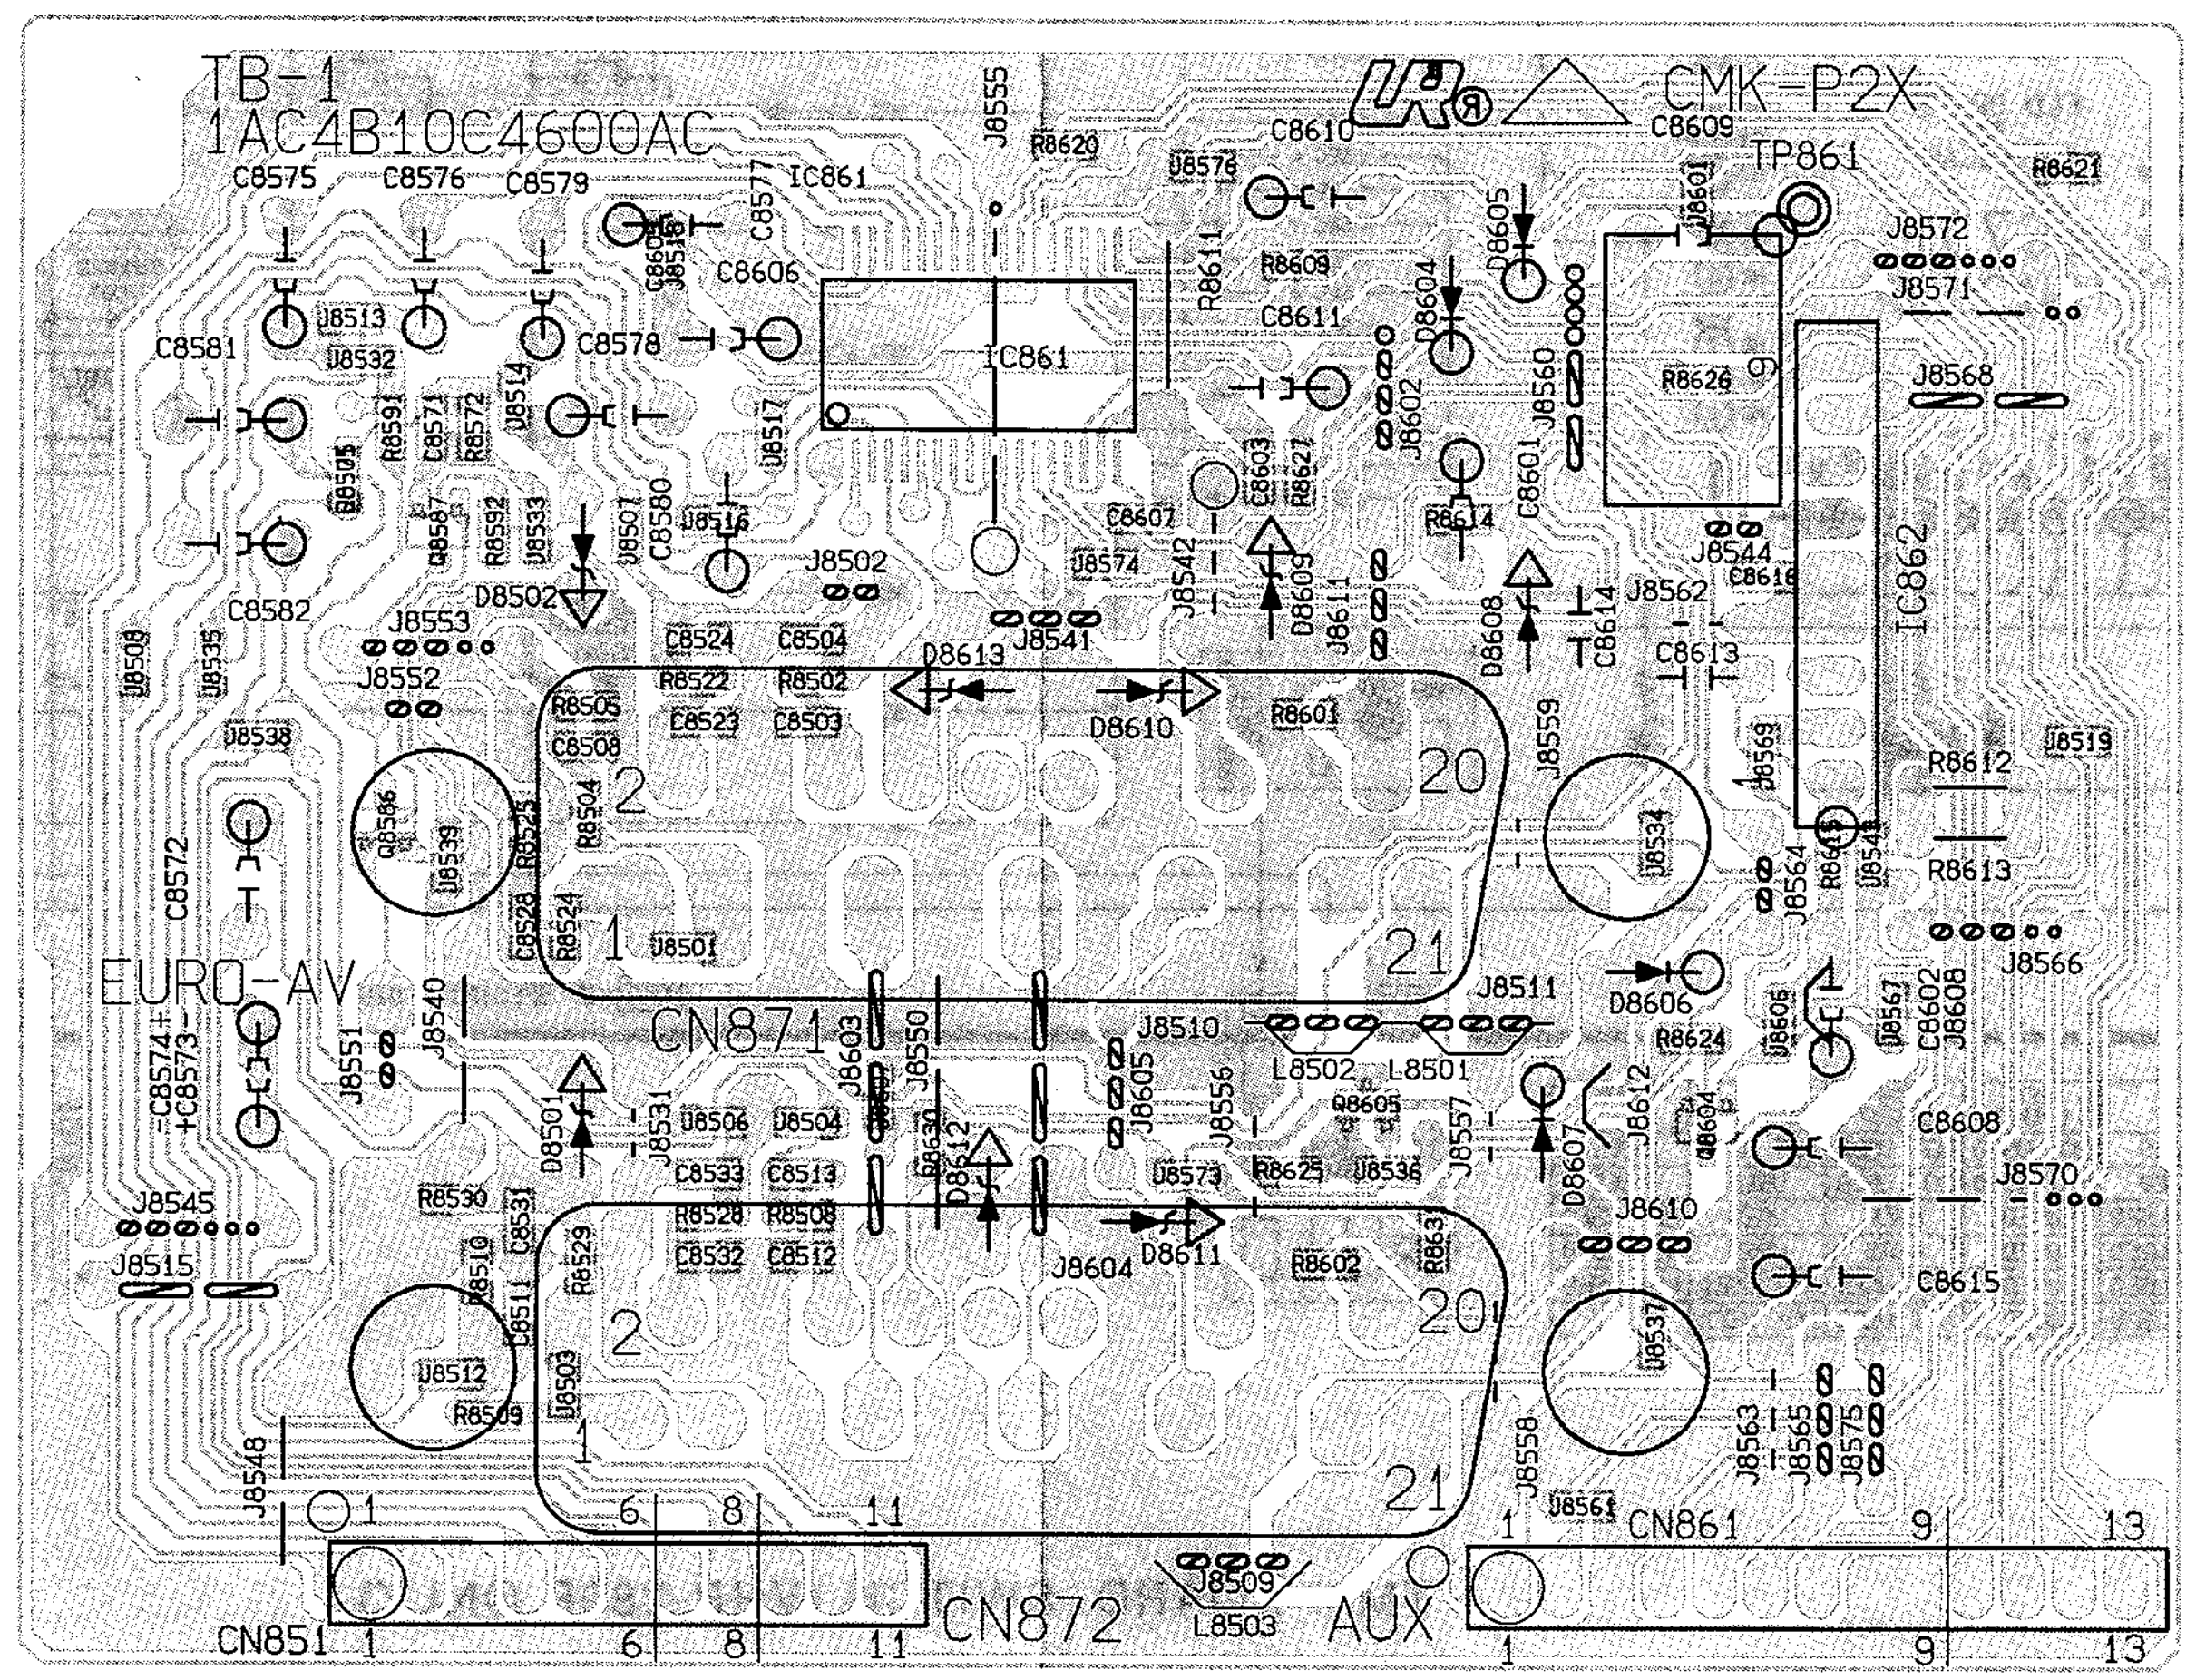

TB-1
1AC4B10C4600AC
CMK-P2X
TP861
IC861
IC862
EURO-AV
CN871
CN872
AUX
CN851
CN861
C8575 C8576 C8579 C8577 C8606 C8578 C8581 C8582 C8572 C8610 C8609 C8611 C8601 C8614 C8613 C8608 C8615
R8620 R8621 R8611 R8609 R8626 R8612 R8613 R8624 R8601 R8602
D8502 D8613 D8610 D8605 D8604 D8609 D8608 D8606 D8501 D8612 D8611 D8607
J8555 J8572 J8571 J8568 J8502 J8541 J8542 J8544 J8562 J8553 J8552 J8559 J8564 J8566 J8540 J8551 J8510 J8511 J8545 J8515 J8604 J8610 J8570 J8548 J8558 J8509 J8563 J8565 J8575
L8501 L8502 L8503

8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

TB-1 BOARD TERMINAL (EXCEPT VHR-269SP AND VHR-279SP)

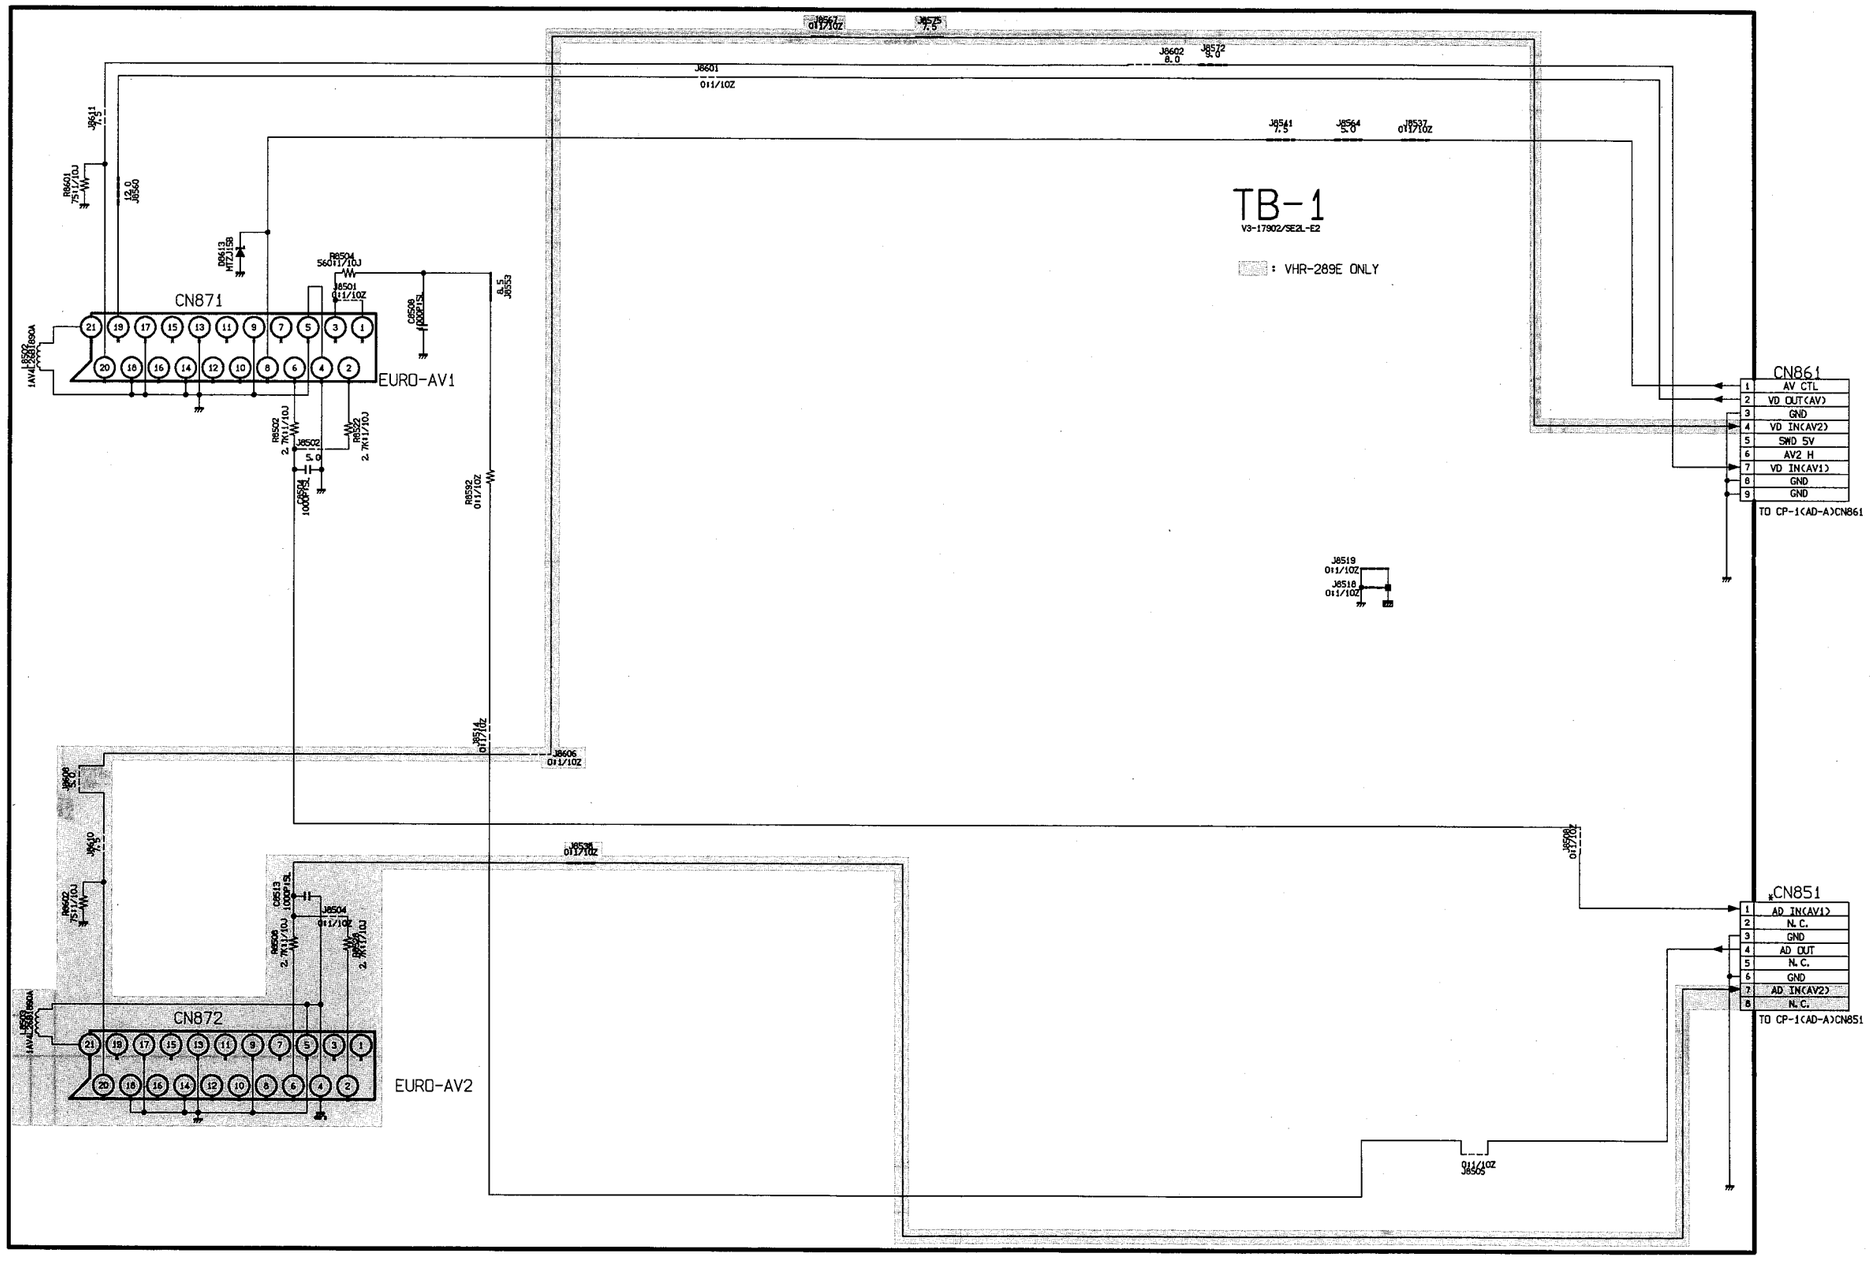
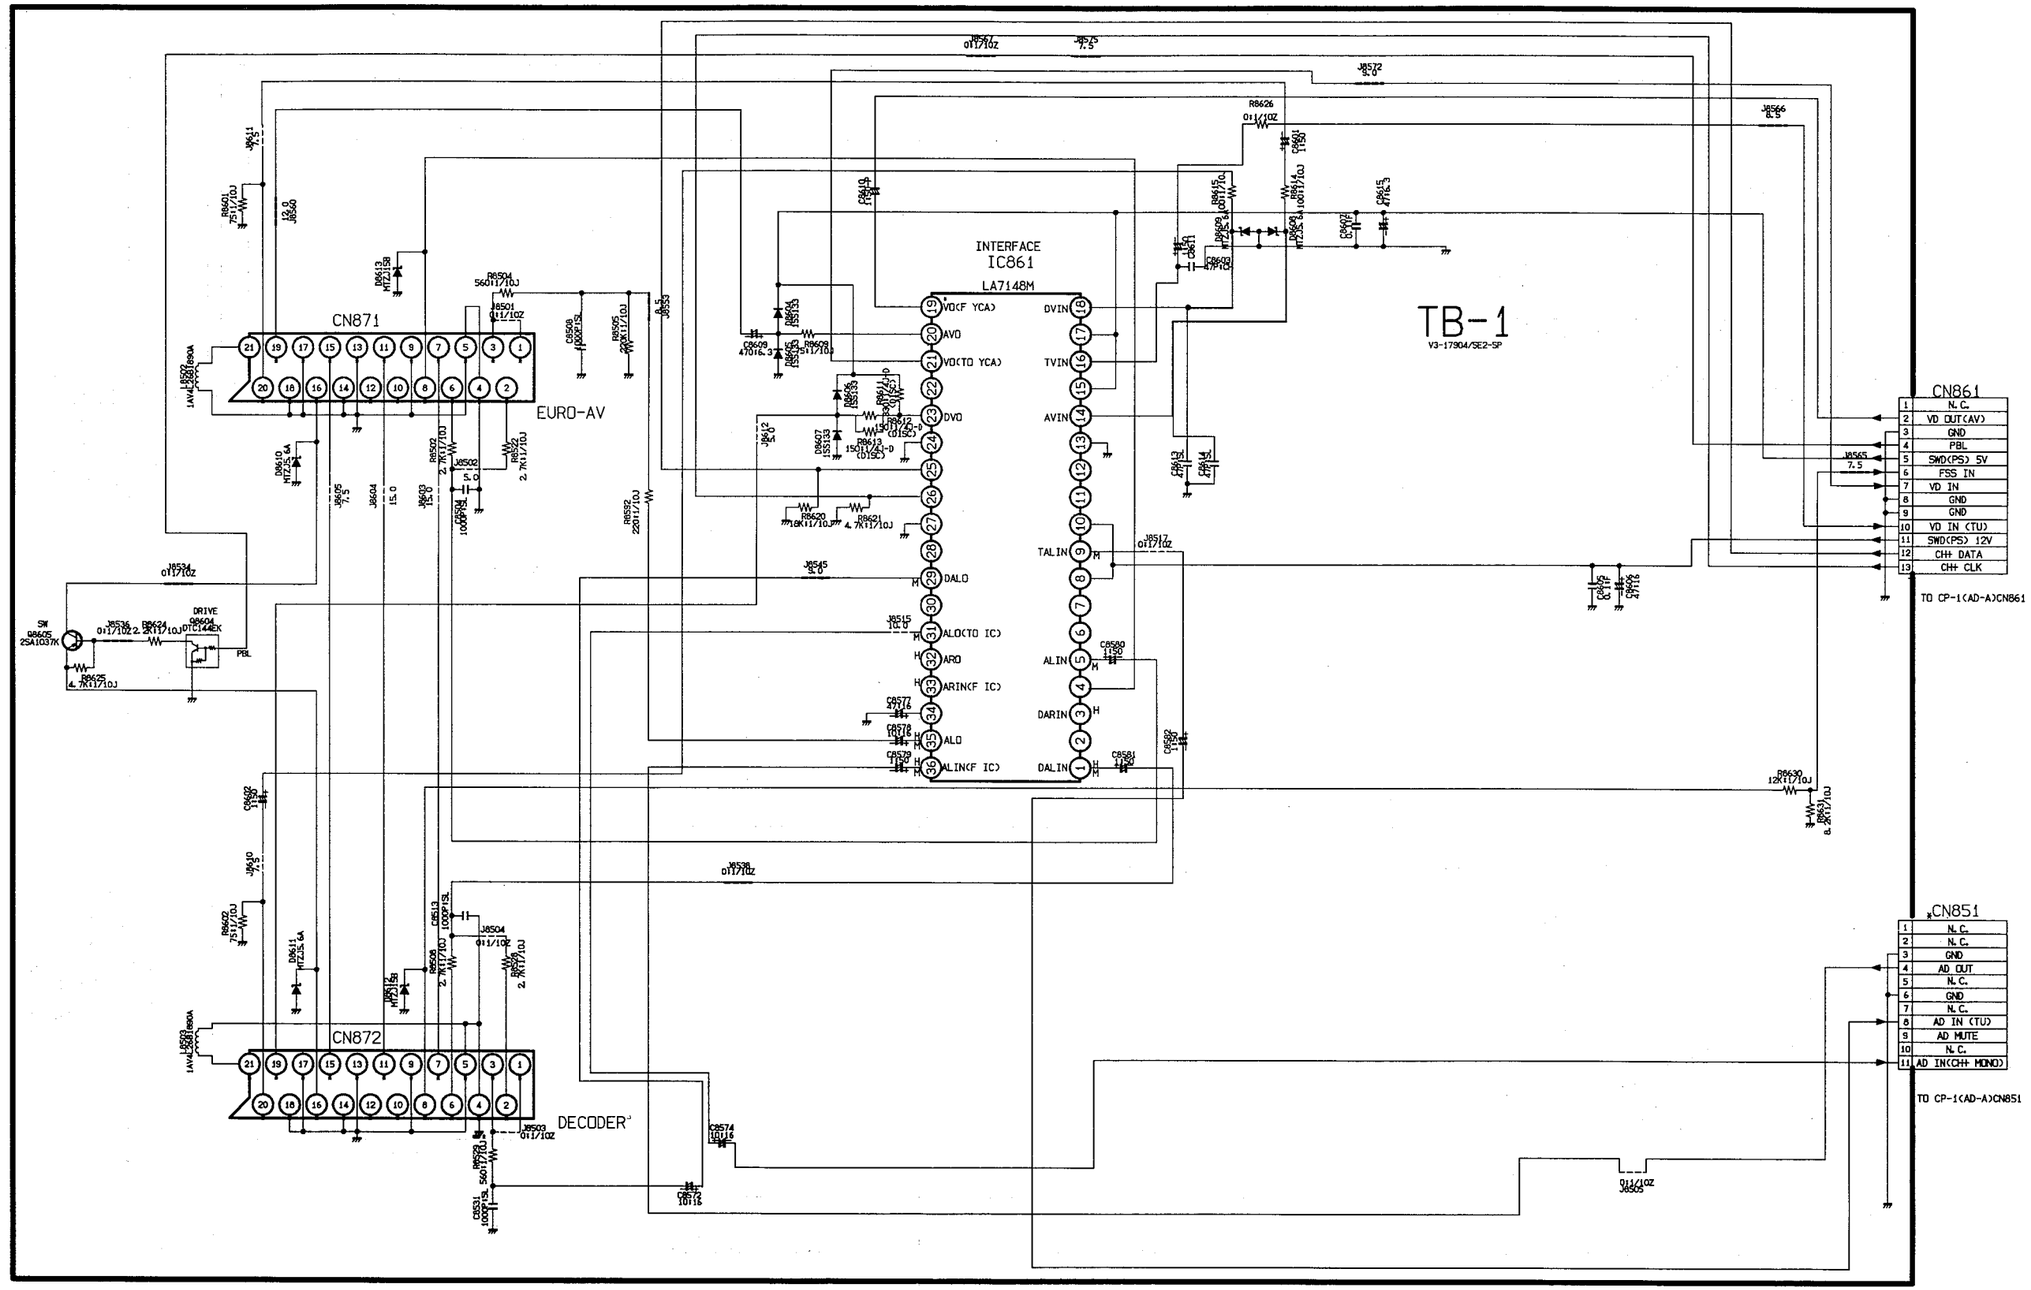
TB-1 BOARD TERMINAL AND DECODER INTERFACE (VHR-269SP AND VHR-279SP)